 


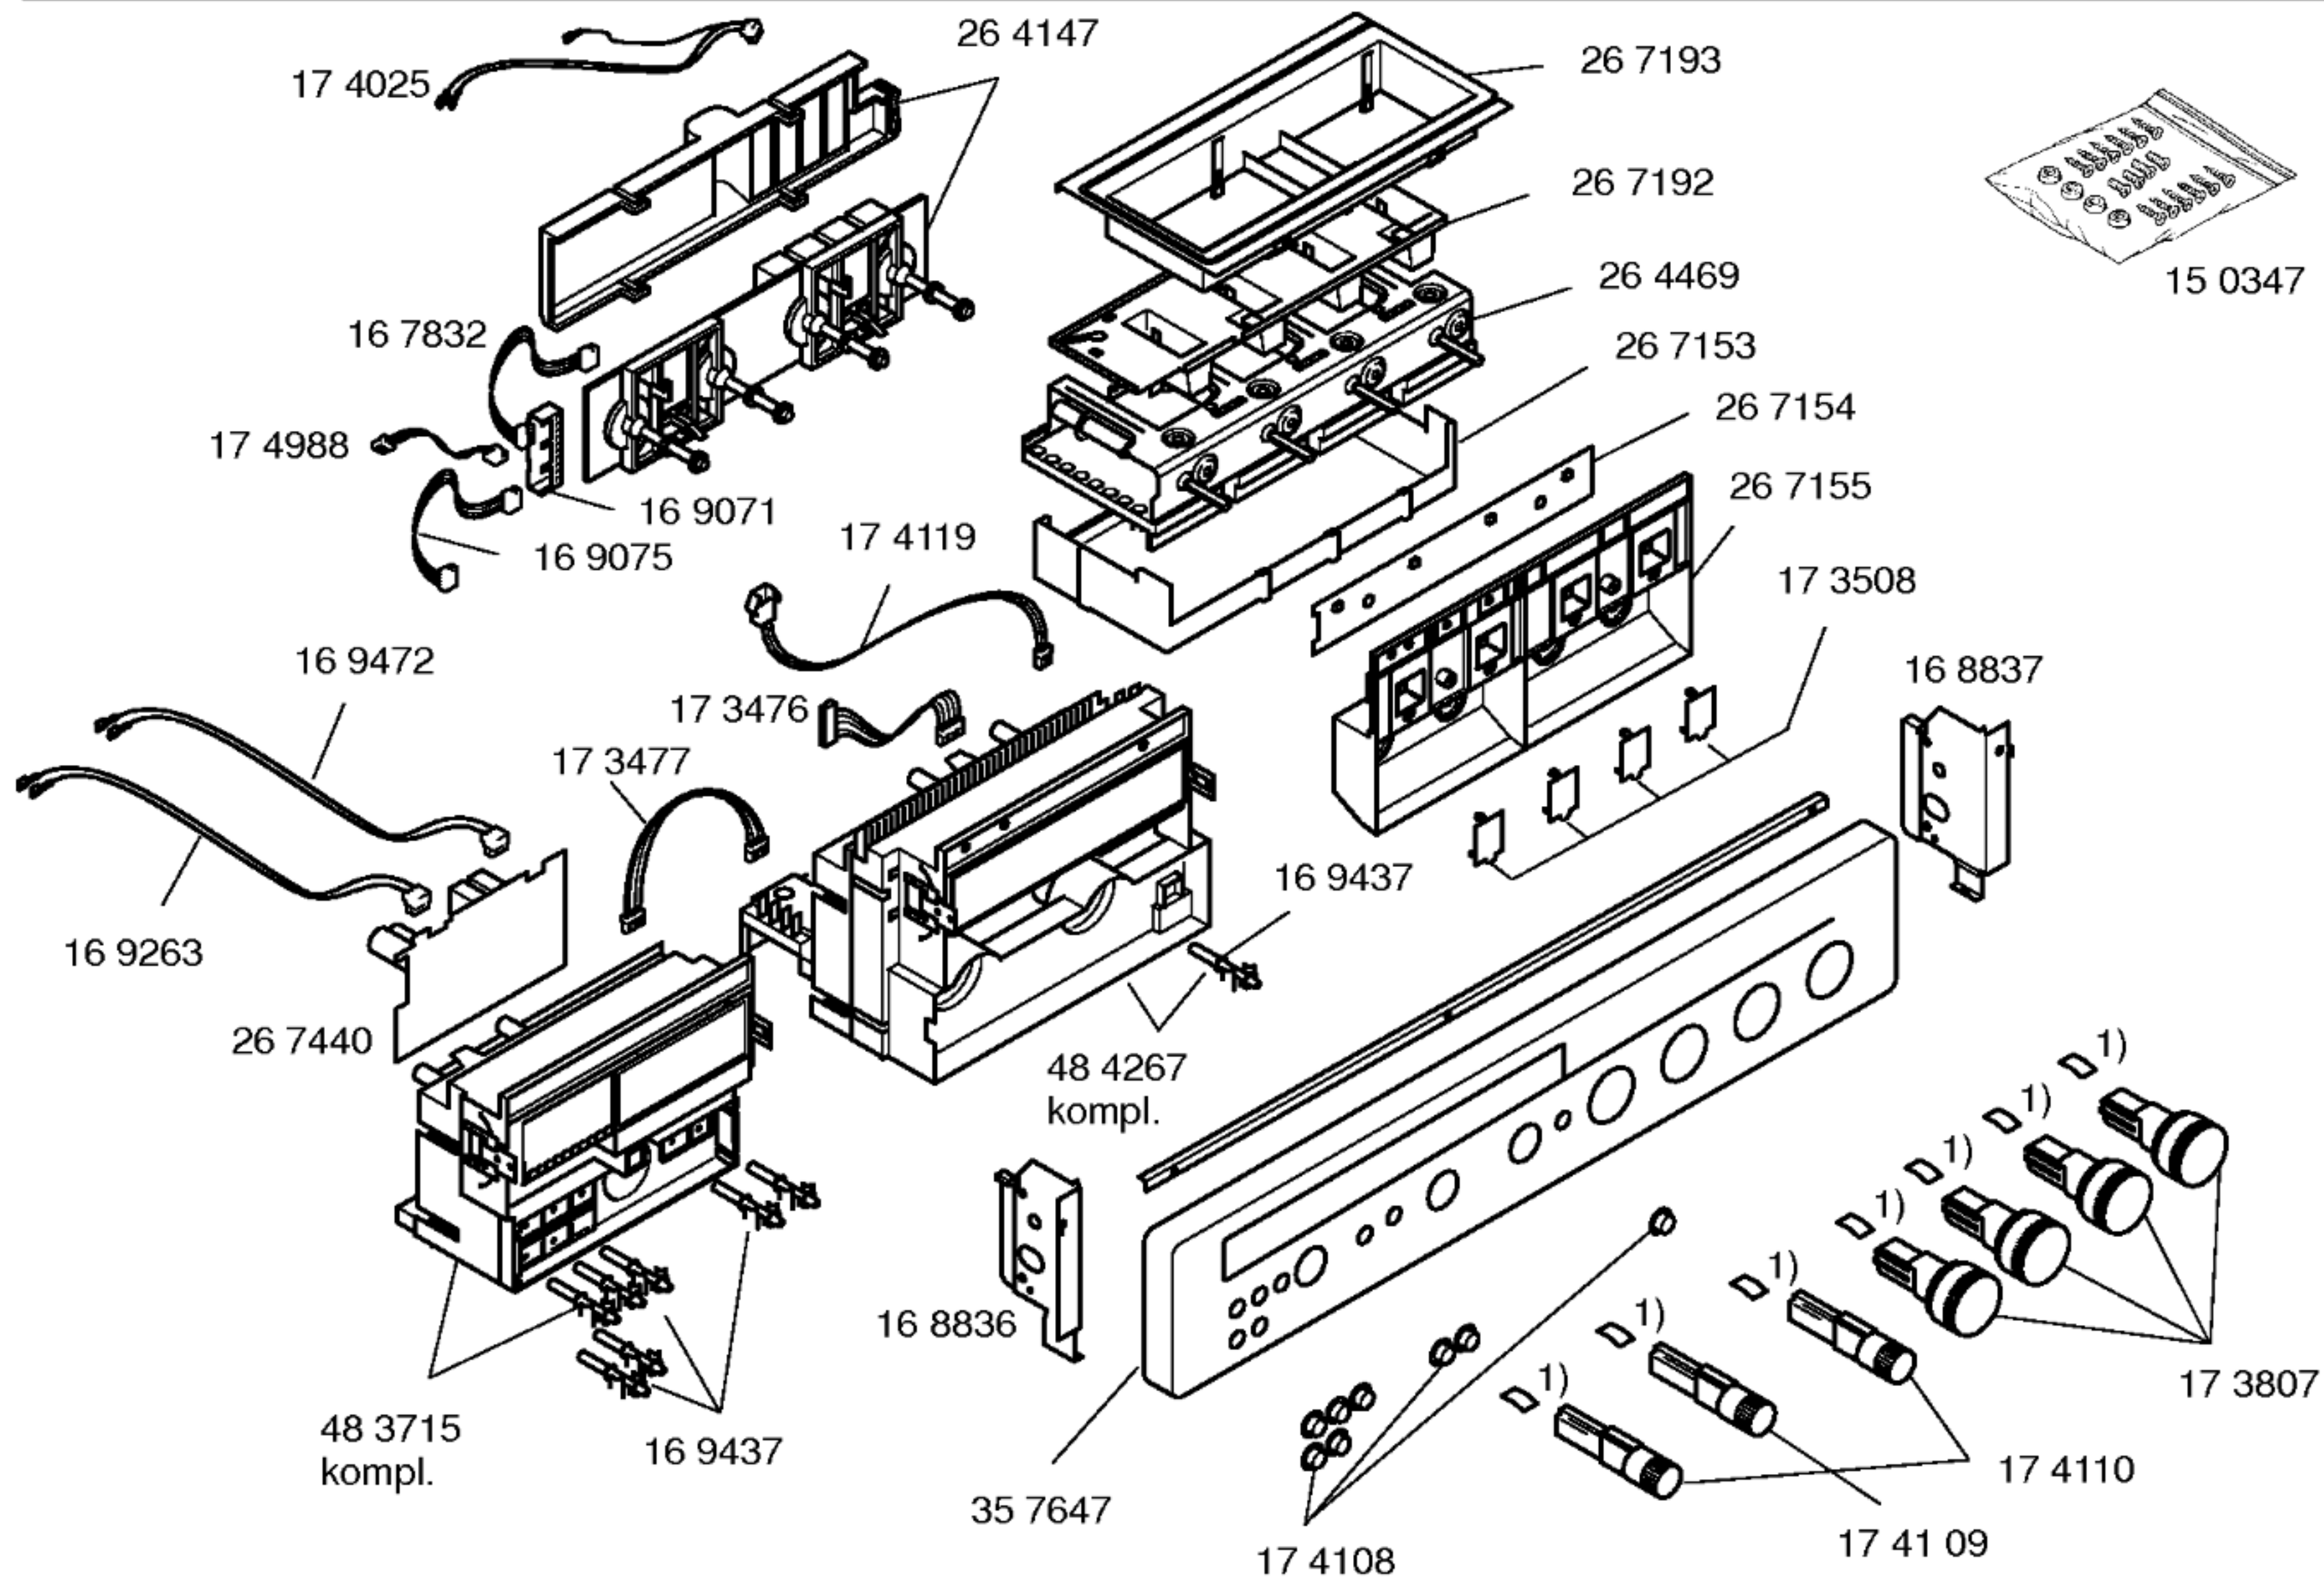

Gebrauchsanweisung

58 1767 (de)
58 1768 (nl)
58 1769 (el)
58 1770 (es)
58 1771 (pt)
58 1772 (ru)
58 1773 (pl)
58 1774 (cs)
58 1775 (hu)

Montageanweisung:

 
52 4061
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

 
Broschüre/Kochbuch

58 1778 (de)
58 1778 (de)
58 3524 (en)
58 3525 (fr)
58 3527 (nl)
58 3534 (es)
58 3535 (pt)
58 3536 (it)
58 3537 (el)
58 3538 (cs)
58 3539 (hu)
58 3540 (pl)
58 3541 (ru)
58 3543 (tr)
58 3458 (da)
58 3459 (sv)
58 3460 (no)
58 3461 (fi)

1) 01 4254



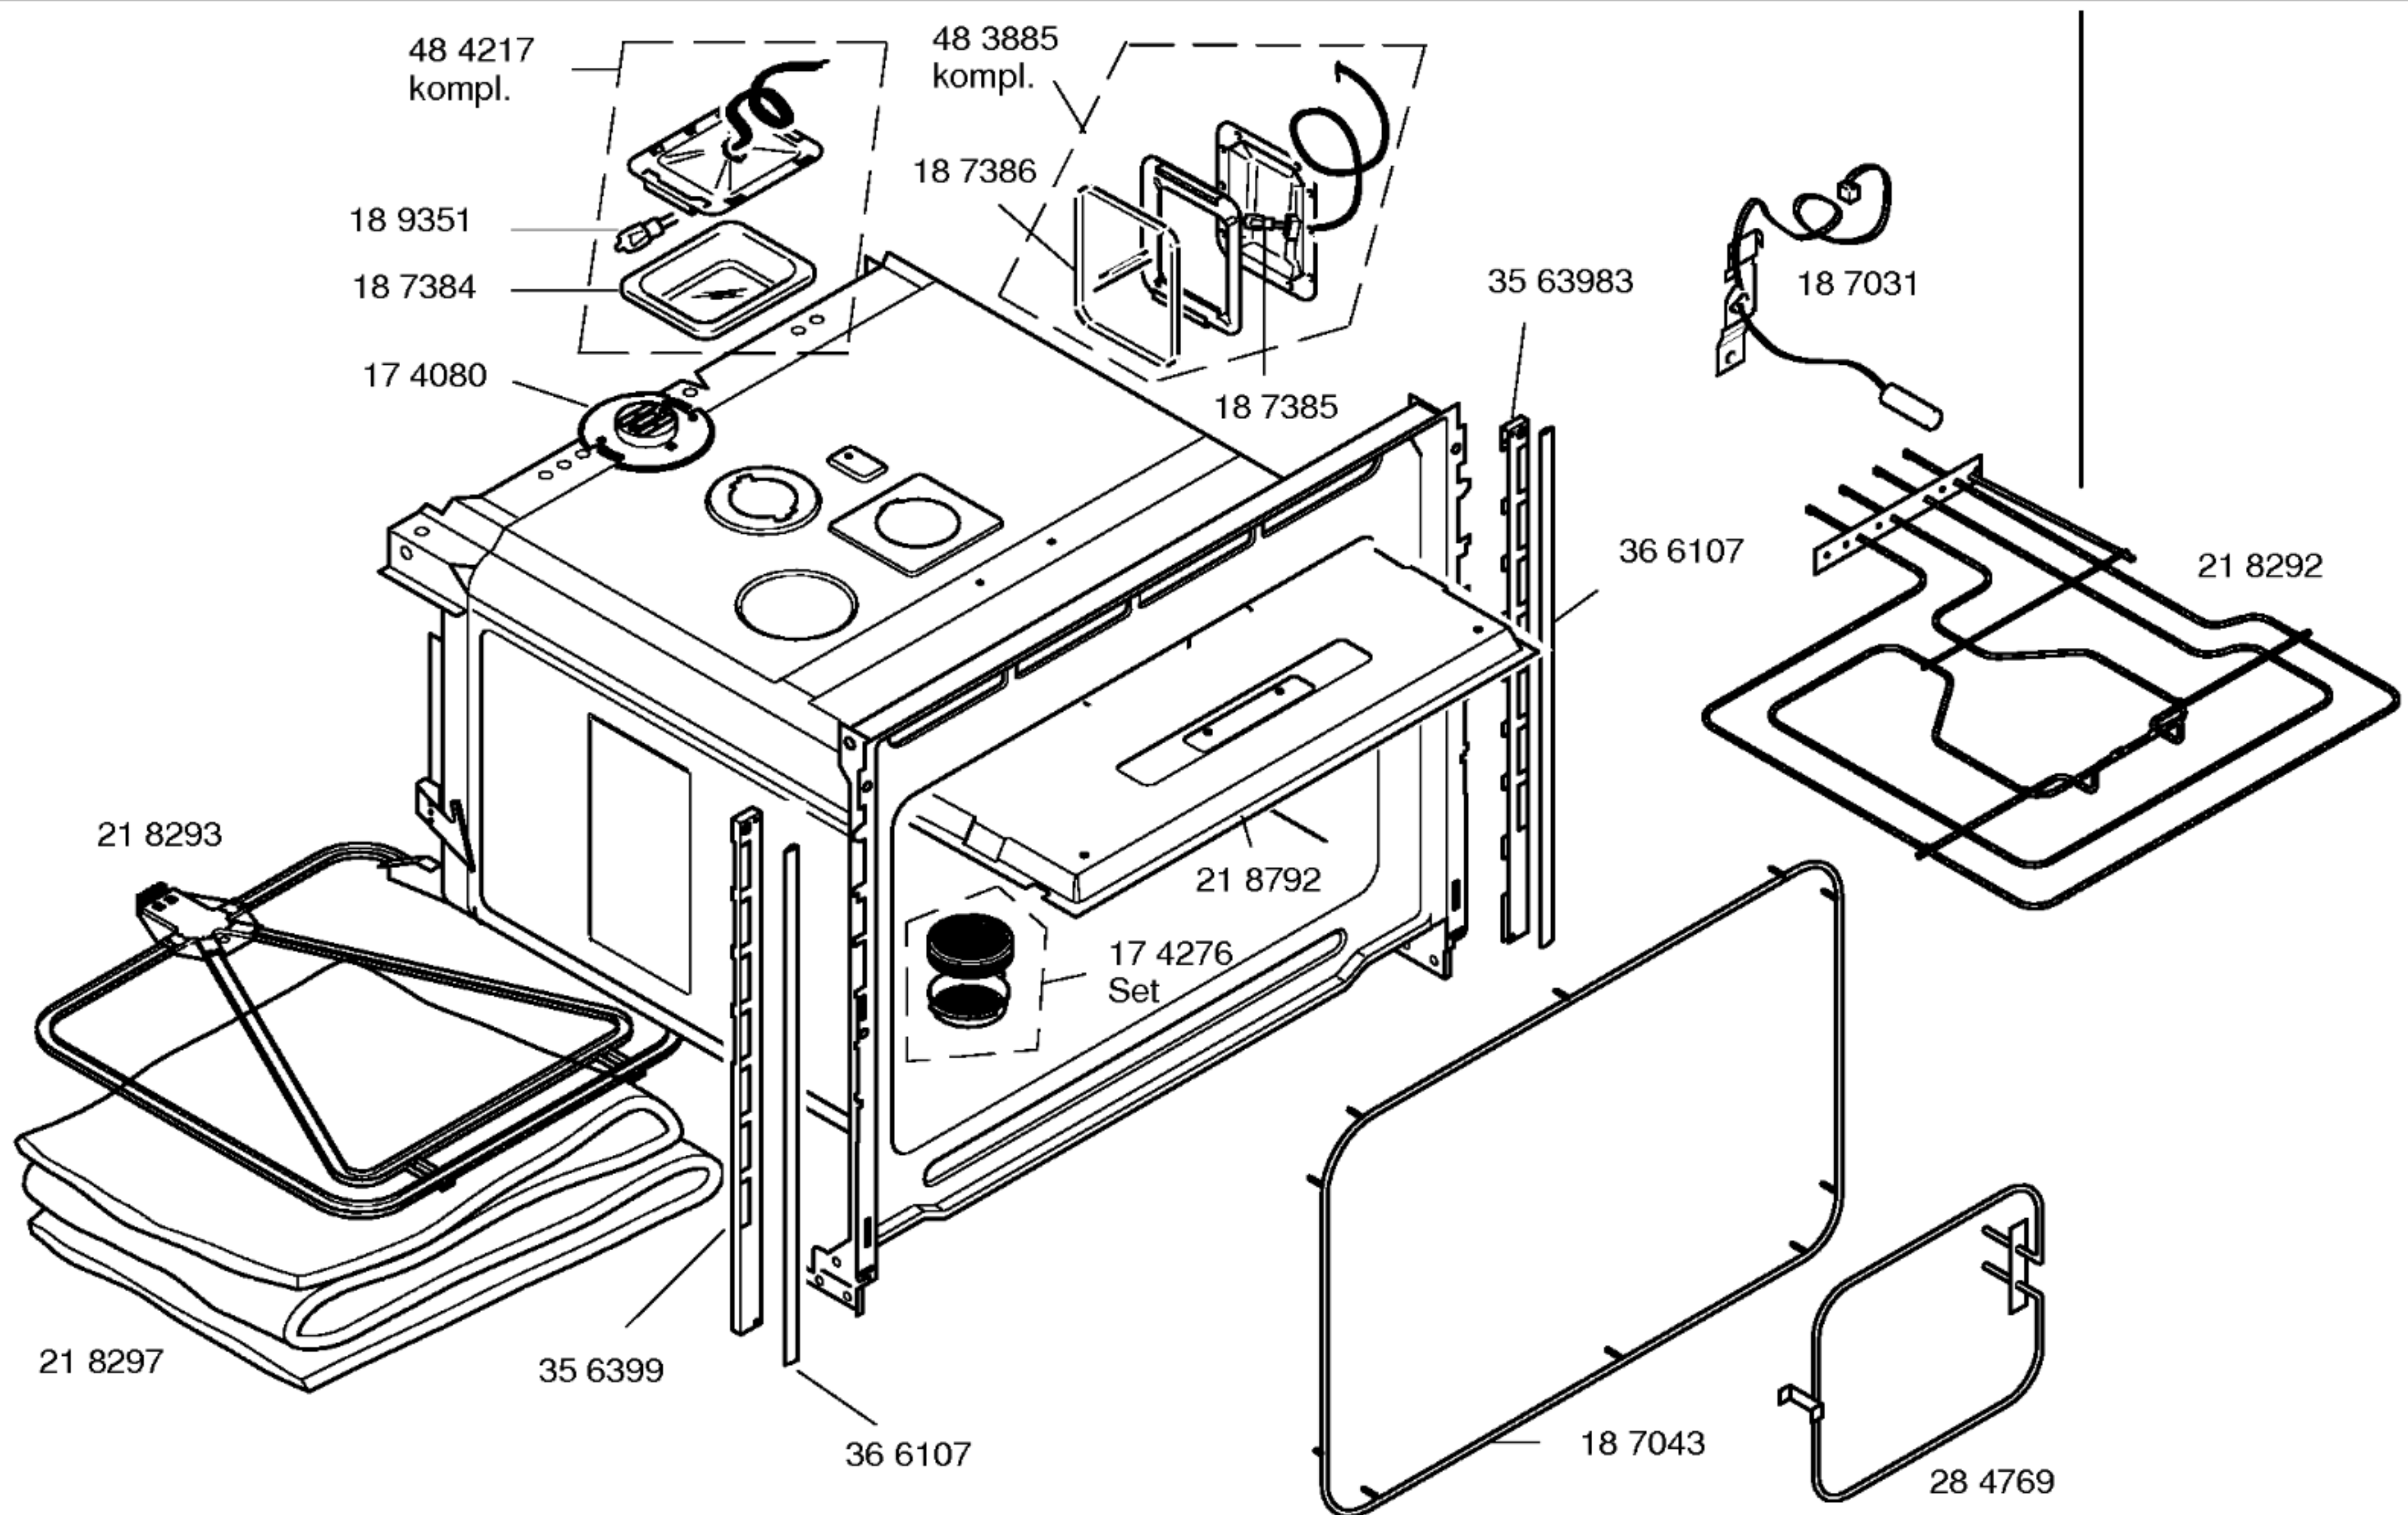

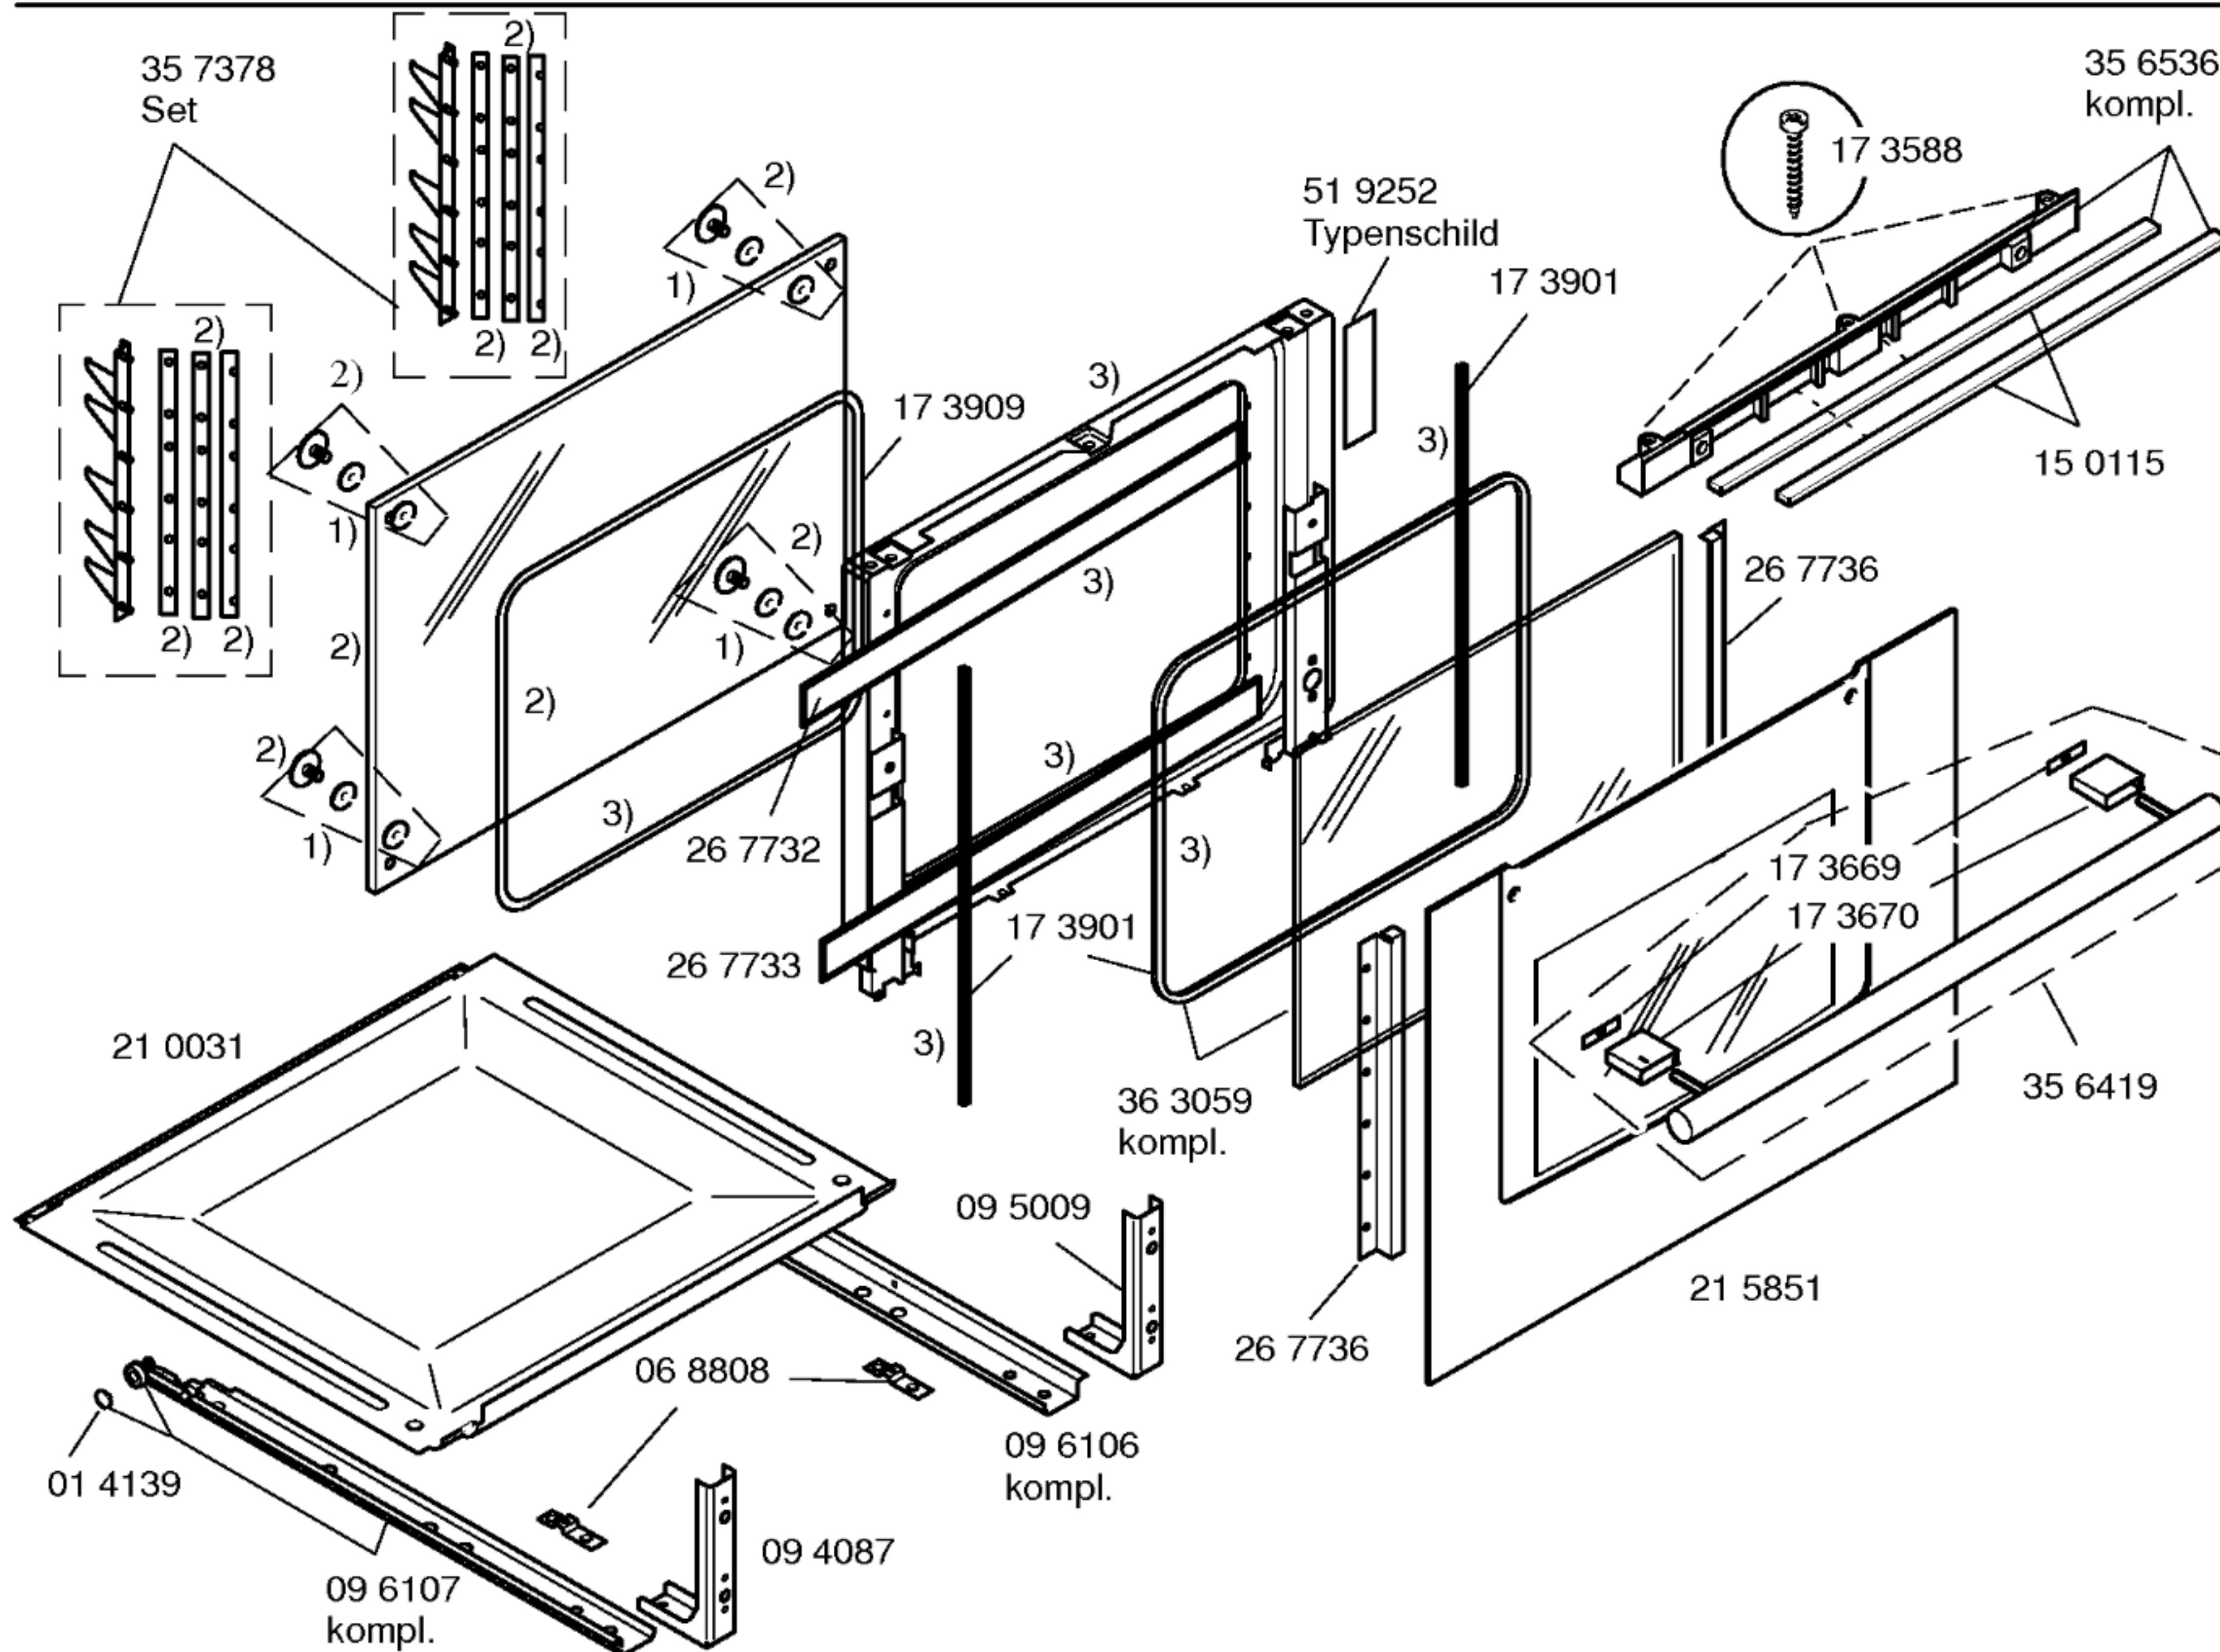

- 1) 17 4791 Set
- 2) 21 5852 Set
- 3) 21 5832 Set

