


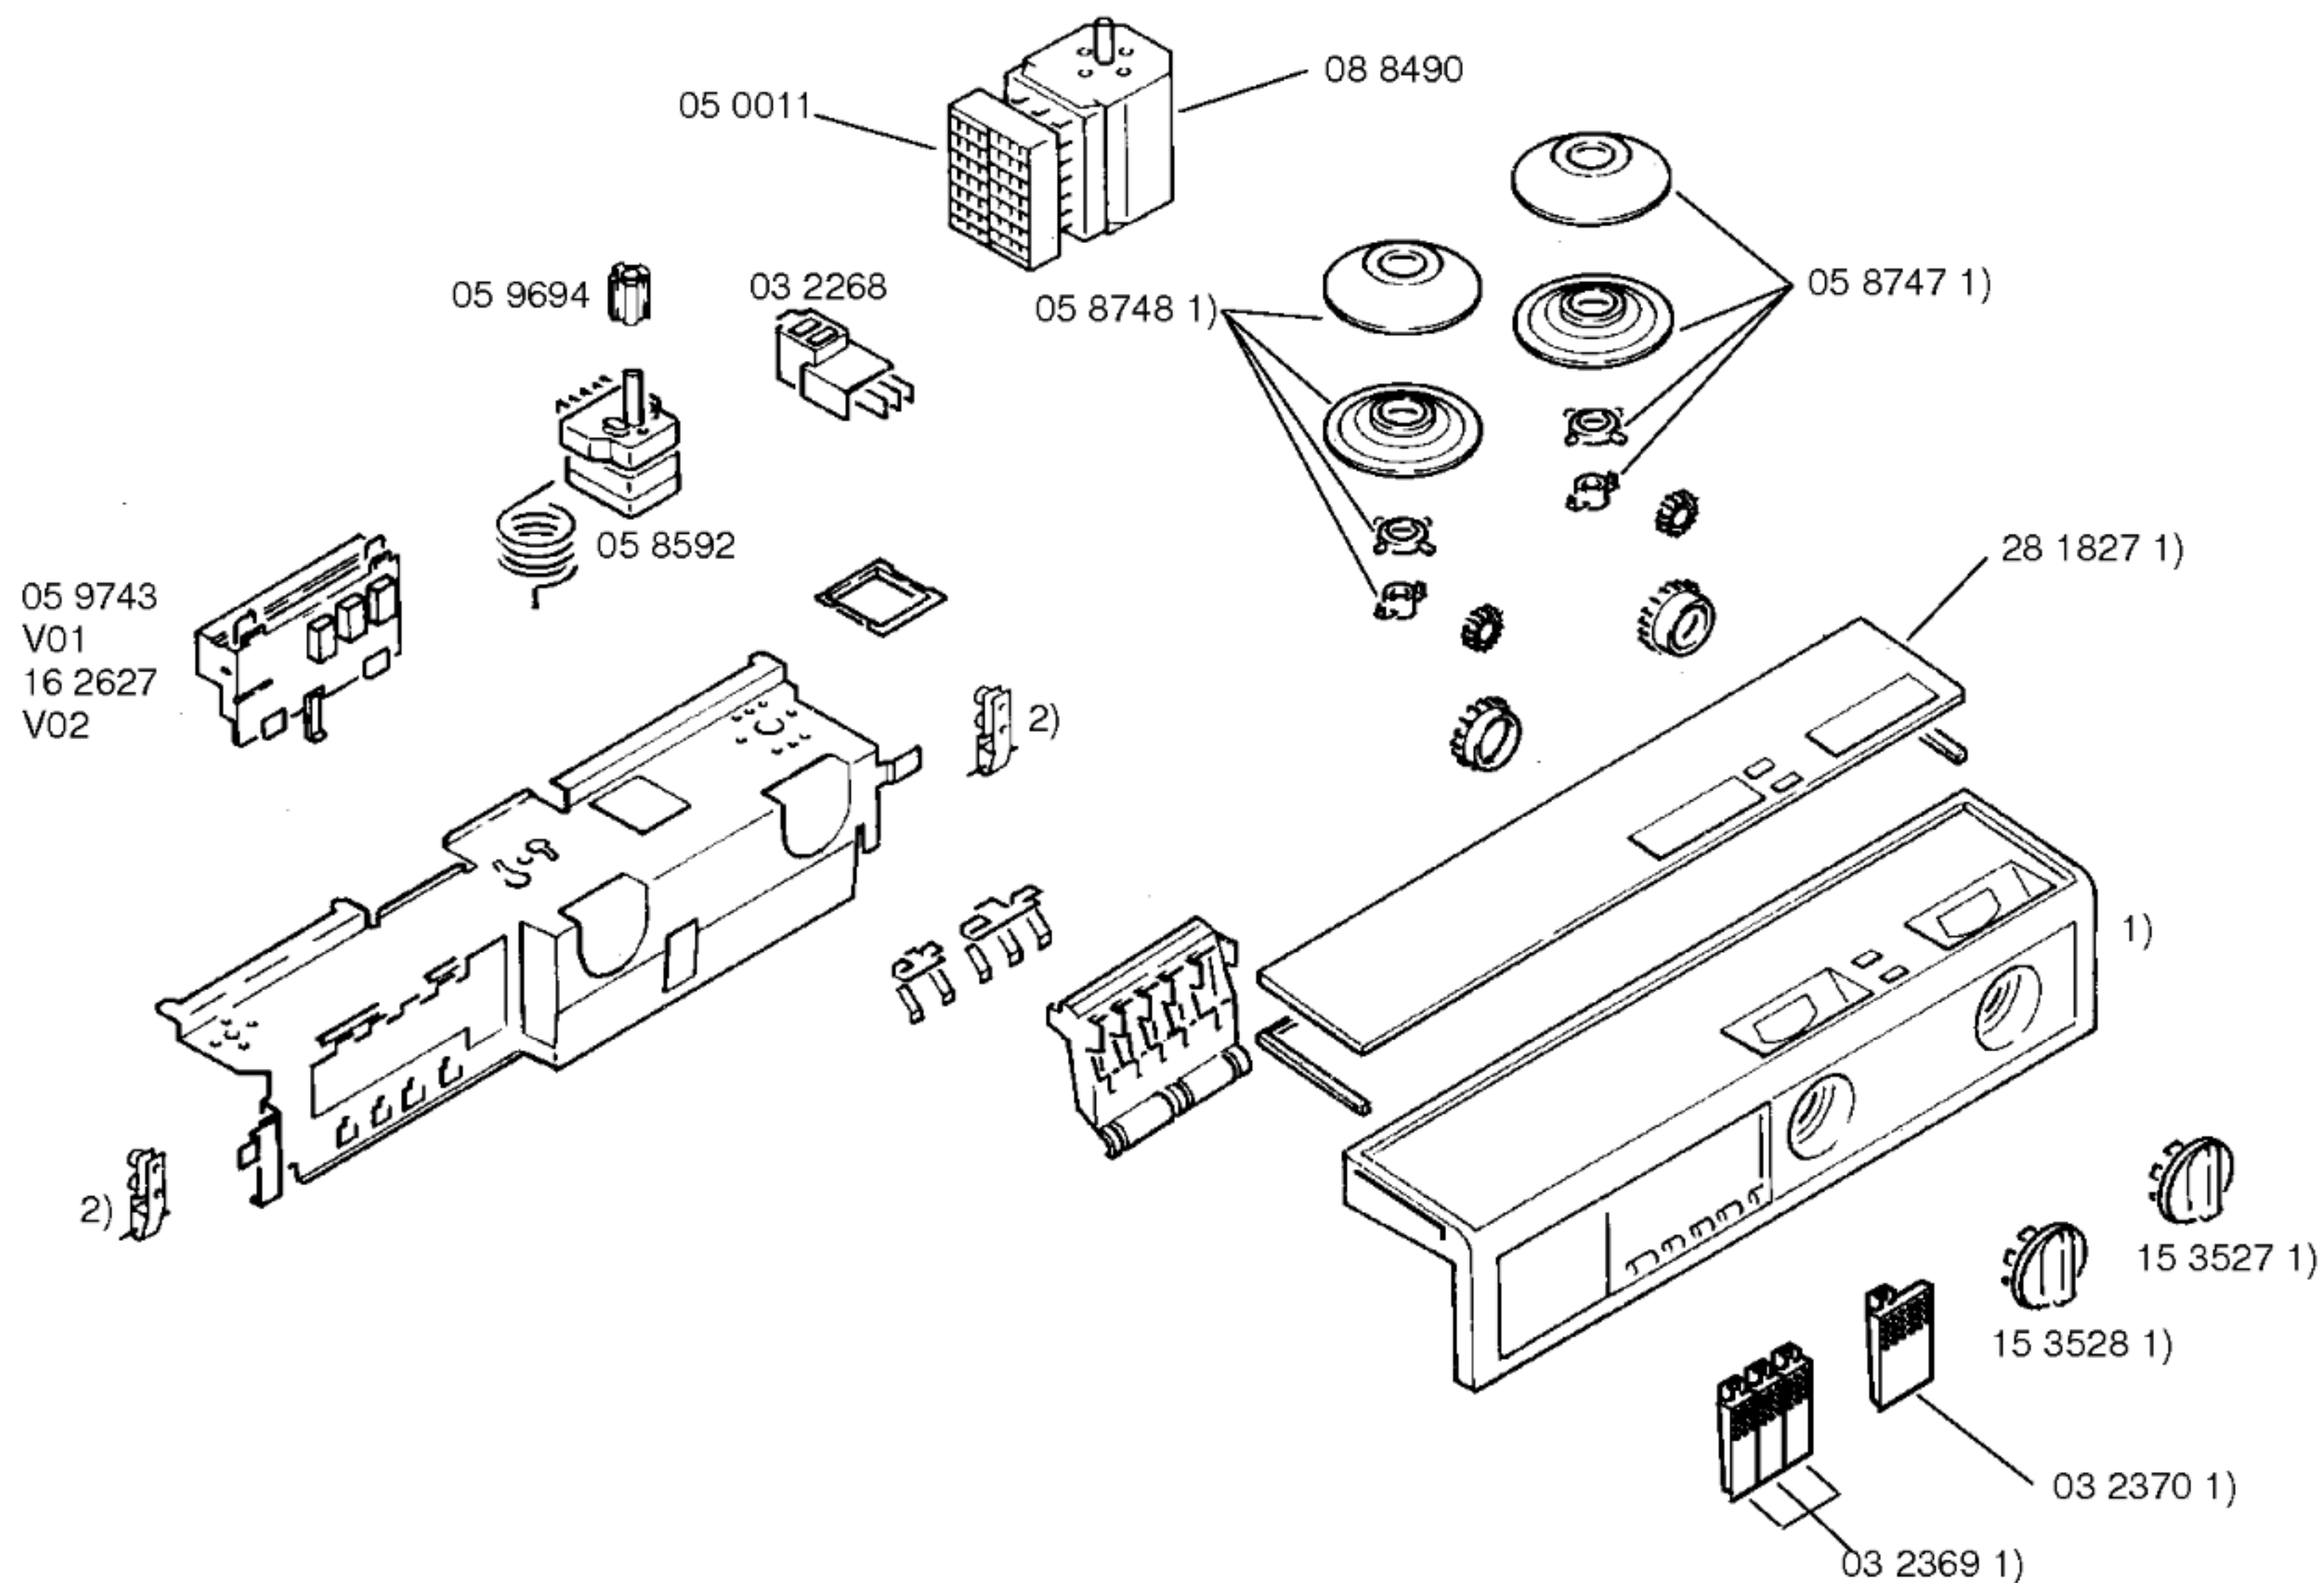

Gebrauchsanweisung

51 4748
(GB,F,E,NL)
51 4749
(D,I,SF,N,S)

Aufstellanweisung

51 4750
(D,GB,F,I,NL,E)
51 4934
(D,I,SF,N,S)

Programmtabelle

51 4753
(GB,F,E,NL)
51 4754
(D,I,SF,N,S)

1) 28 0990
Blende kompl.

2) 03 2288


Zubehör:


Bodenbefestigung
WX9756


Wäschetop
WZ10120/01

Verlängerung
Zulaufschlauch 2,5m
WZ10130/01

Entkalker
46 0038

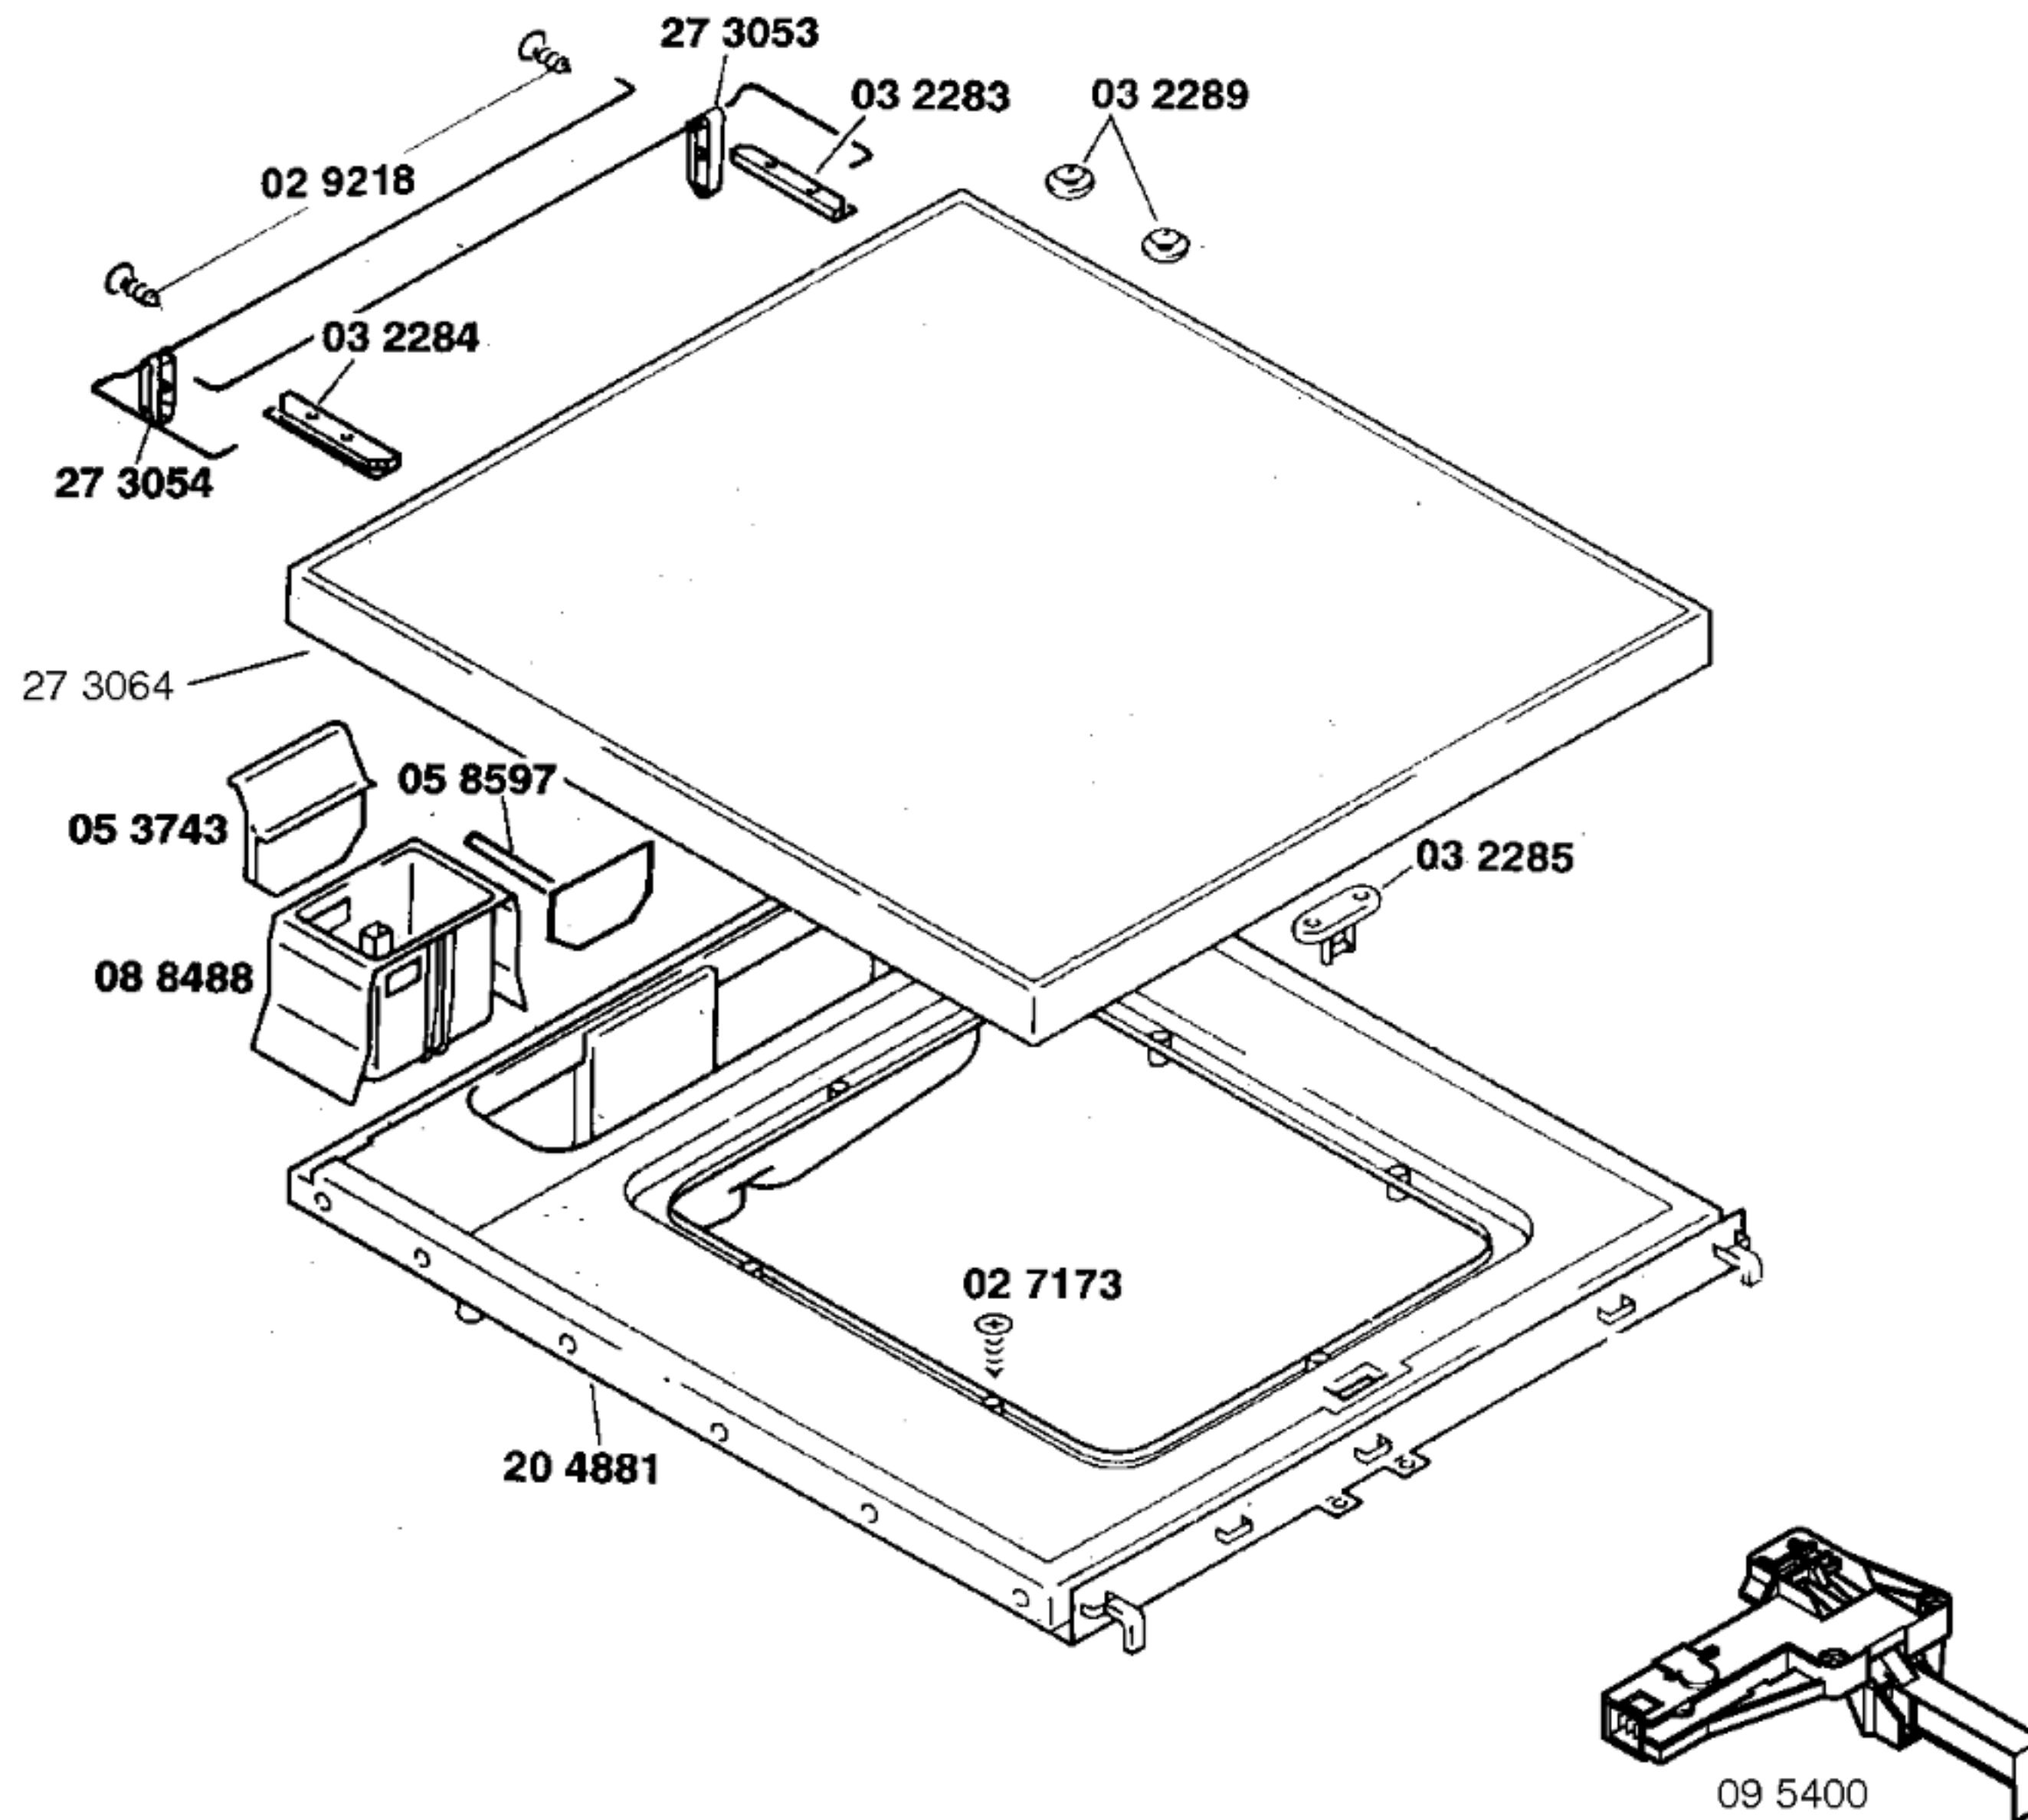

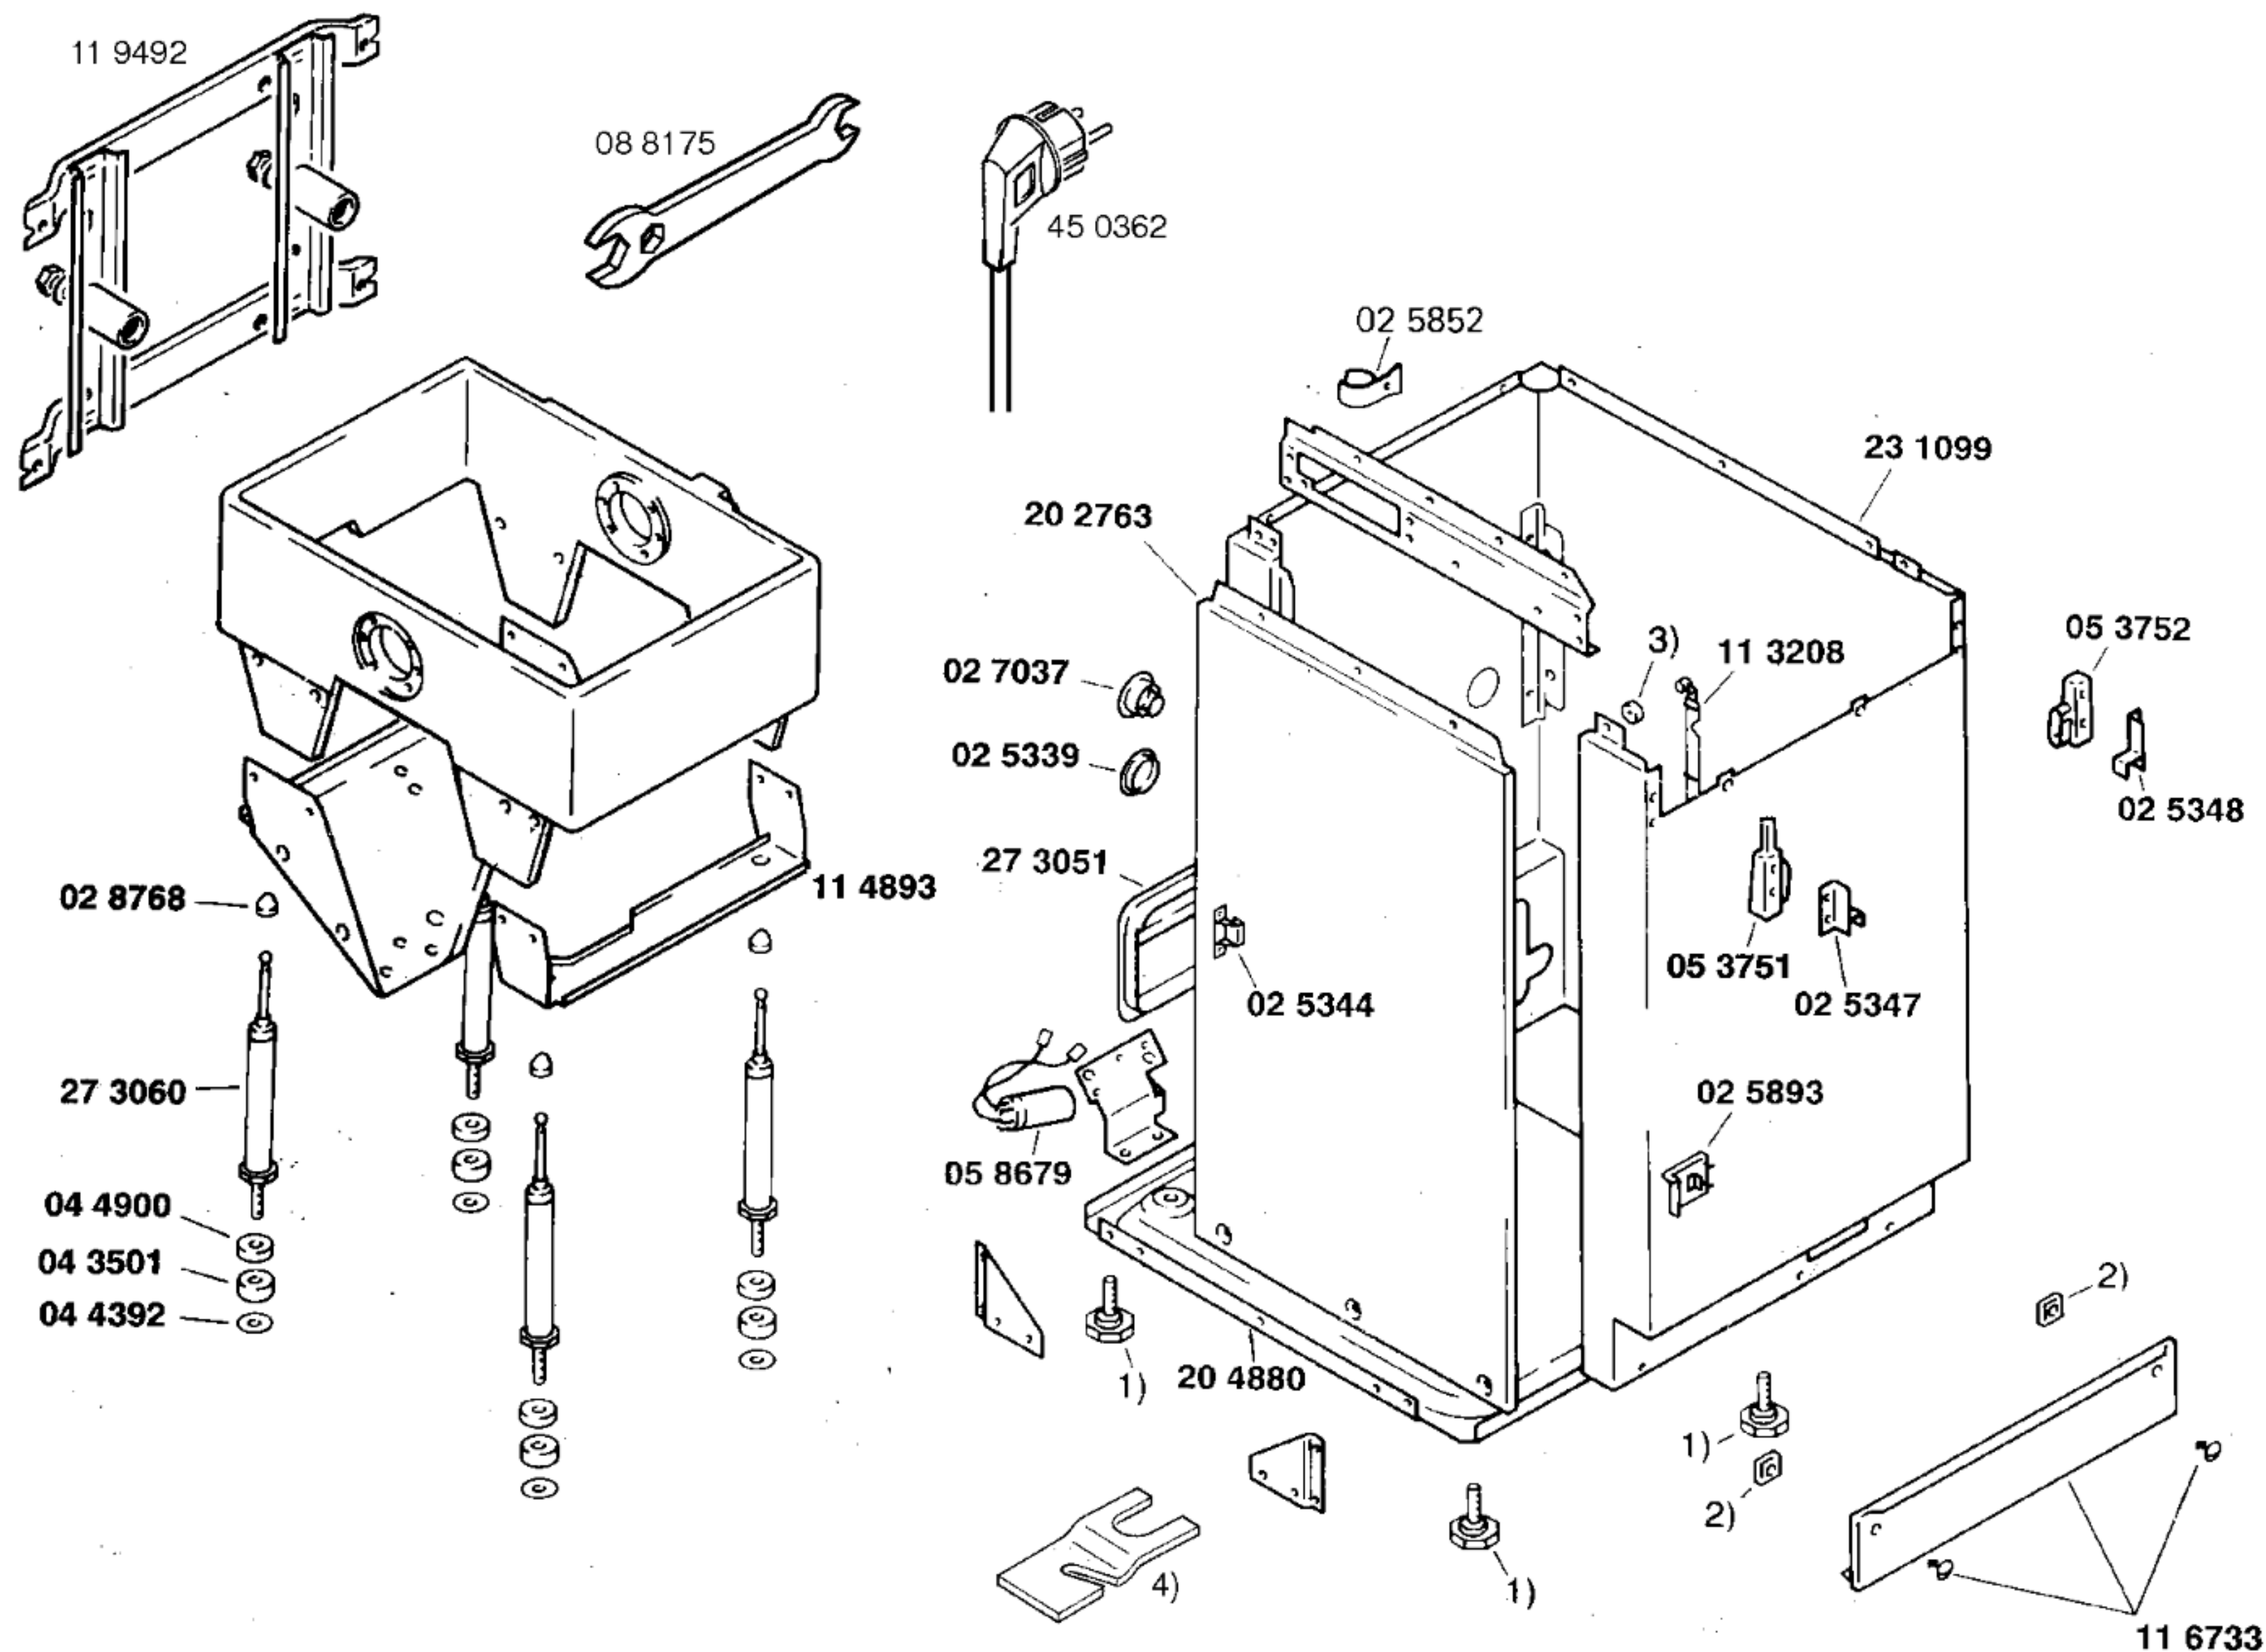

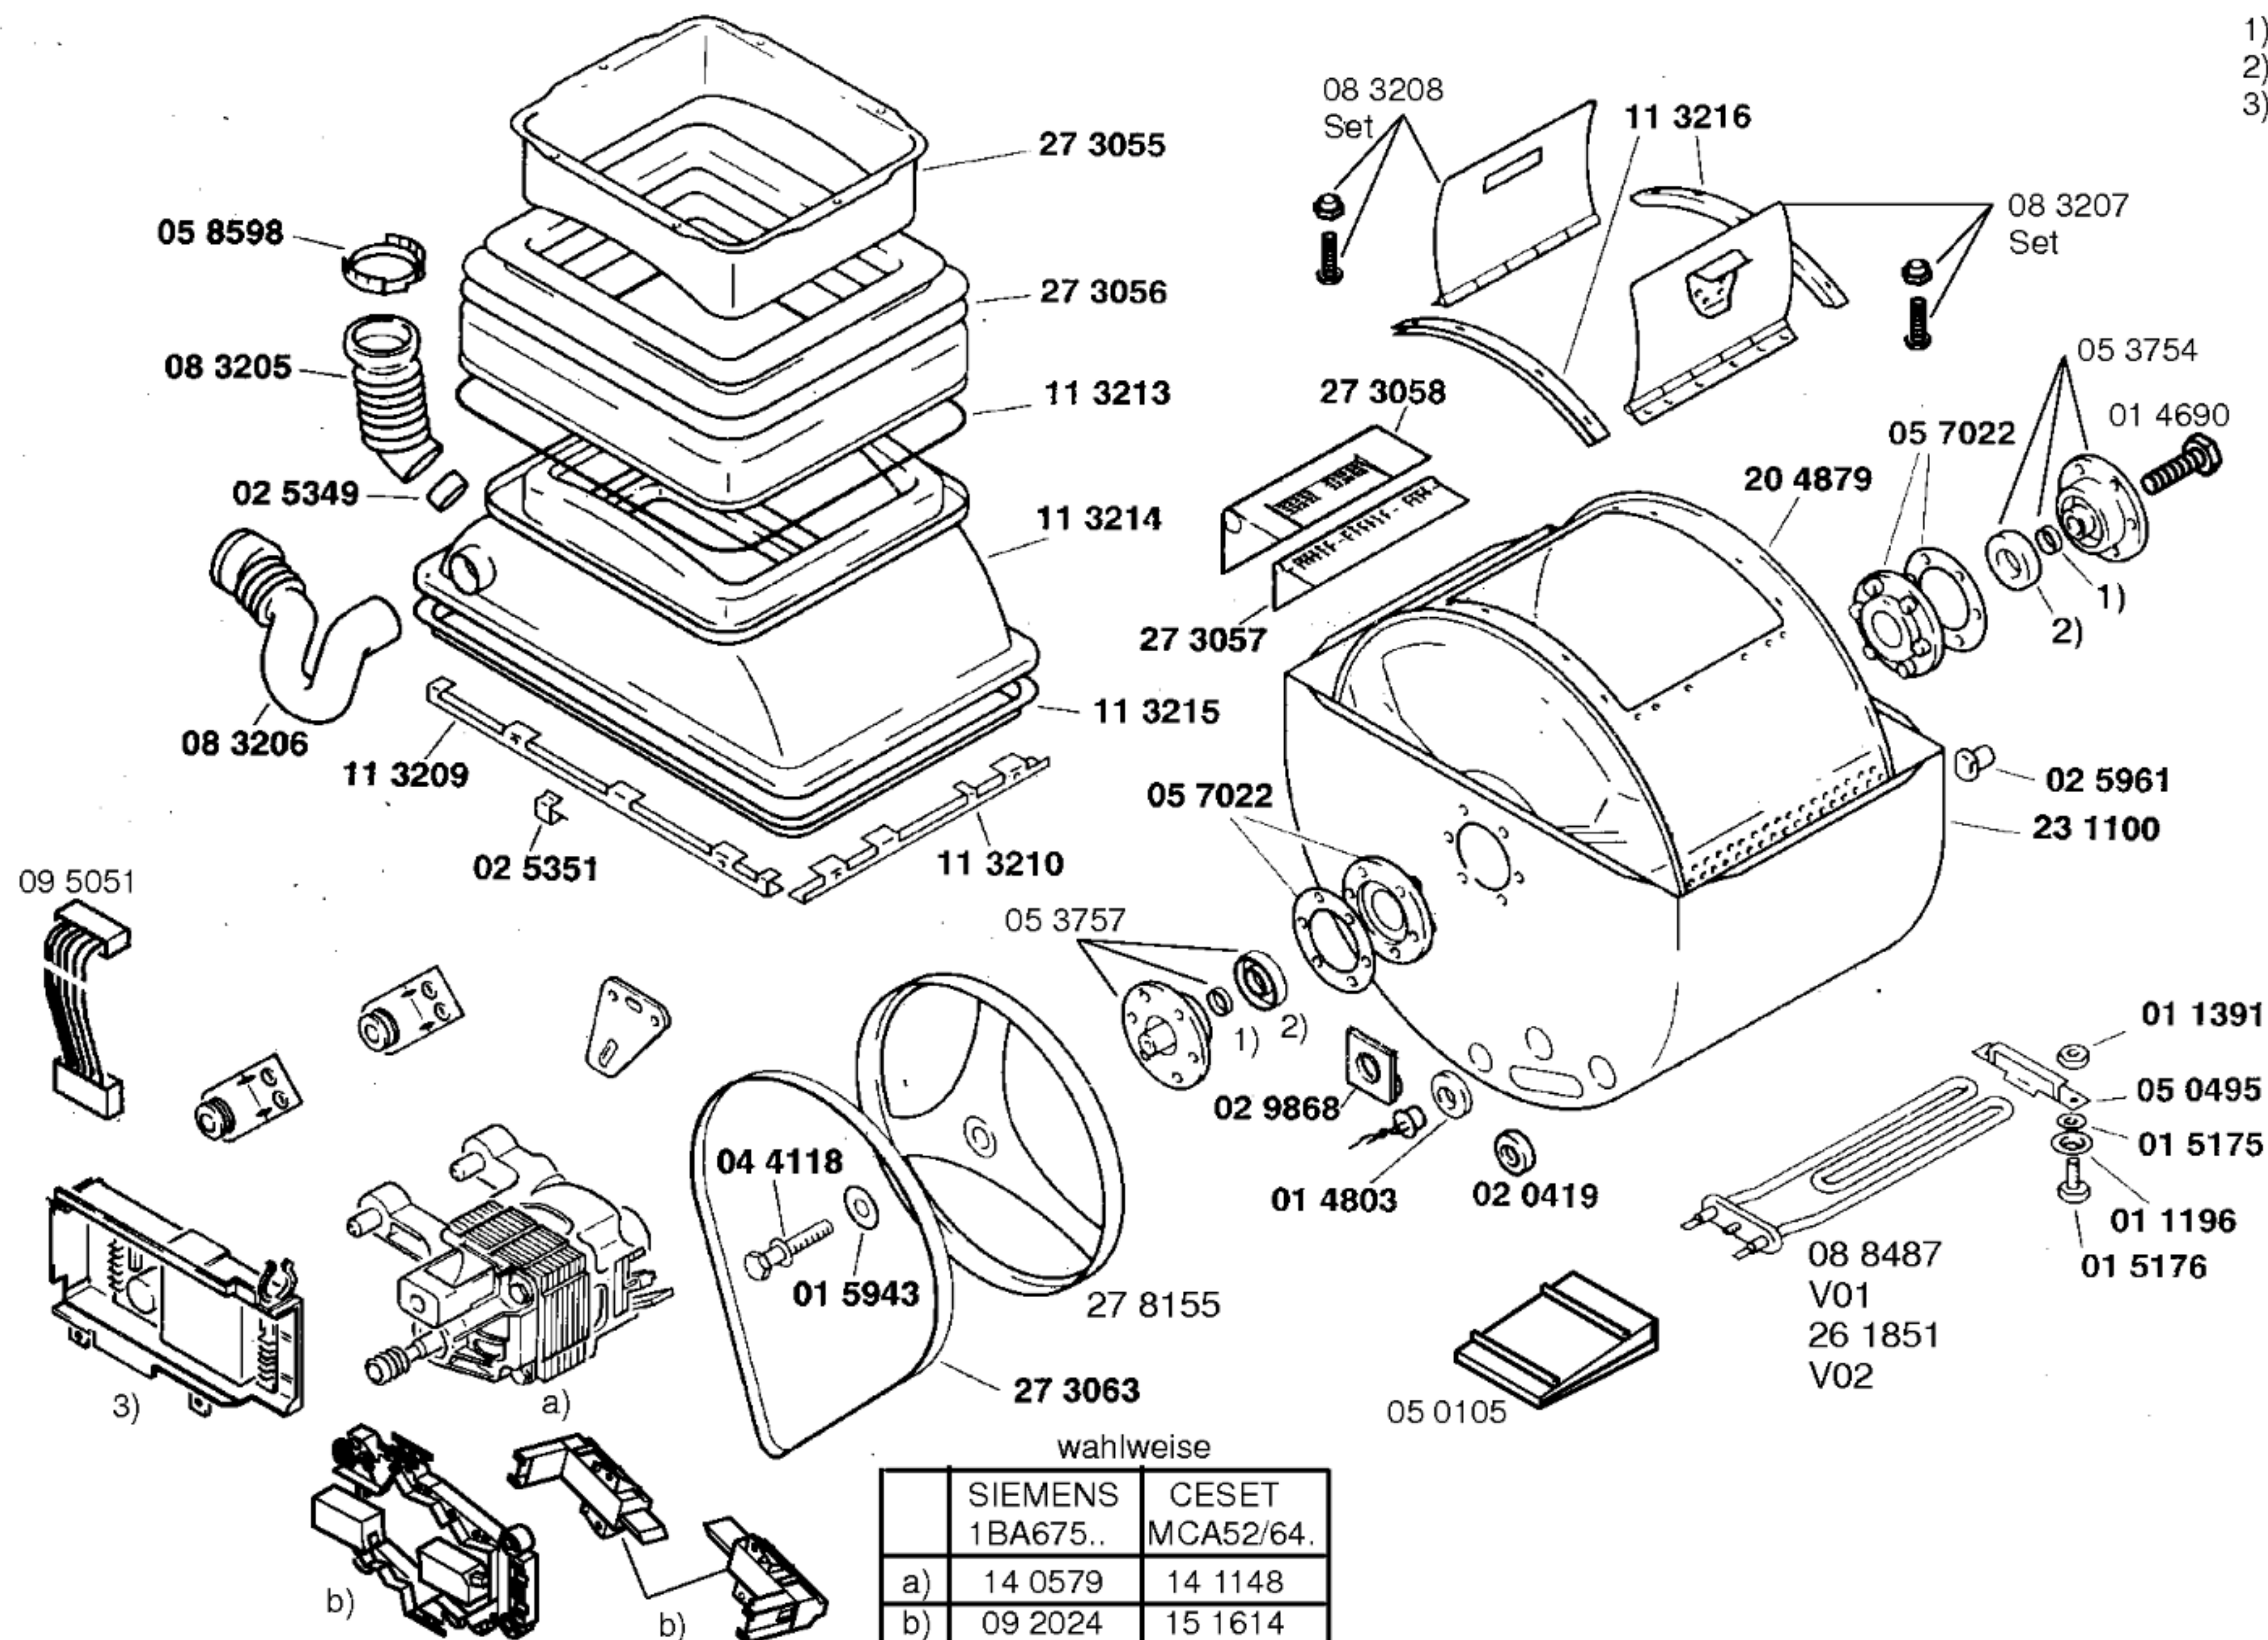

02 7780

28 8964

45 0555
1,5m
45 0652
2,5m

01 4700

08 8495

14 1326

15 1611

09 6182

09 5269