 


Gebrauchsanweisung  
 51 7435  
 (D,F,I,NL,GB,E)

 
Kochbuch:  
 51 6059  
 (D)

Zubehör:  
 Z6290X0  
 Glaspfanne  
 Z6380X0  
 Alu-Backblech

Einbaurahmen  
 Z6180W2  
 V01  
 Z6180B2  
 V02

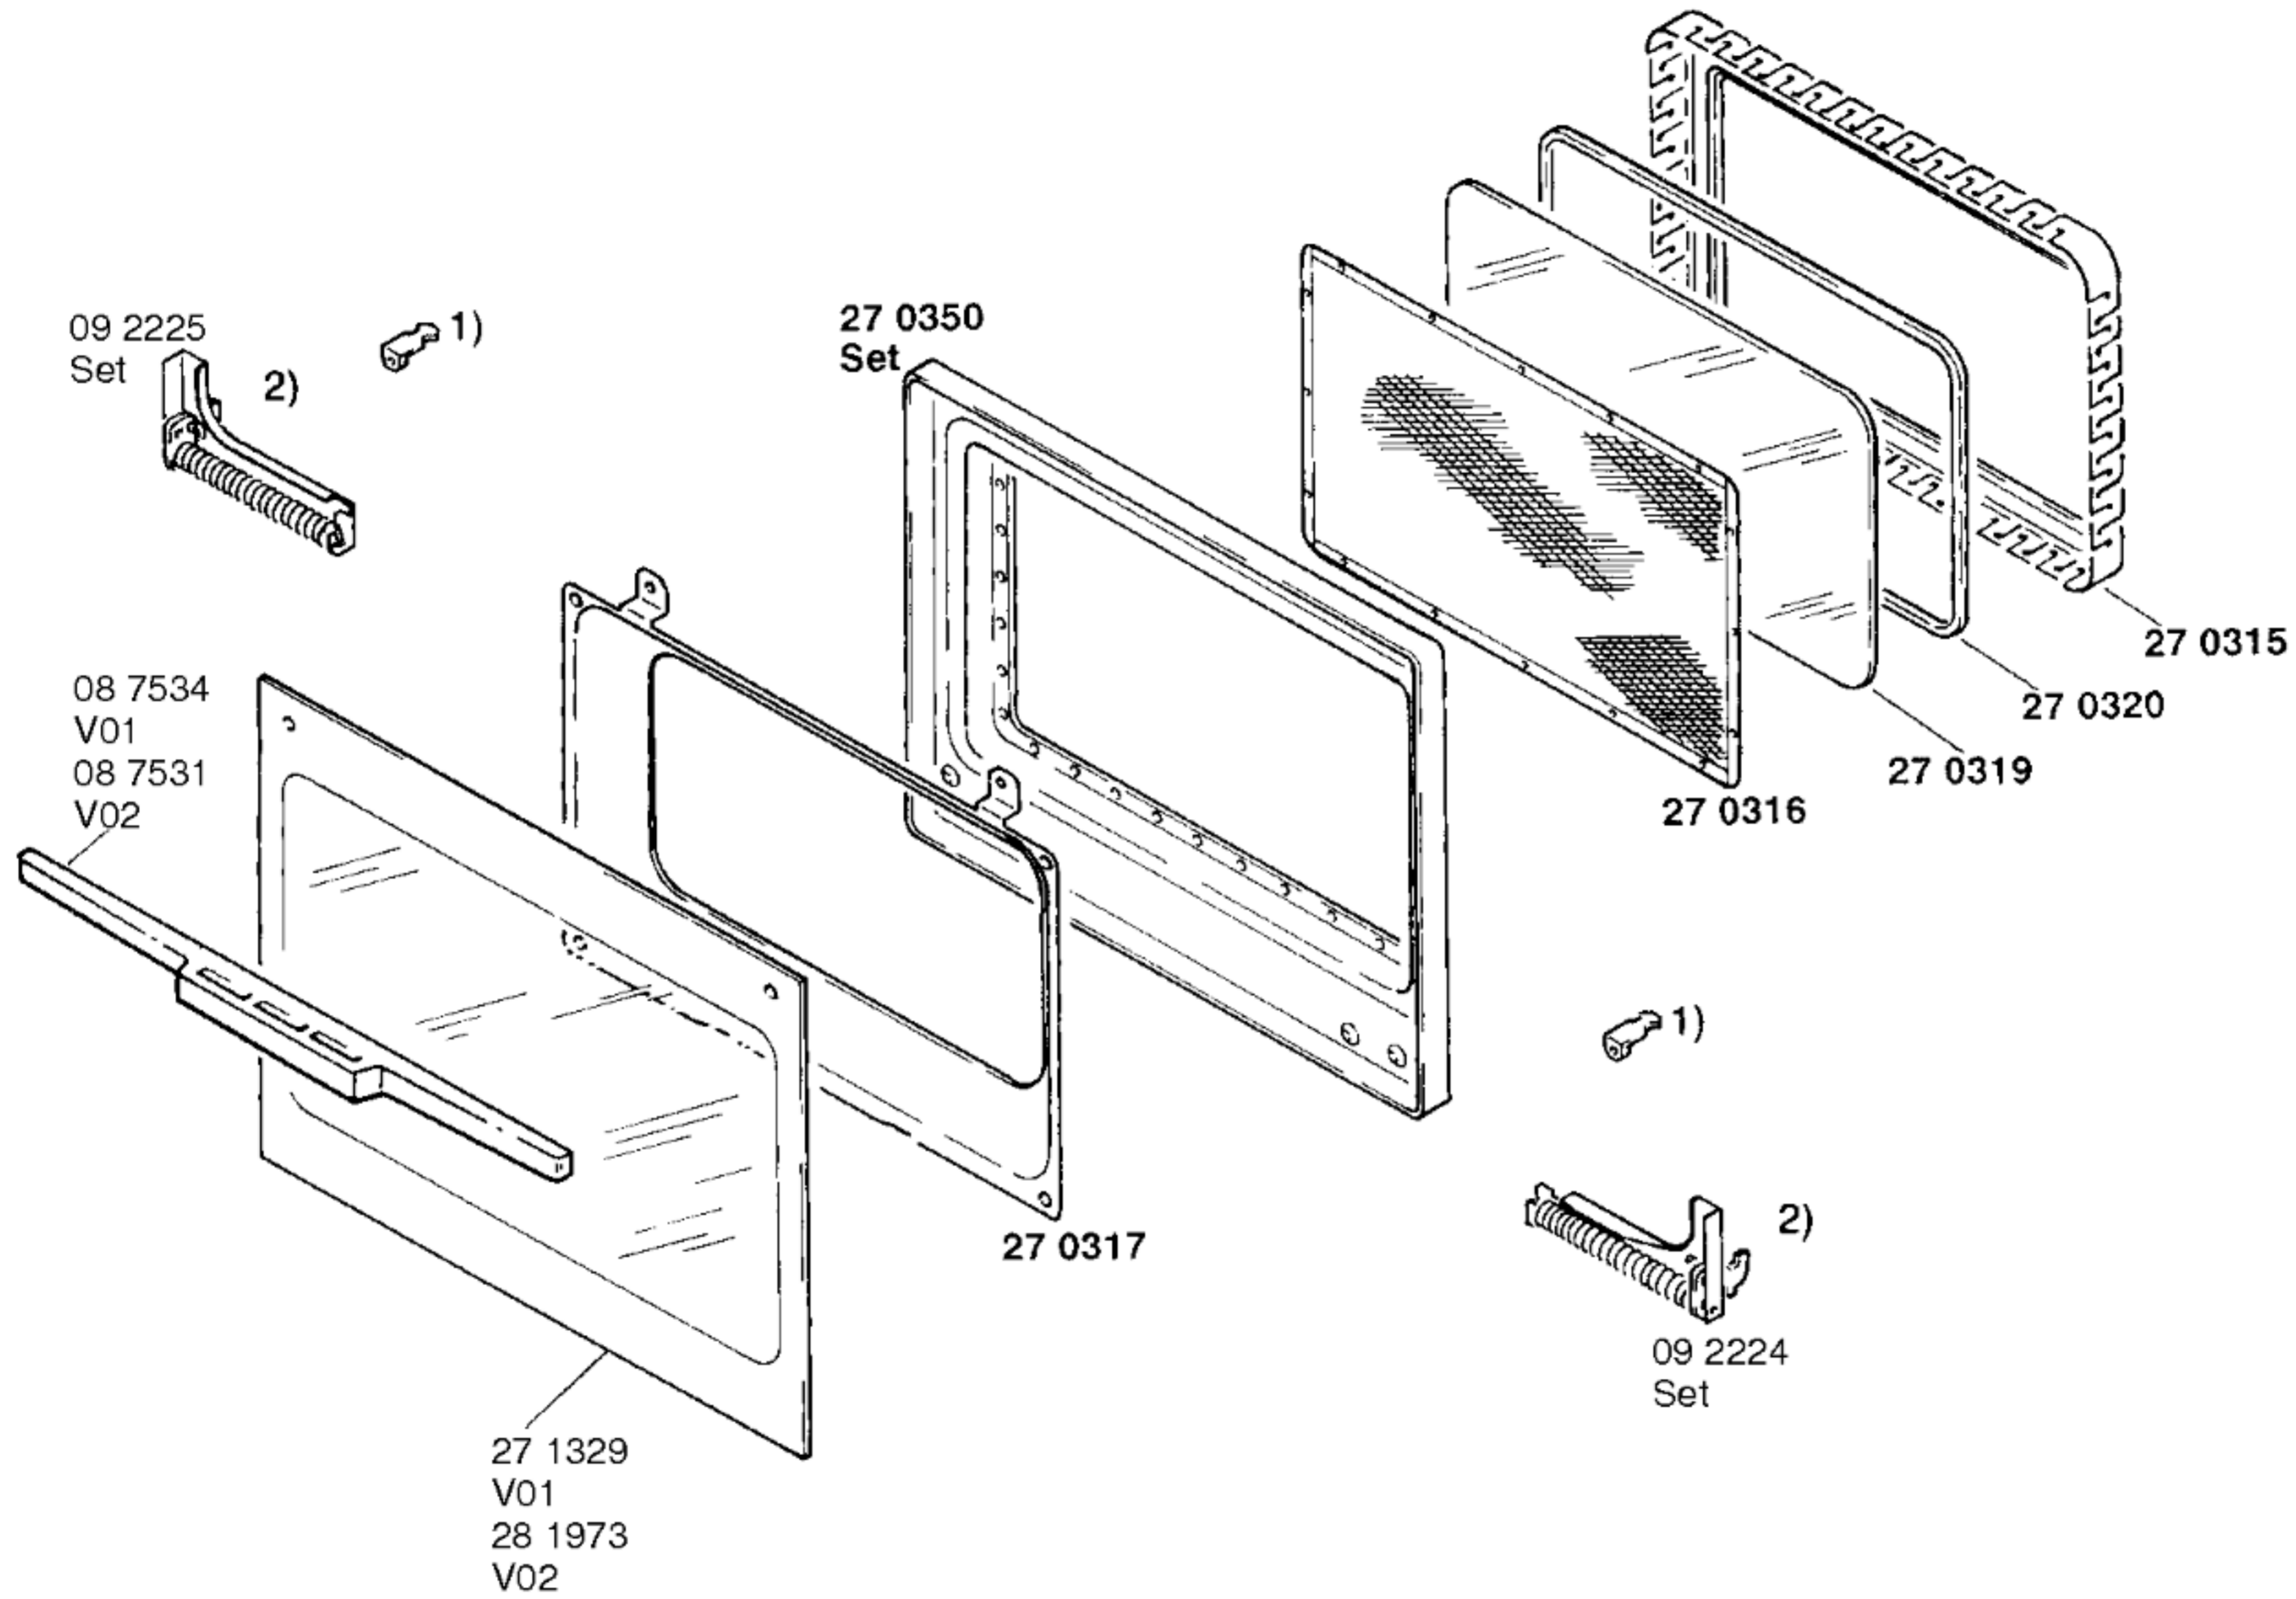

- 1) 03 0671
  - 2) 03 0813
- Arretierstifte

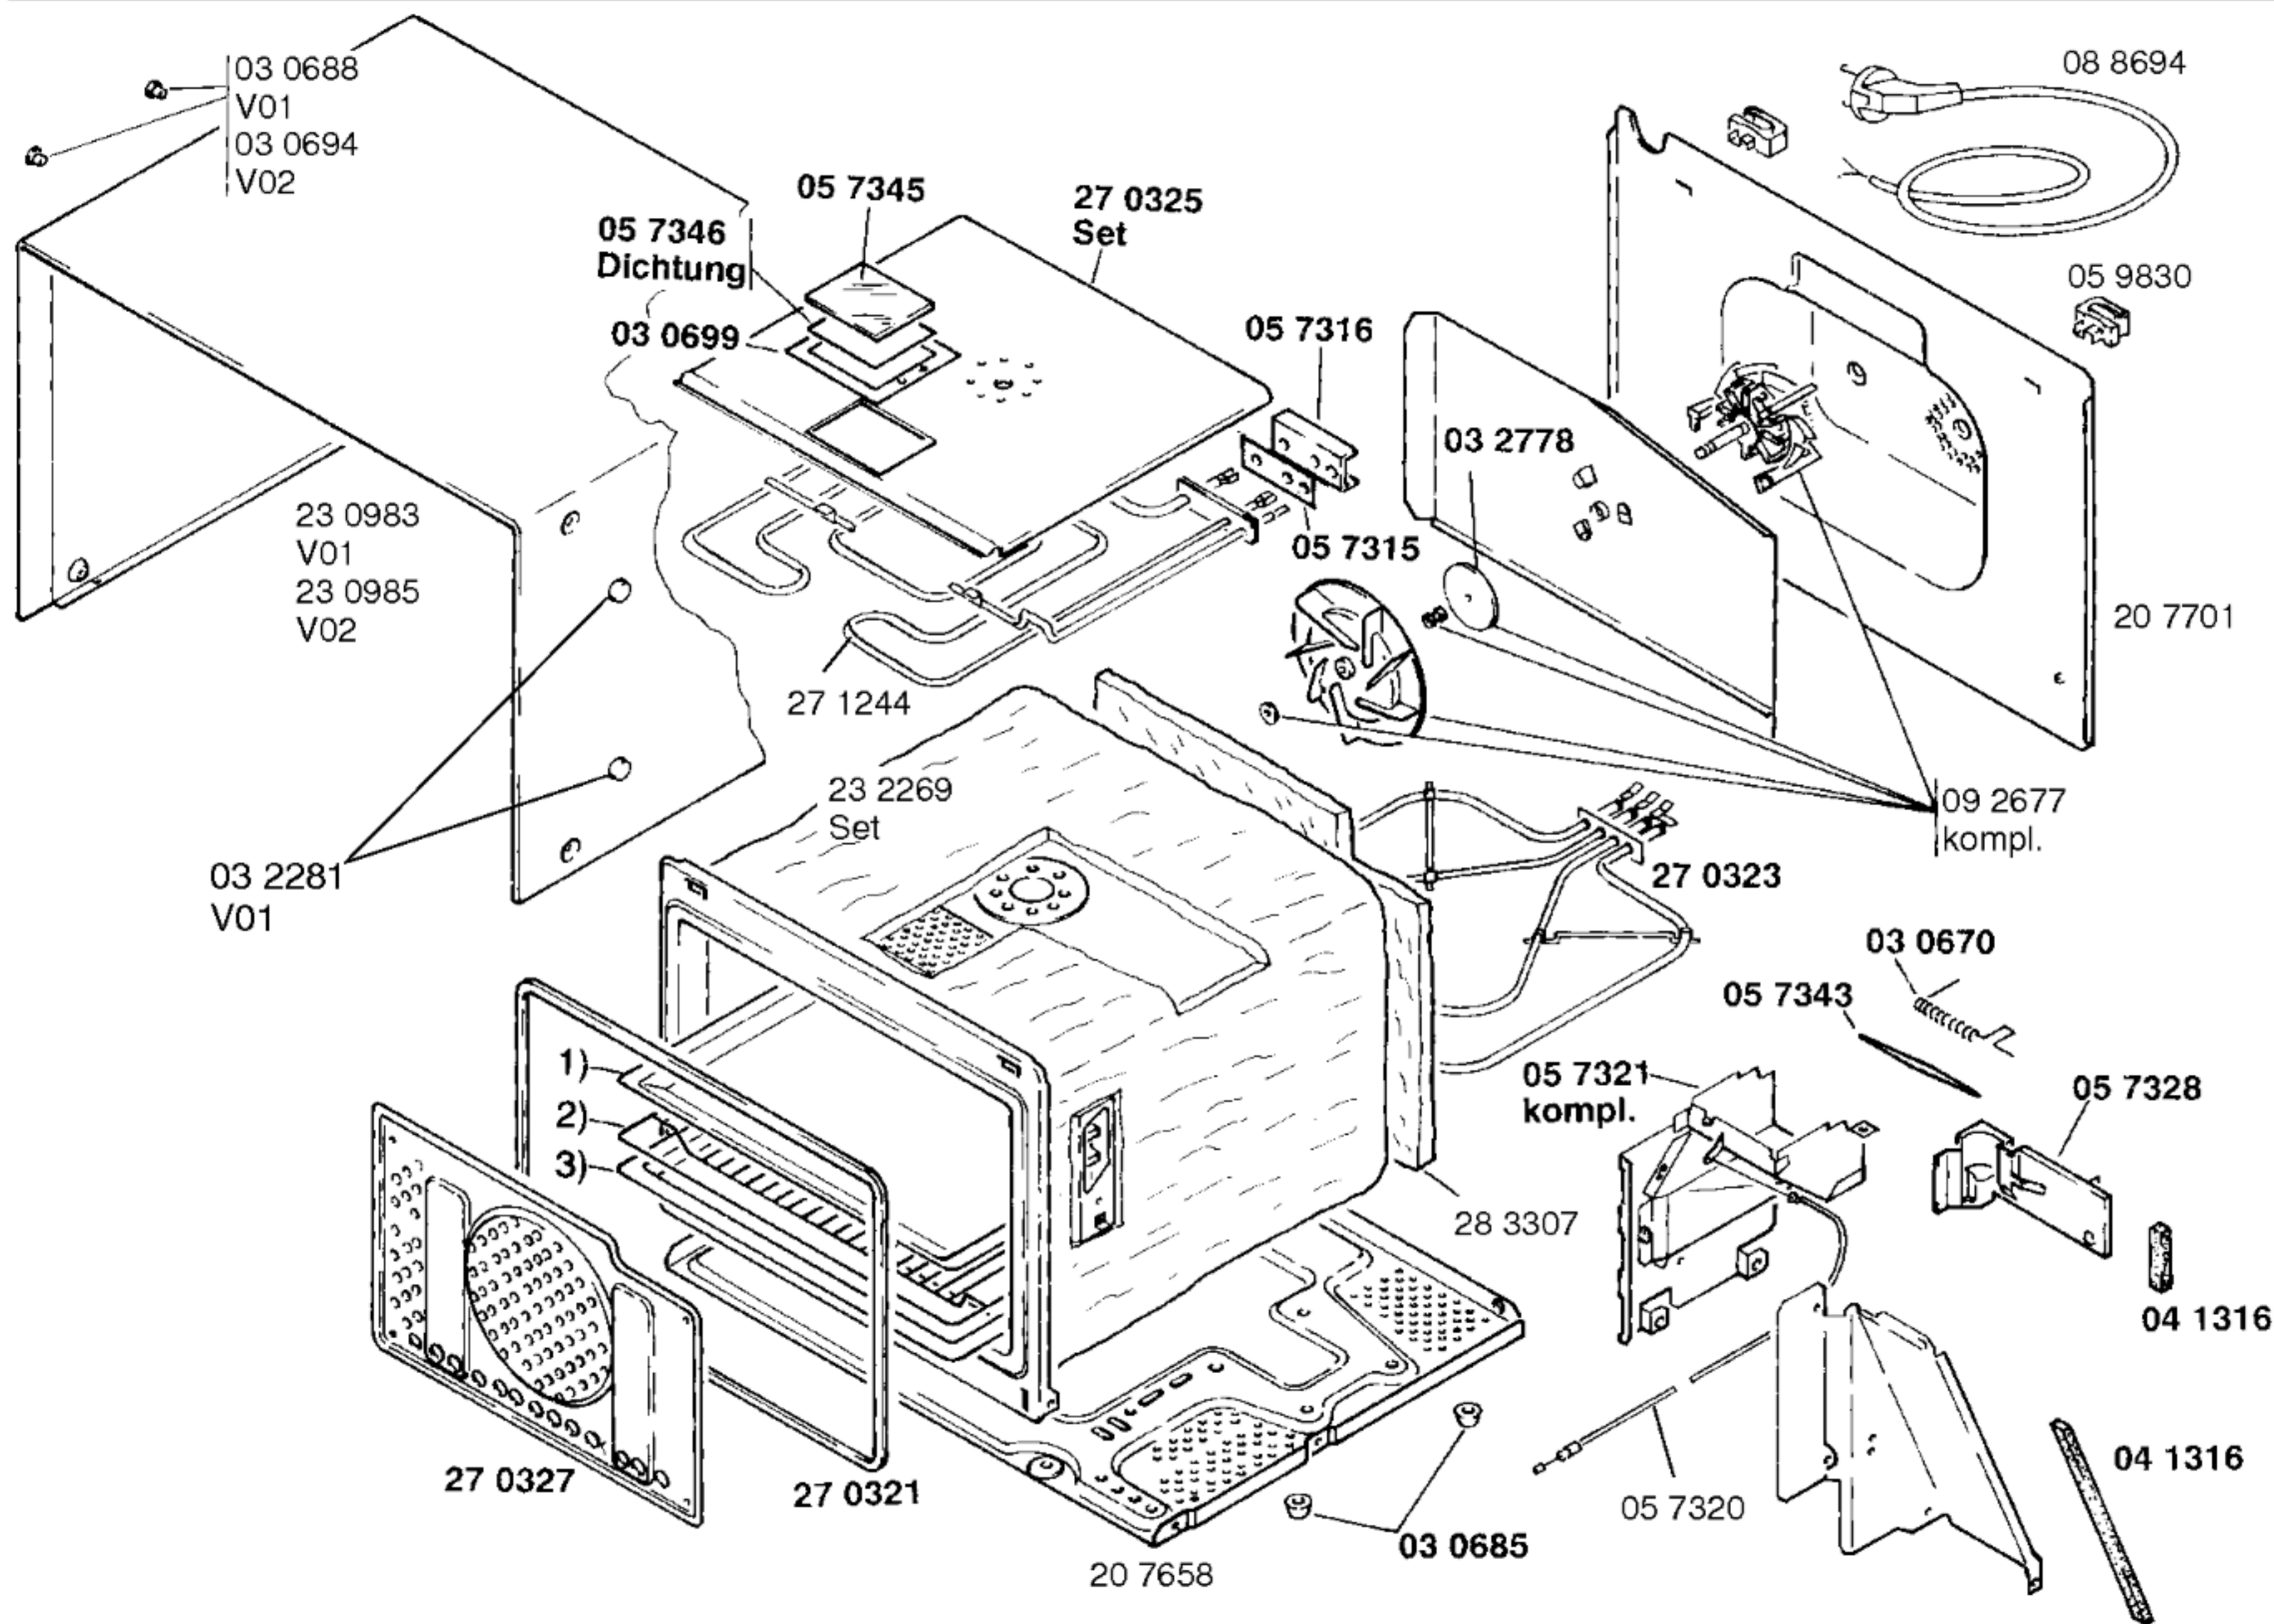

- 1) Backblech  
 11 4538  
 Anschlag-Backblech  
 02 8732
- 2) 11 4539
- 3) Universalpfanne  
 27 3844

