 


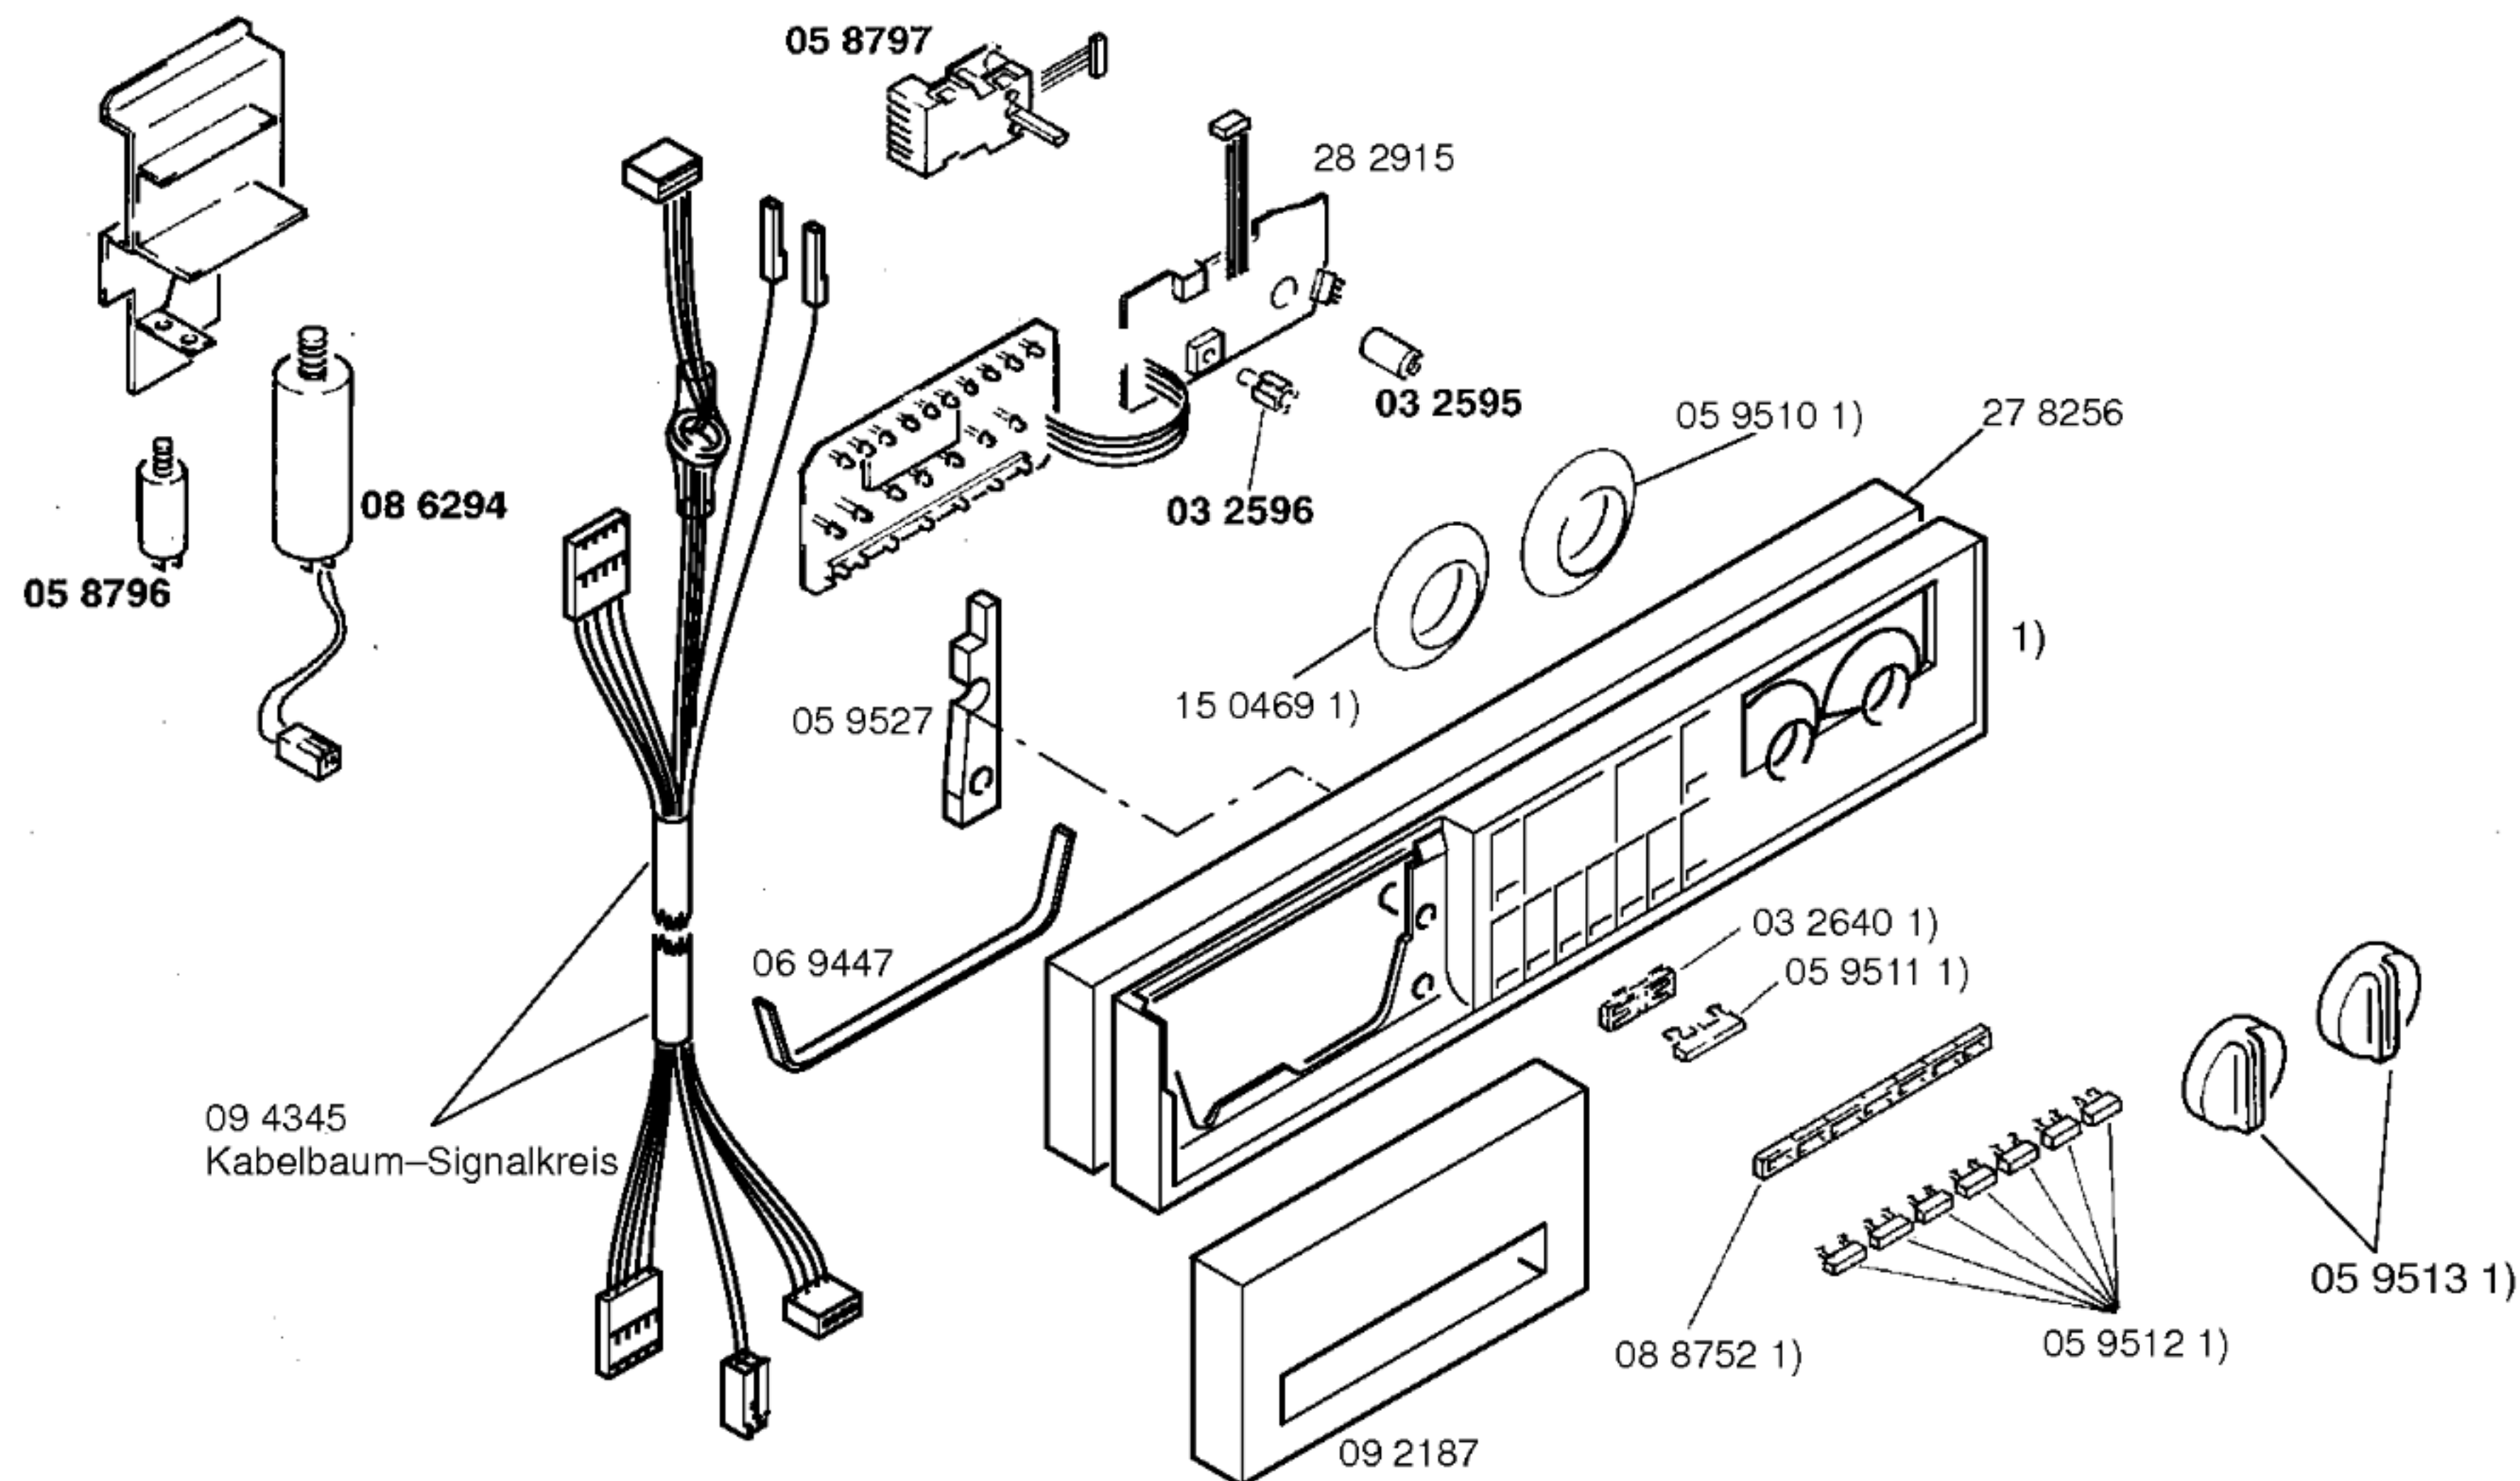

Gebrauchsanweisung

51 6728

(D,NL,F)

51 6729

(E,GB,P)

51 6784

(D,F,I,S)

Einbauanweisung

51 5518

(D,NL,F,E,GB,I,SF,S,N,DK)

Programmtabelle

51 6730

(D)

51 6731

(NL)

51 6732

(F)

51 6733

(E)

51 6734

(GB)

51 6735

(P)

51 6785

(I)

51 6786

 
(S)

 
1) 28 6188

 
Blende kompl.
(Symbole)

Entkalker

46 0038

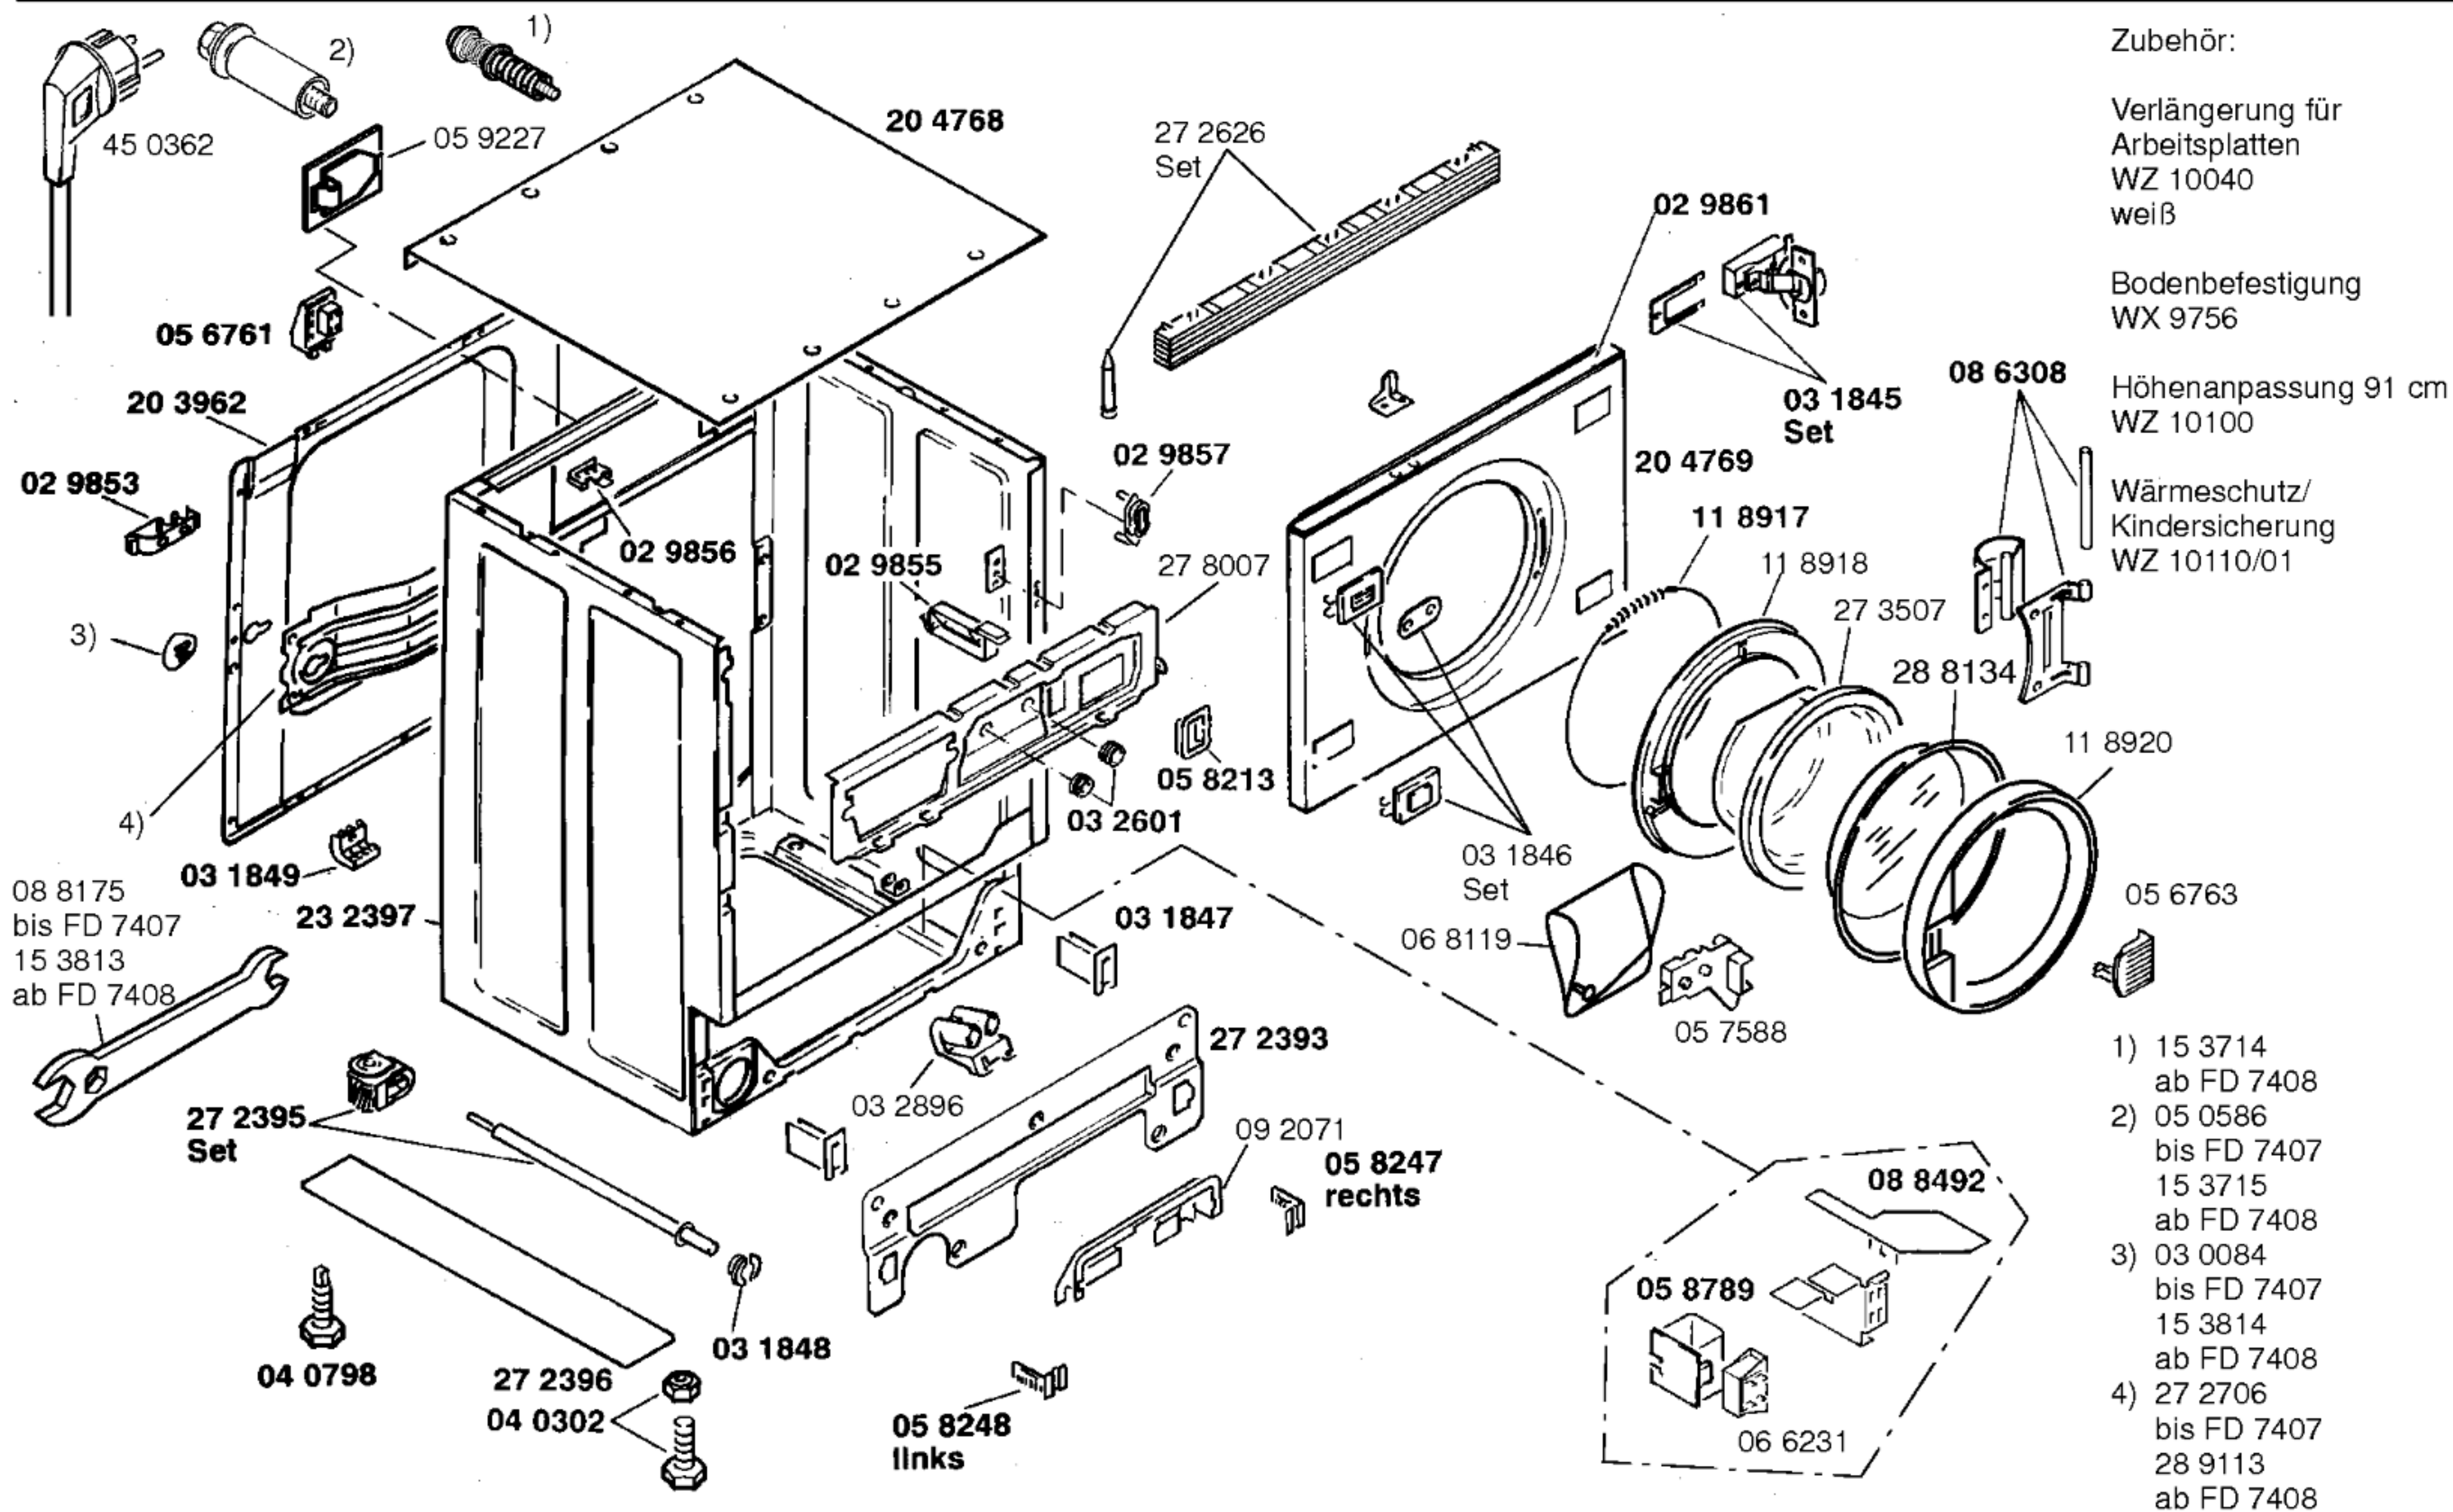

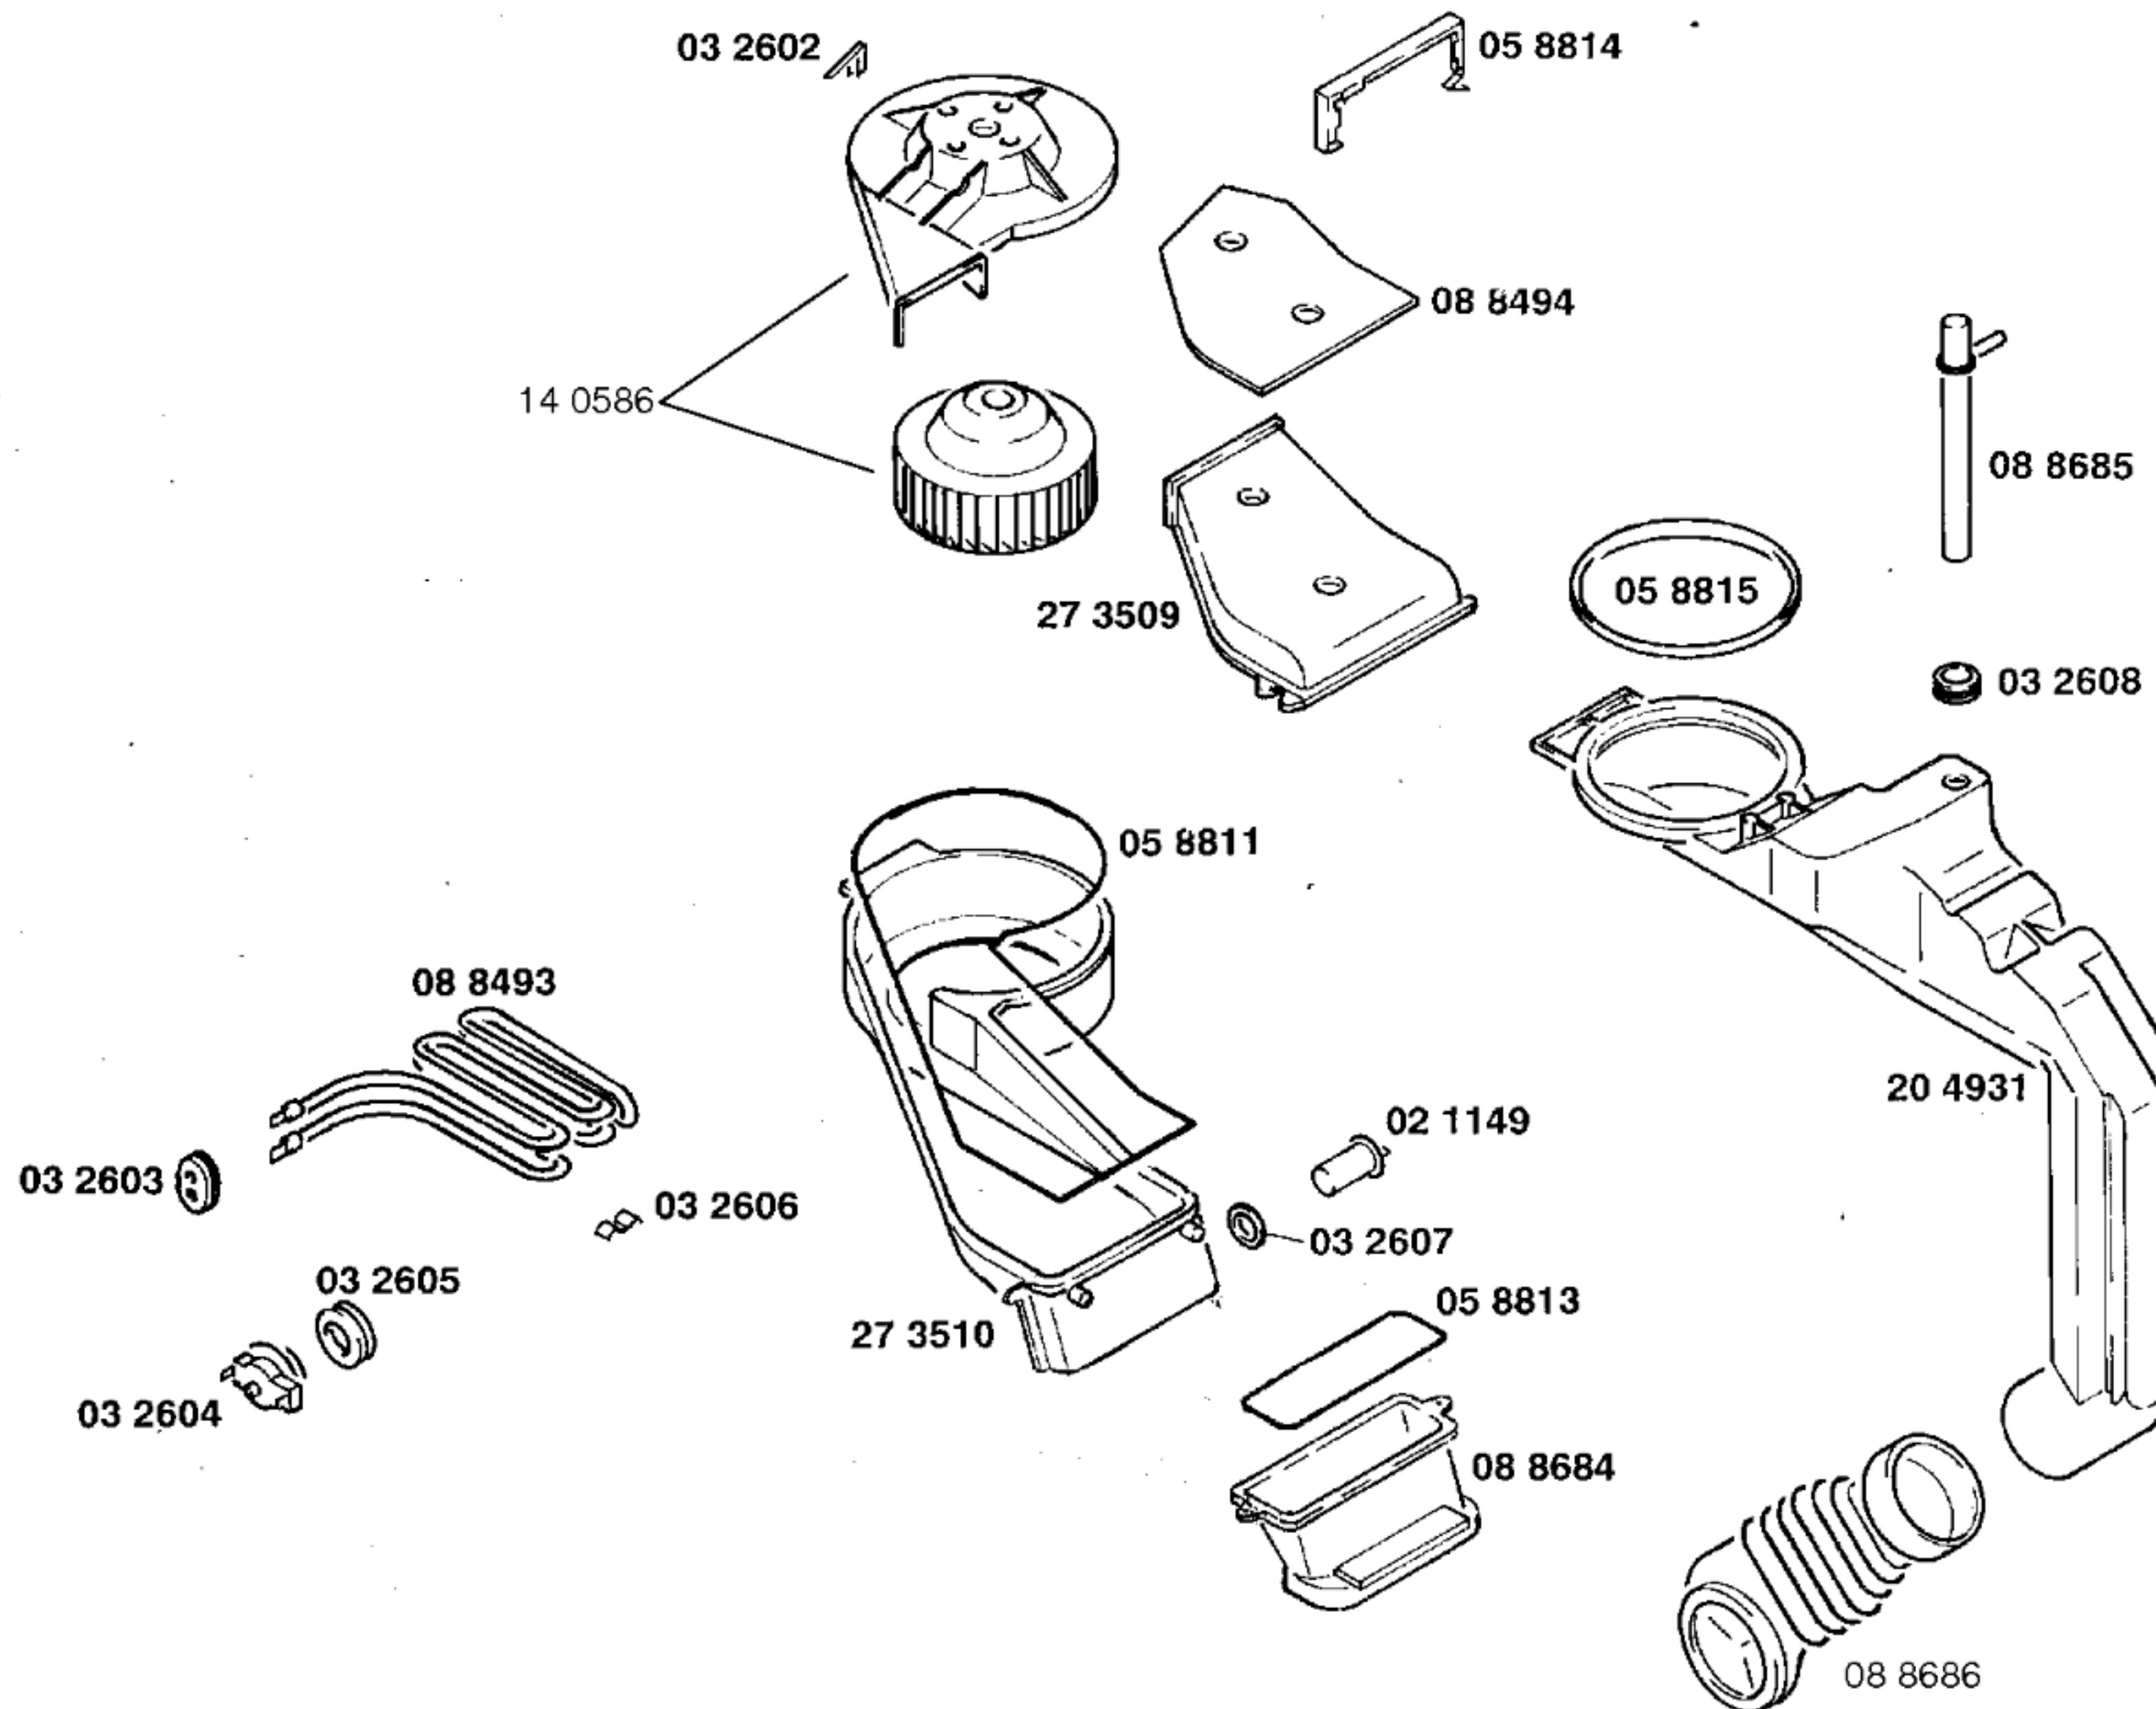

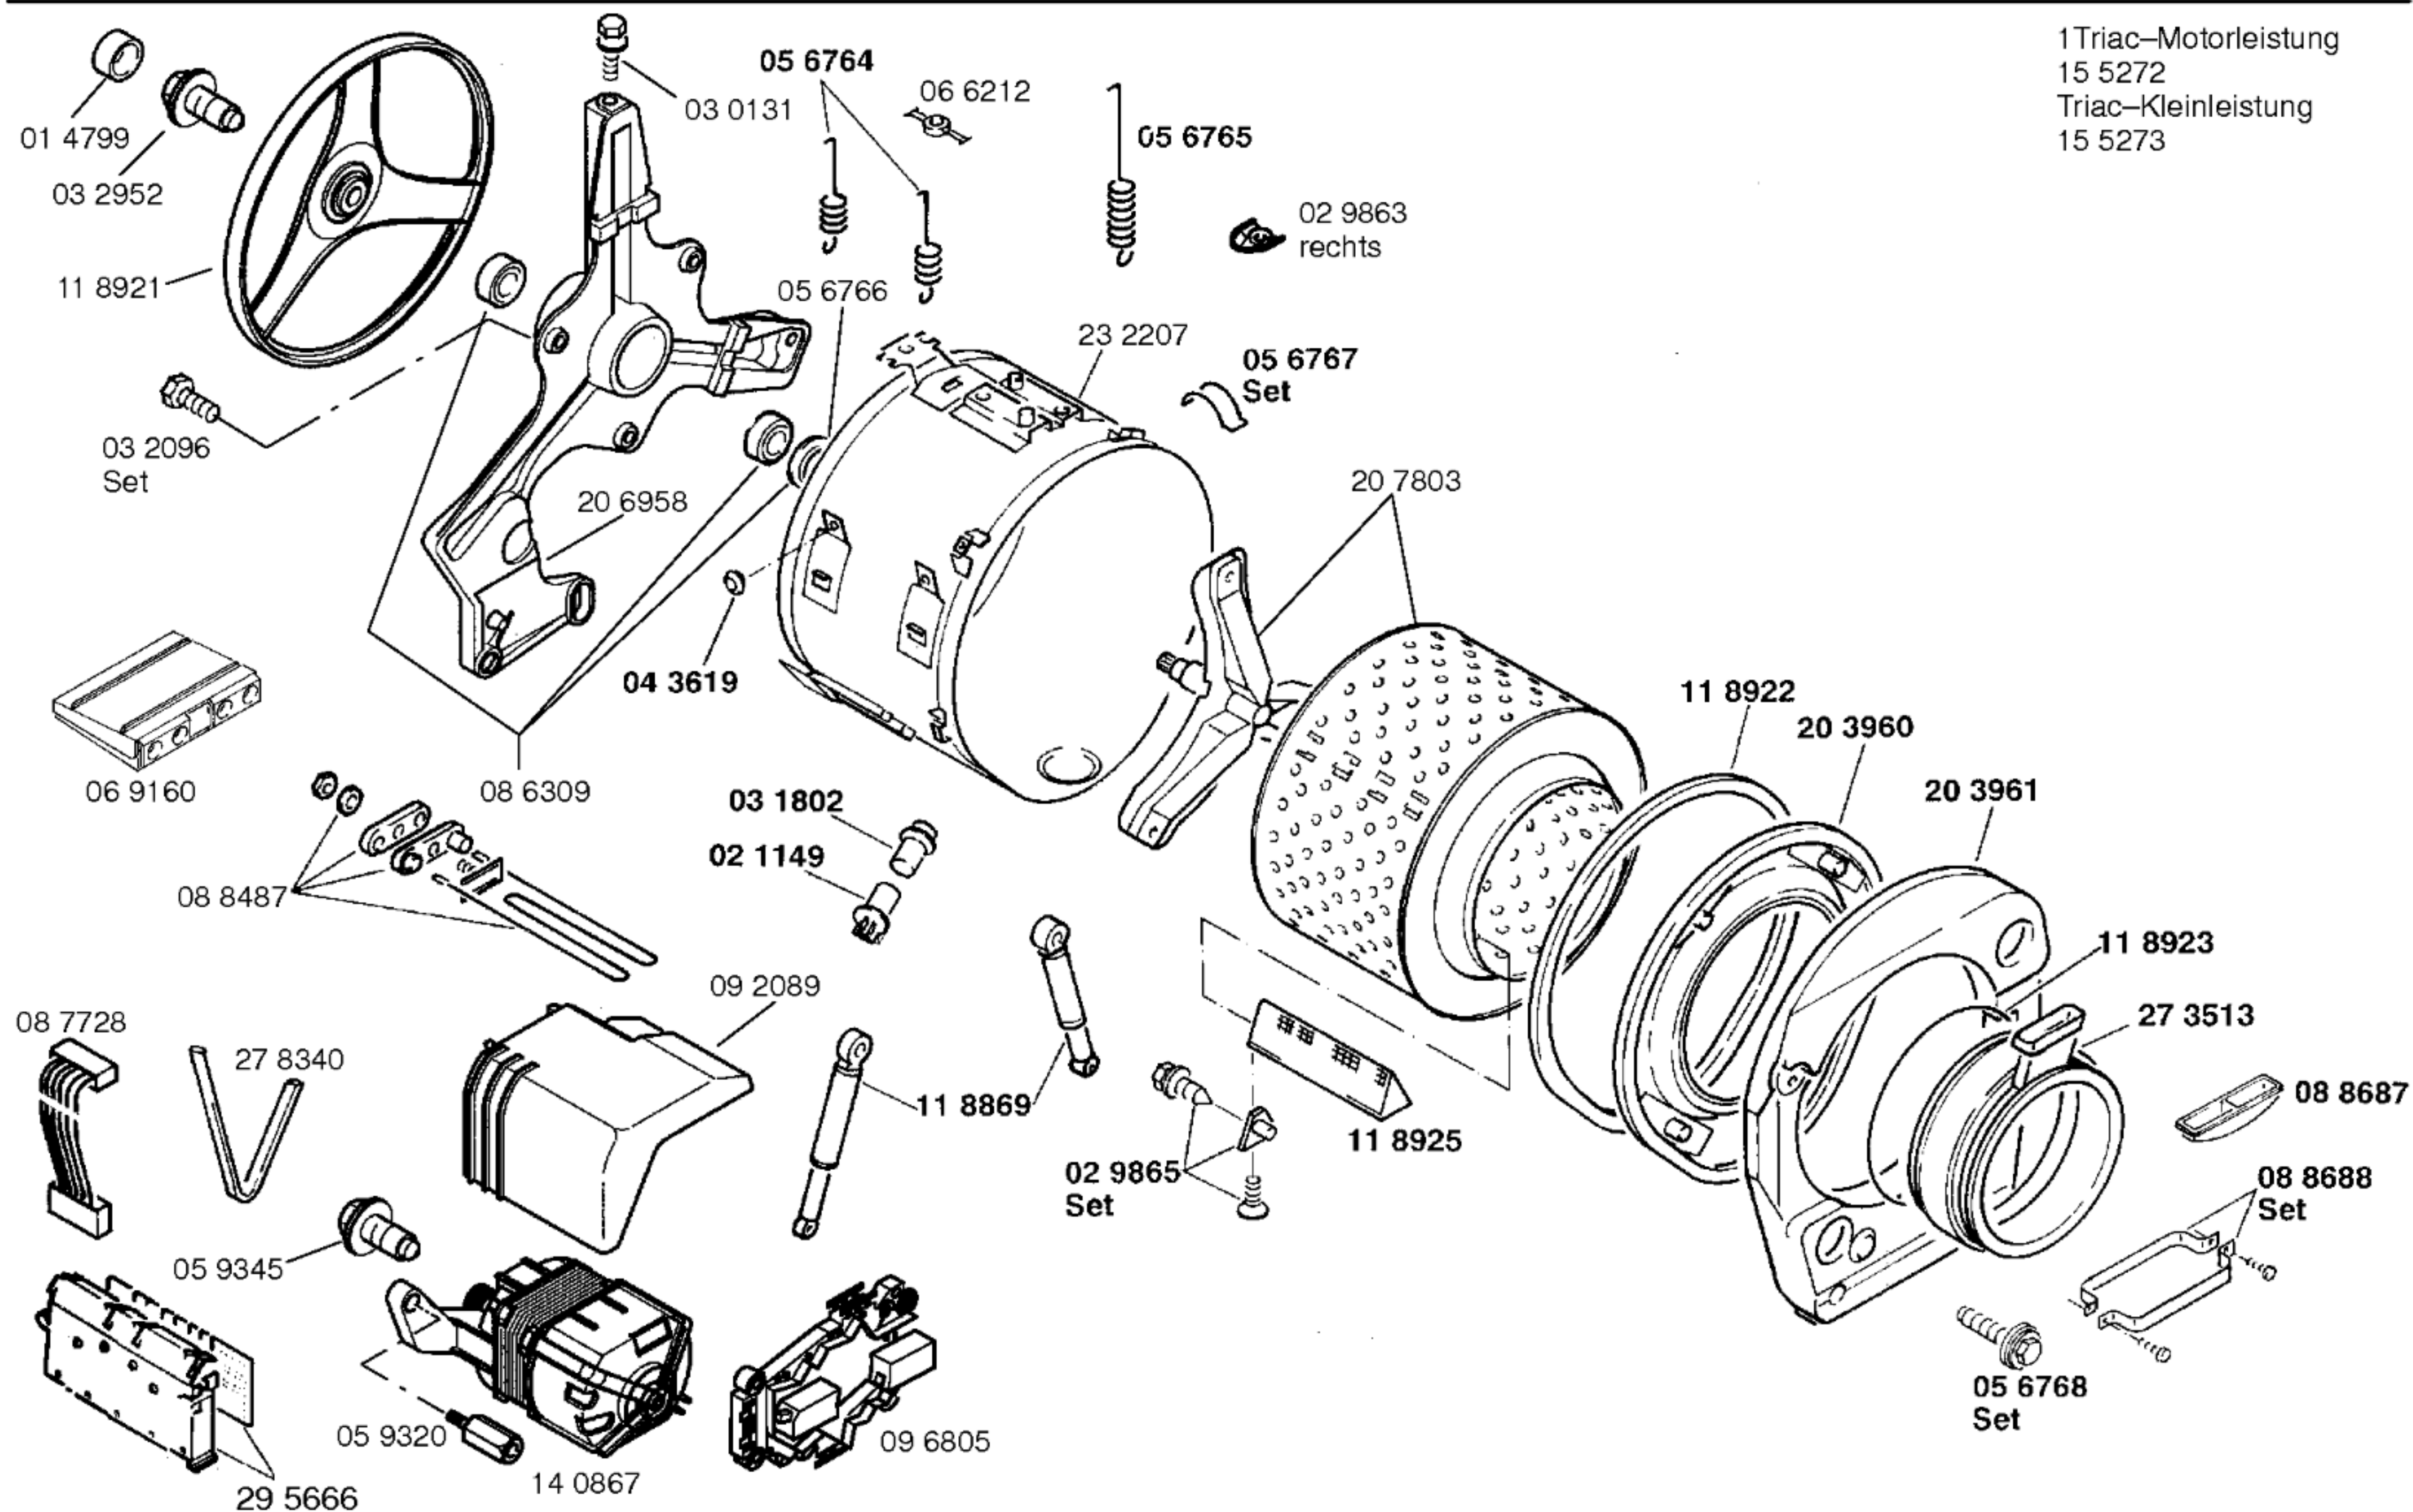

1 Triac-Motorleistung
15 5272
Triac-Kleinleistung
15 5273

