 


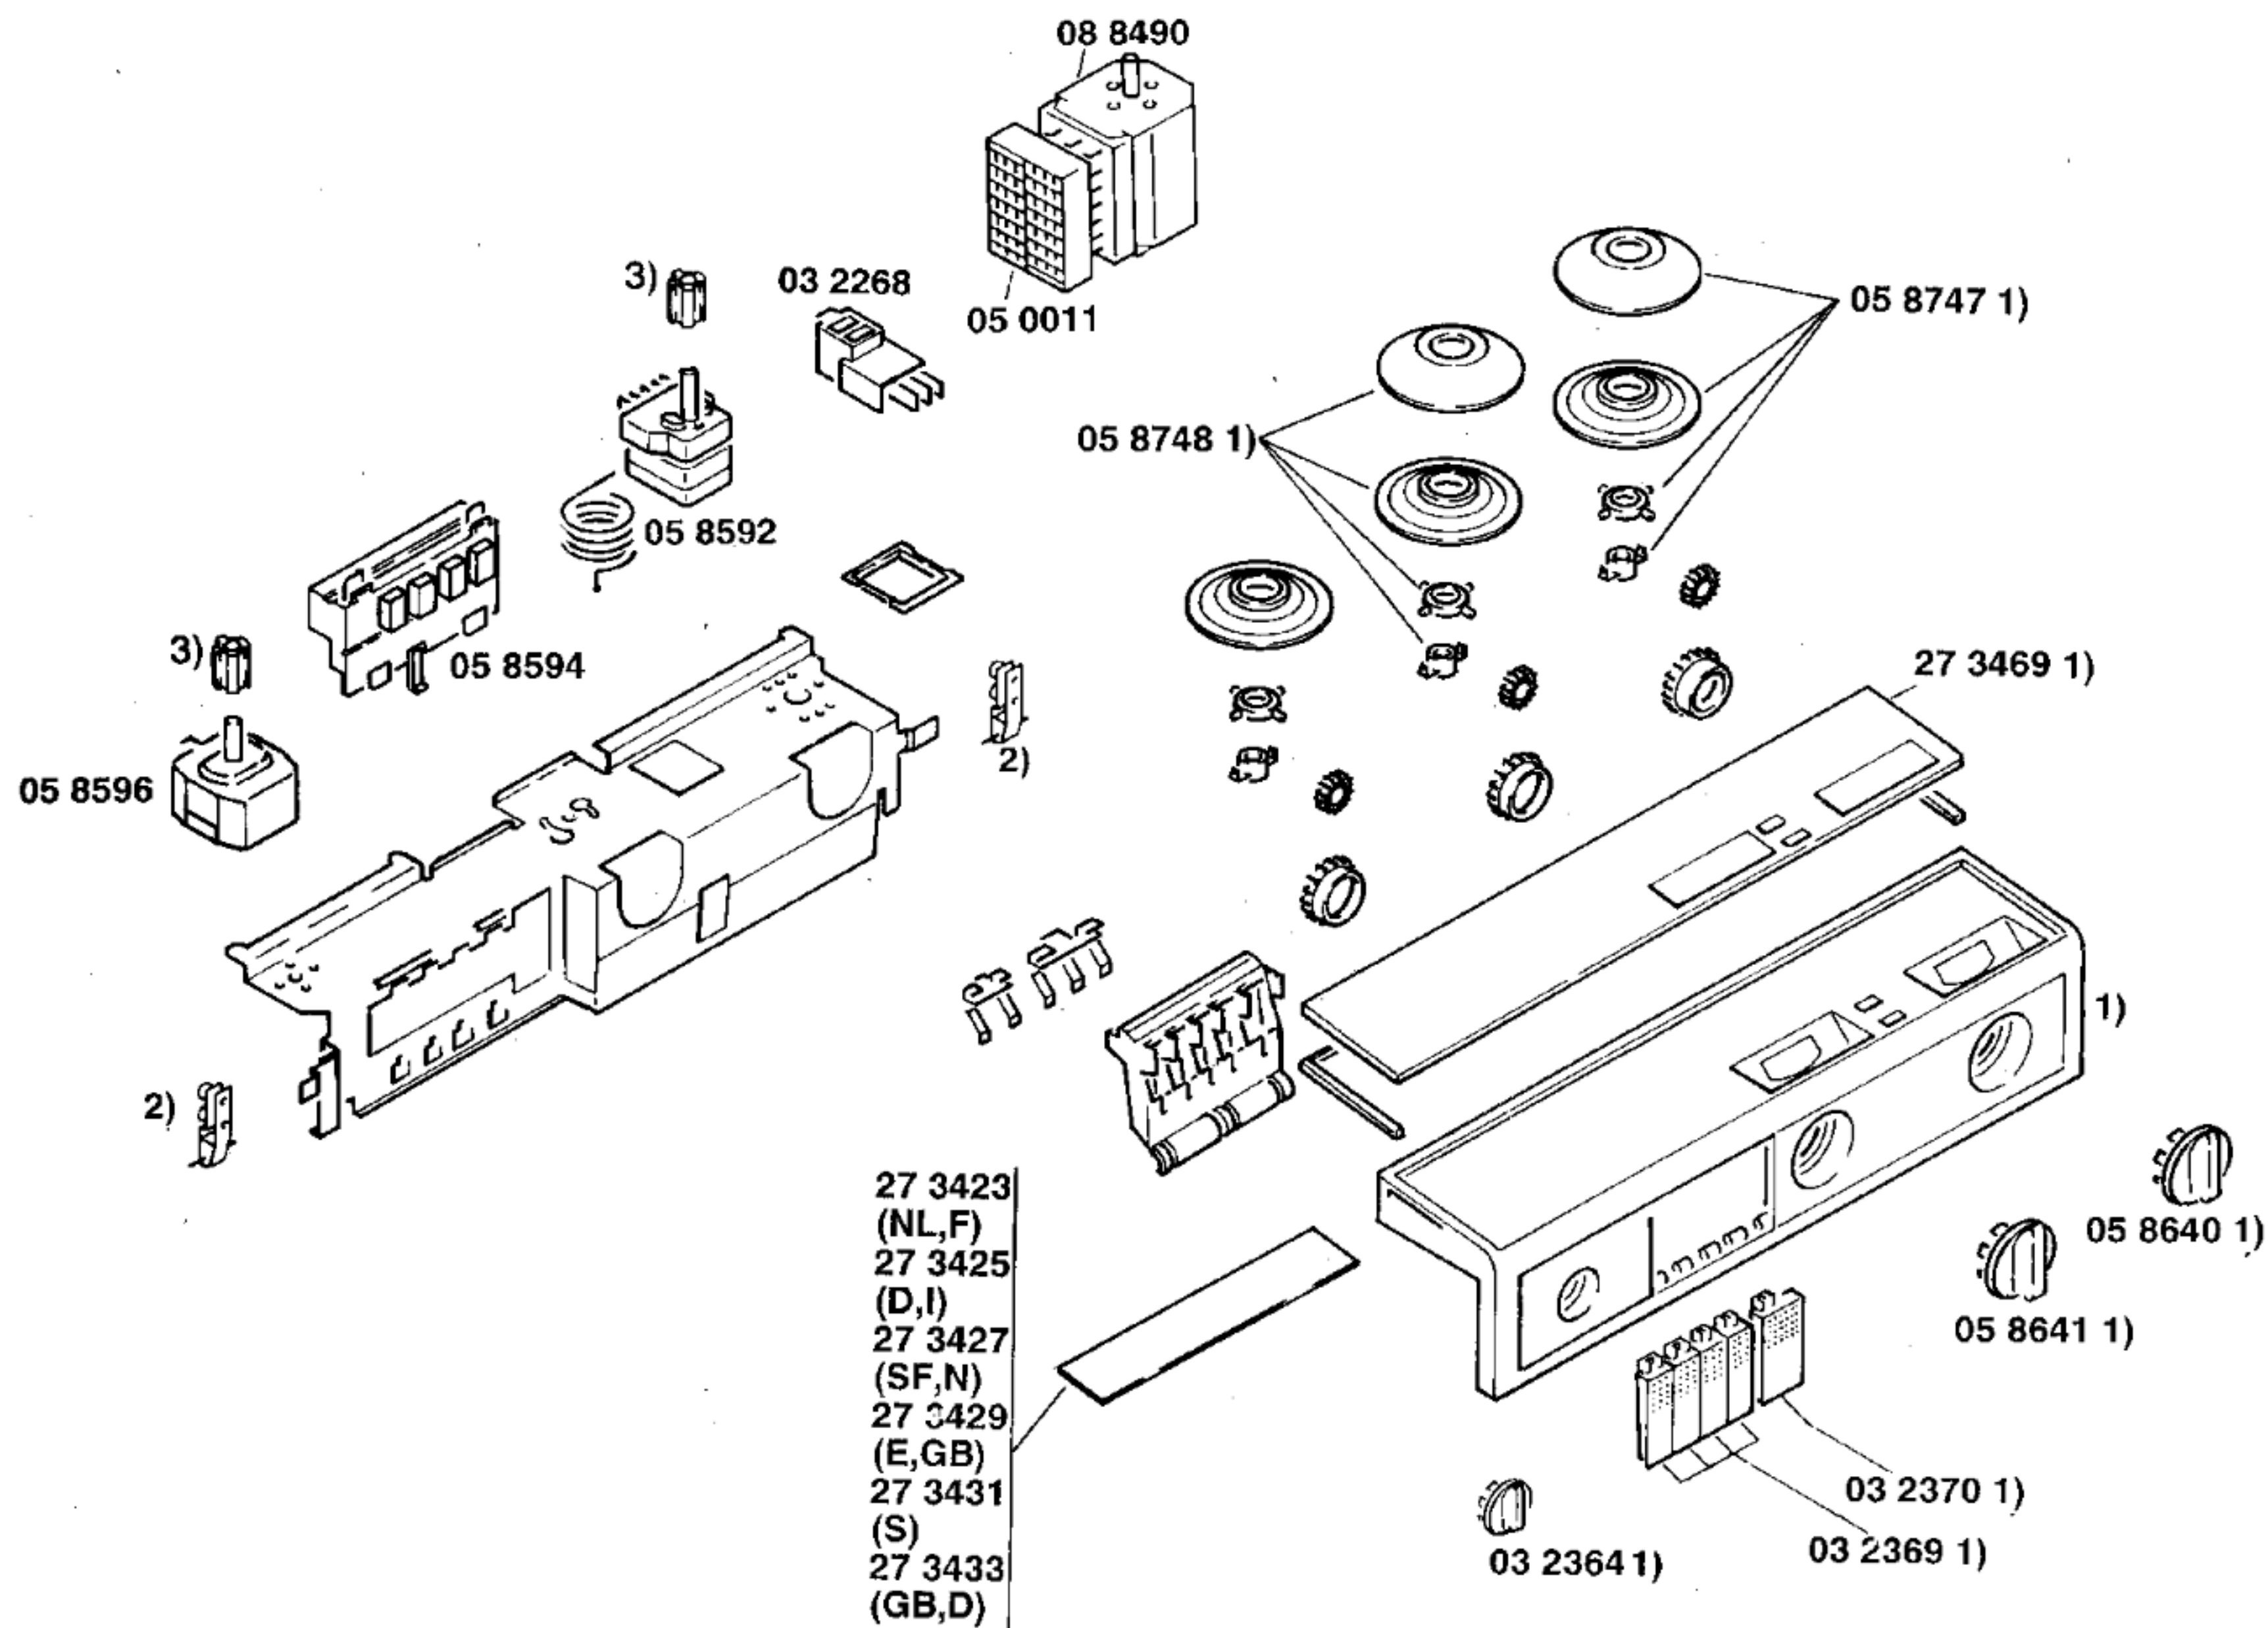

Gebrauchsanweisung

51 4748
(GB,F,E,NL)
51 4749
(D,I,SF,N,S)

Aufstellanweisung

 
51 4750
(D,GB,F,I,NL,E)
51 4934
(D,I,SF,N,S)

Programmtabelle

51 4753
(GB,F,E,NL)
51 4754
(D,I,SF,N,S)

1) 27 3468
Blende kompl.
2) 03 2288
3) 05 9694

46 0038
Entkalker

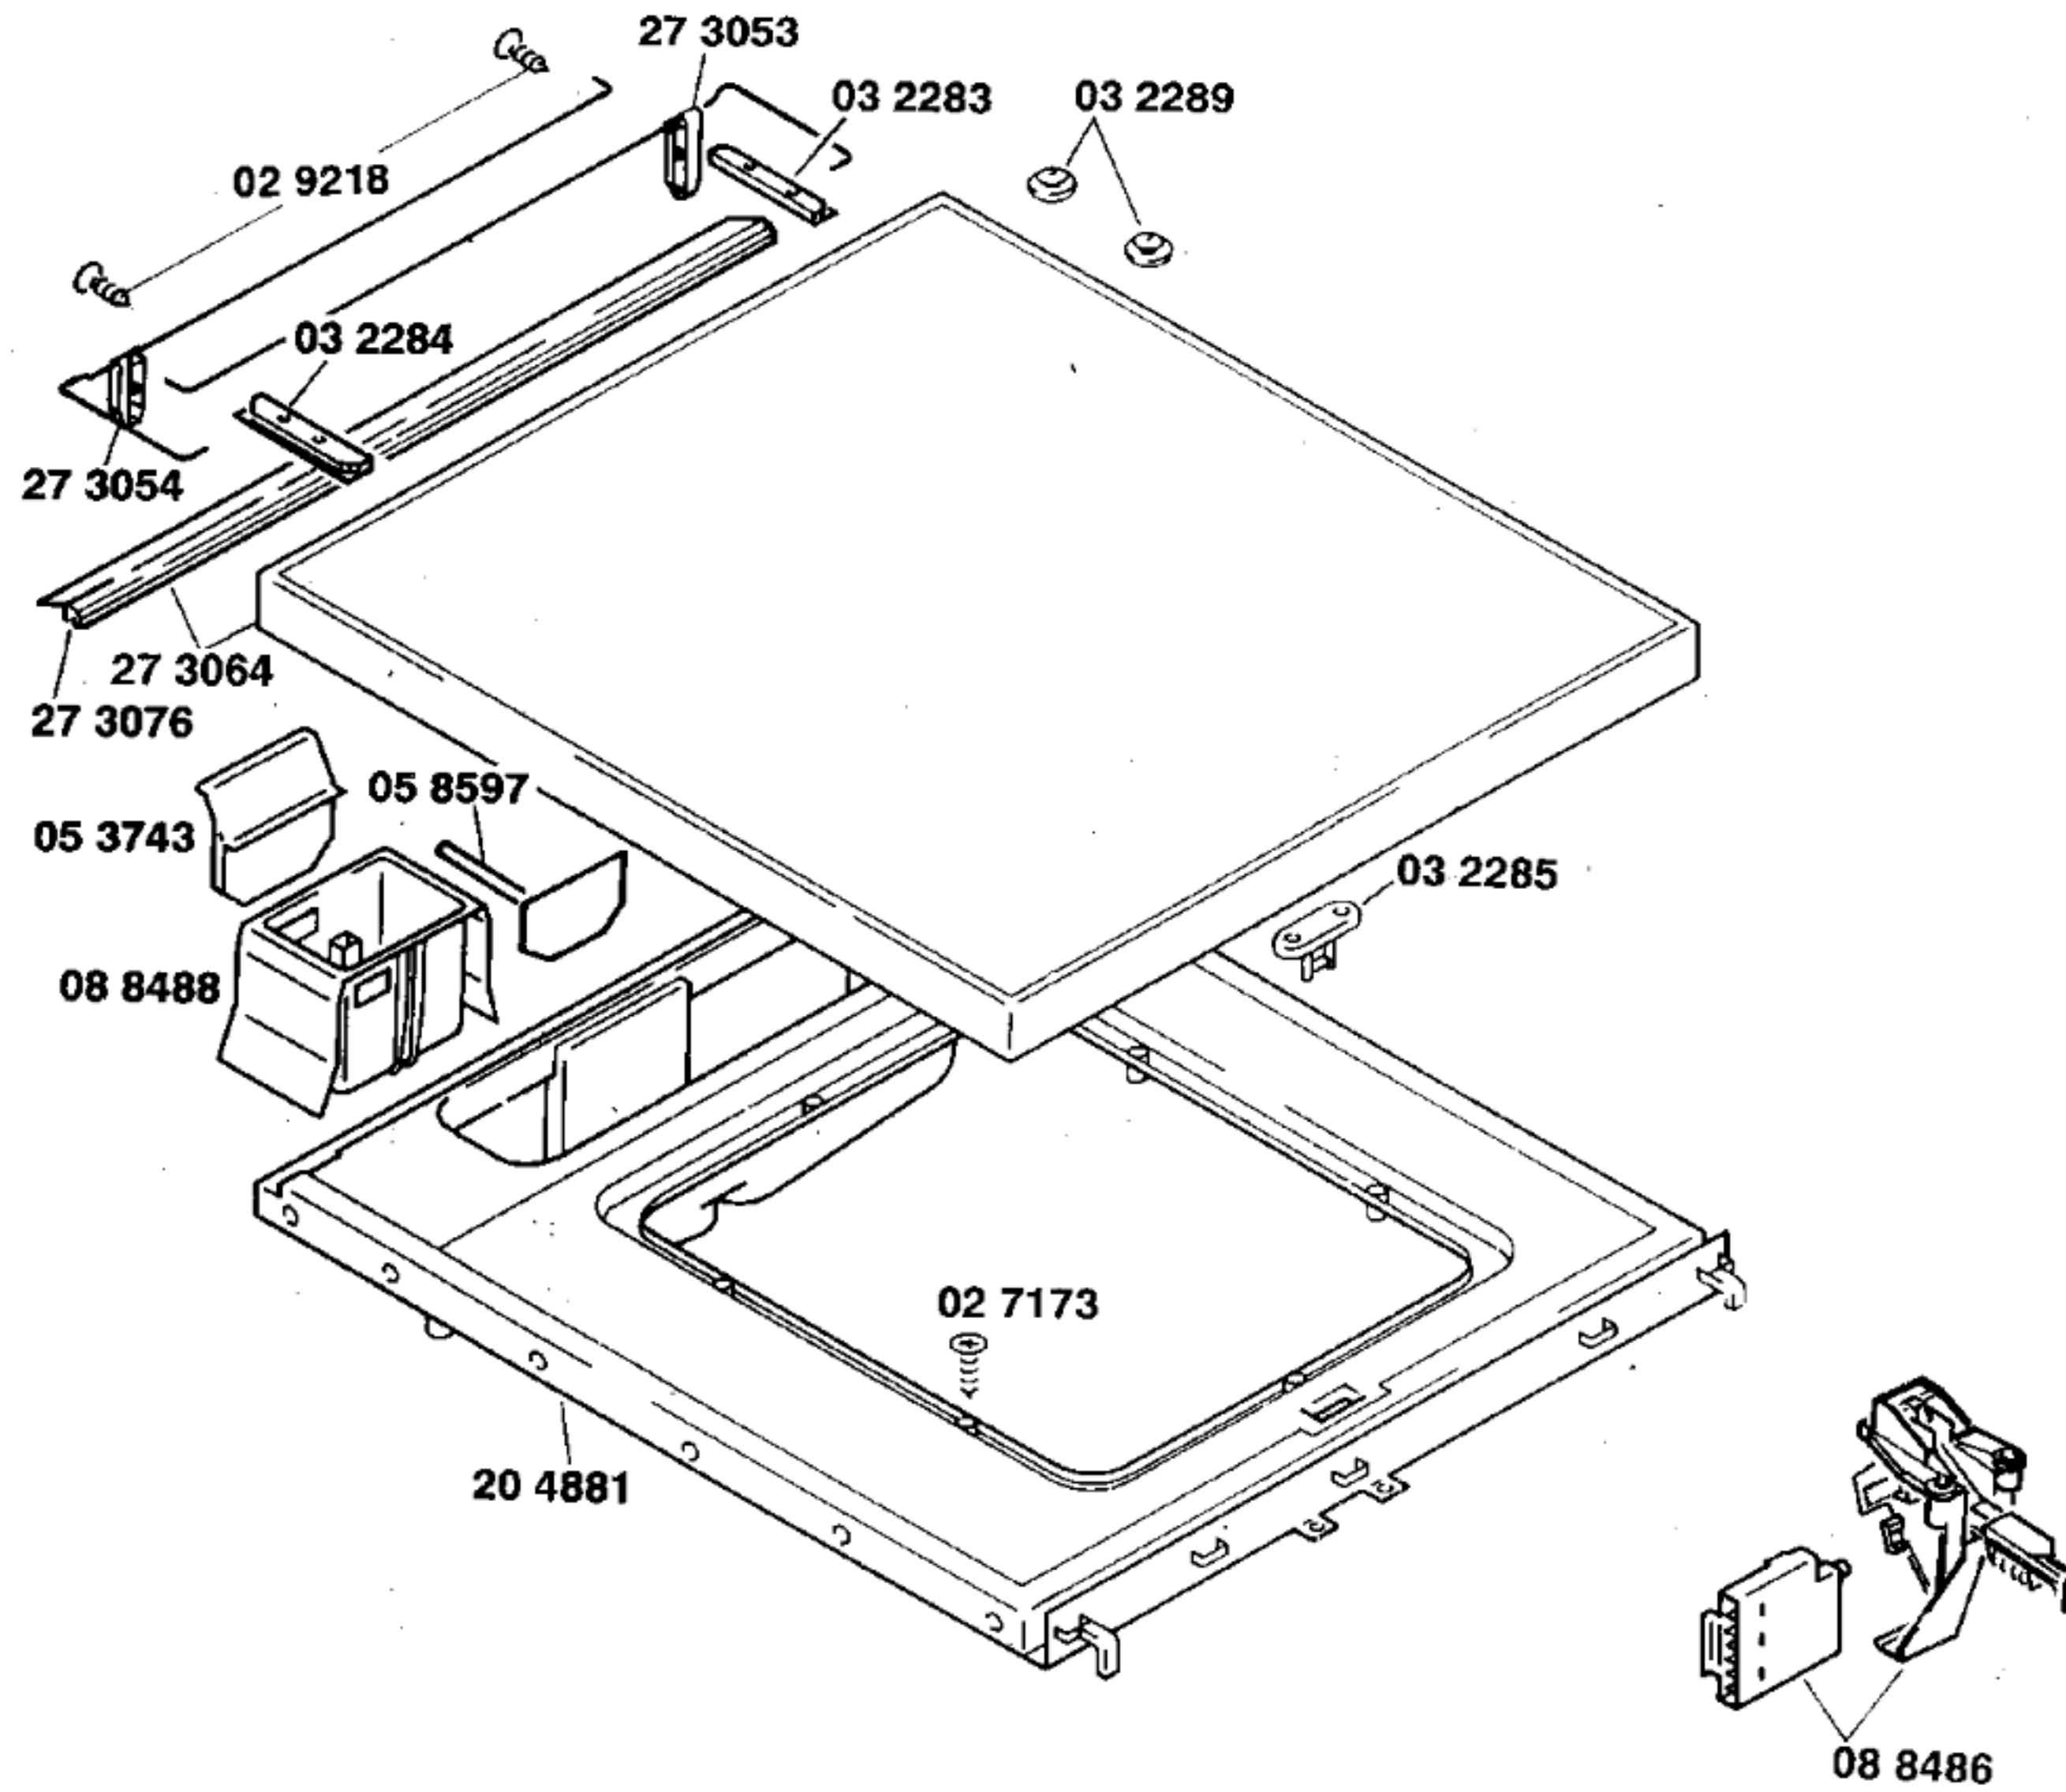

Zubehör:
Bodenbefestigung
WX 9756
Wäsche-Top
WZ 10120

