



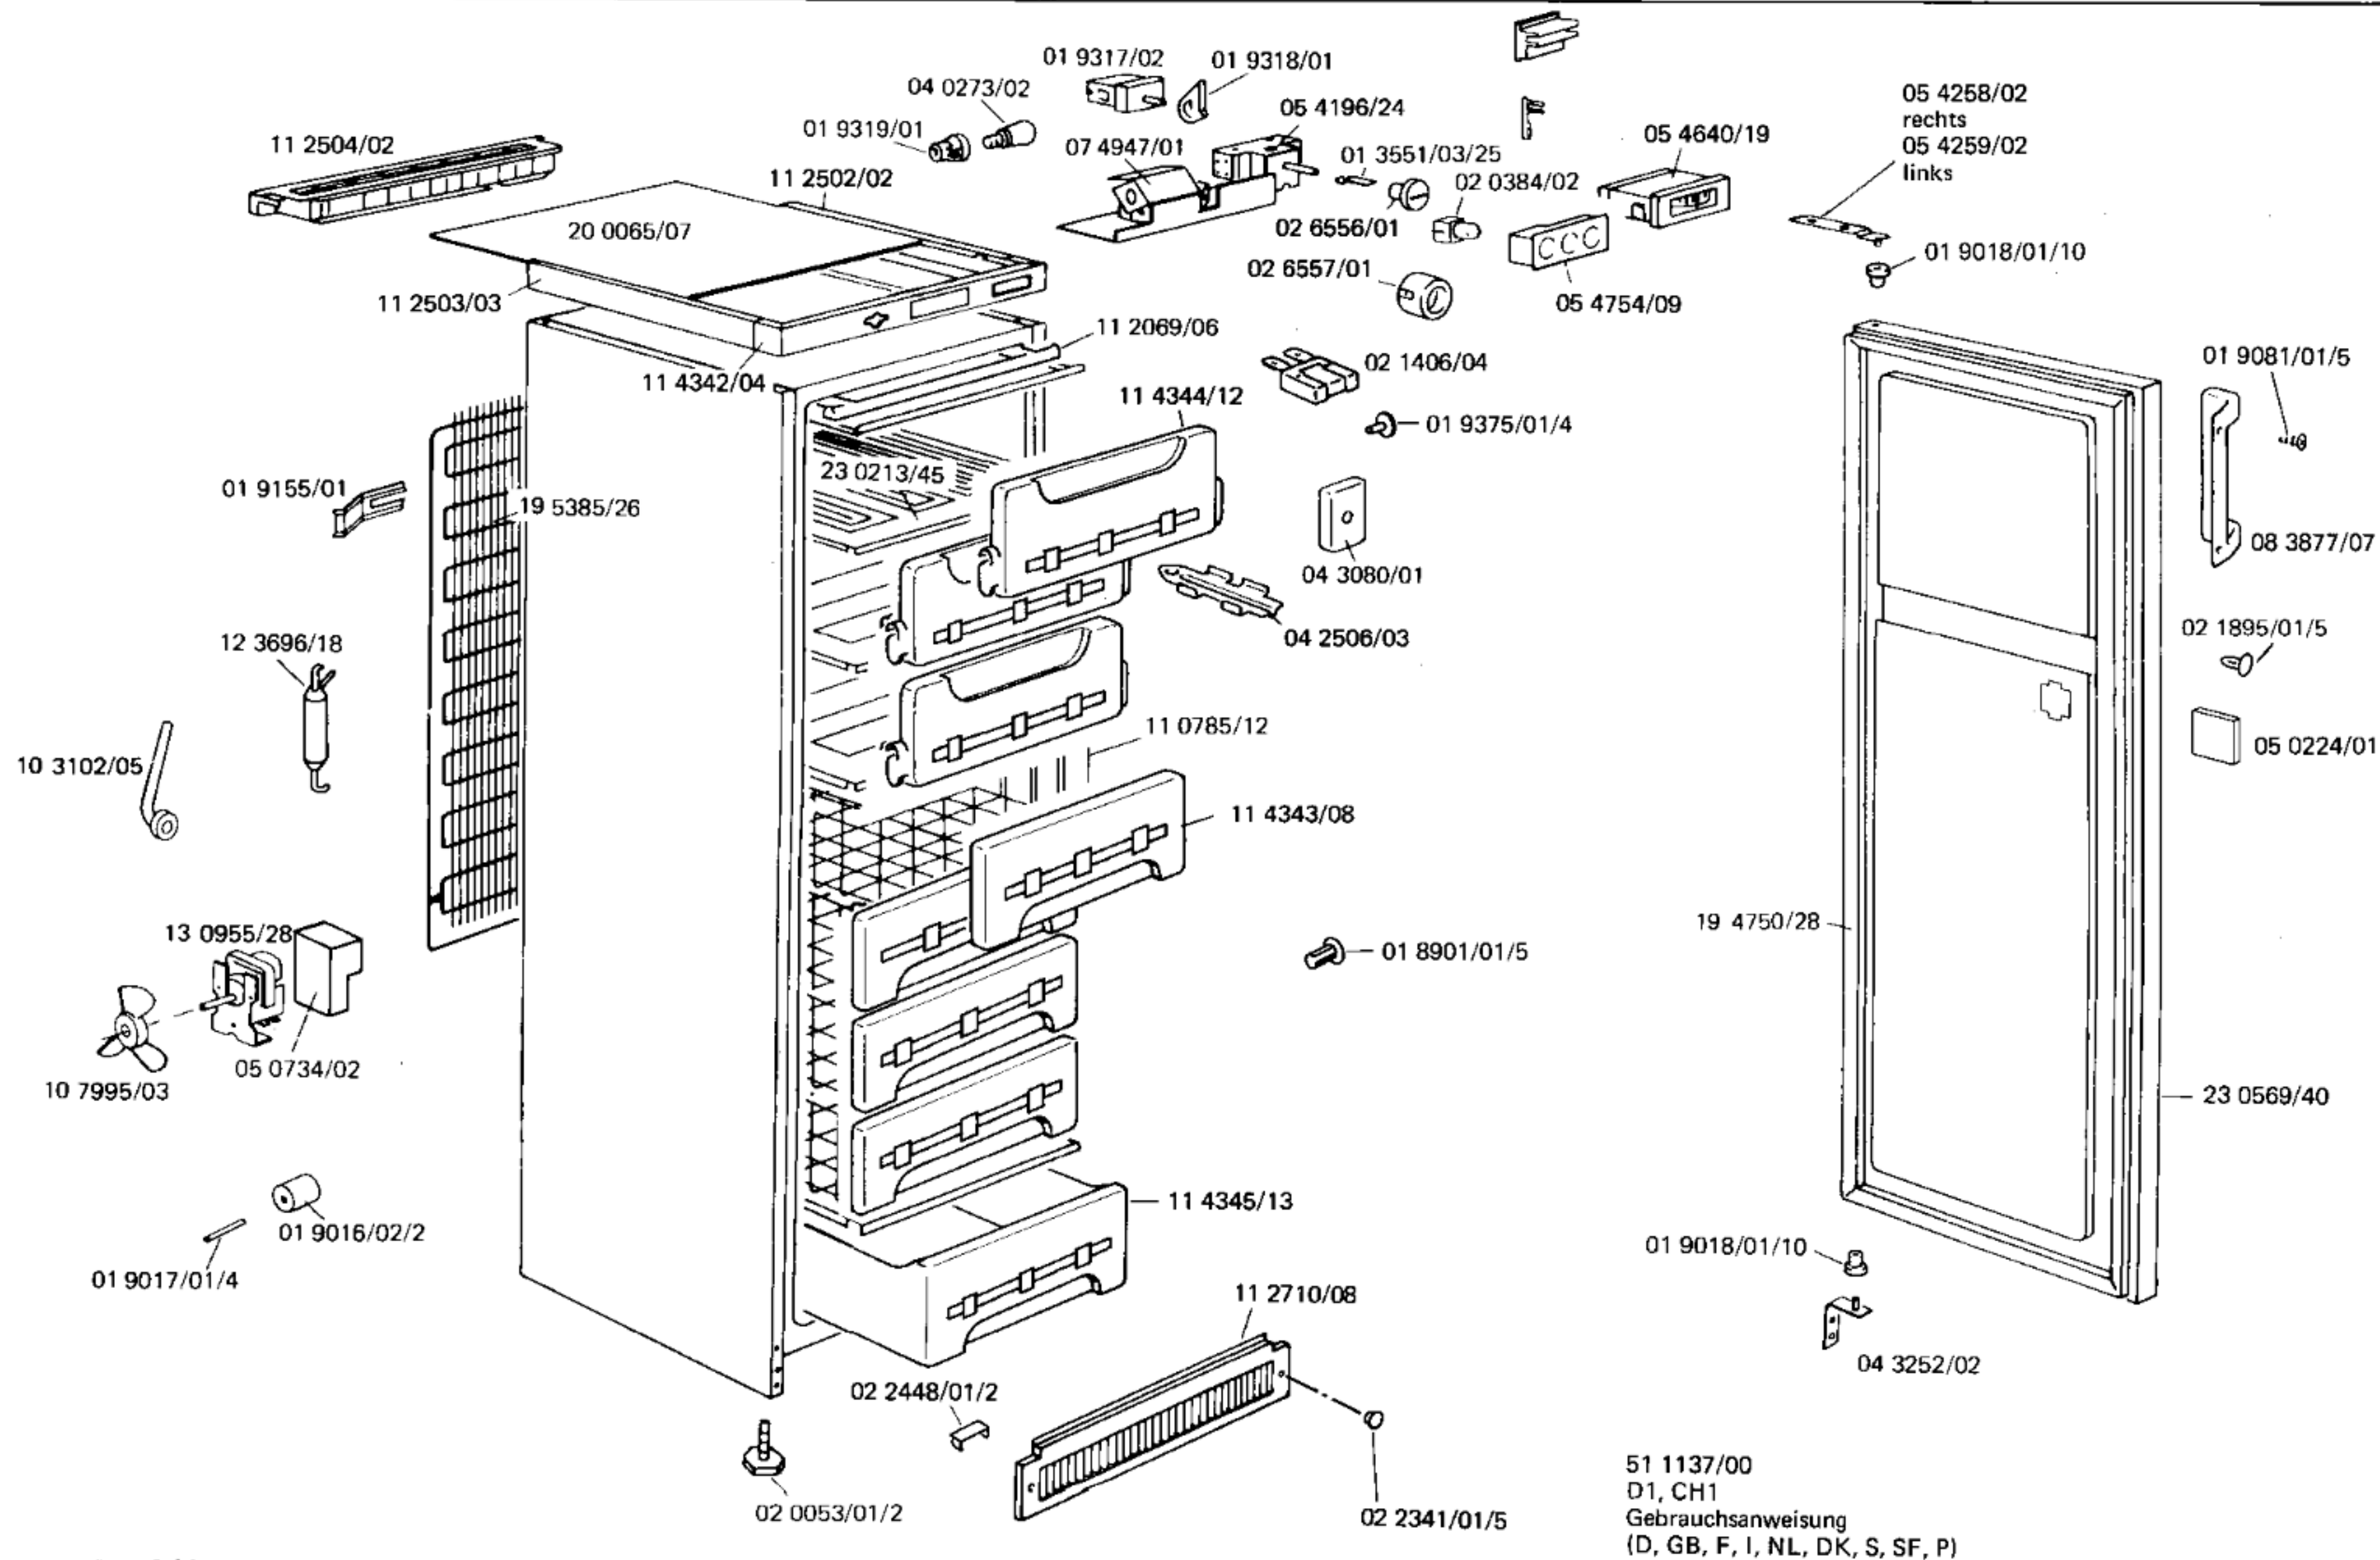

51 1137/00
D1, CH1
Gebrauchsanweisung
(D, GB, F, I, NL, DK, S, SF, P)

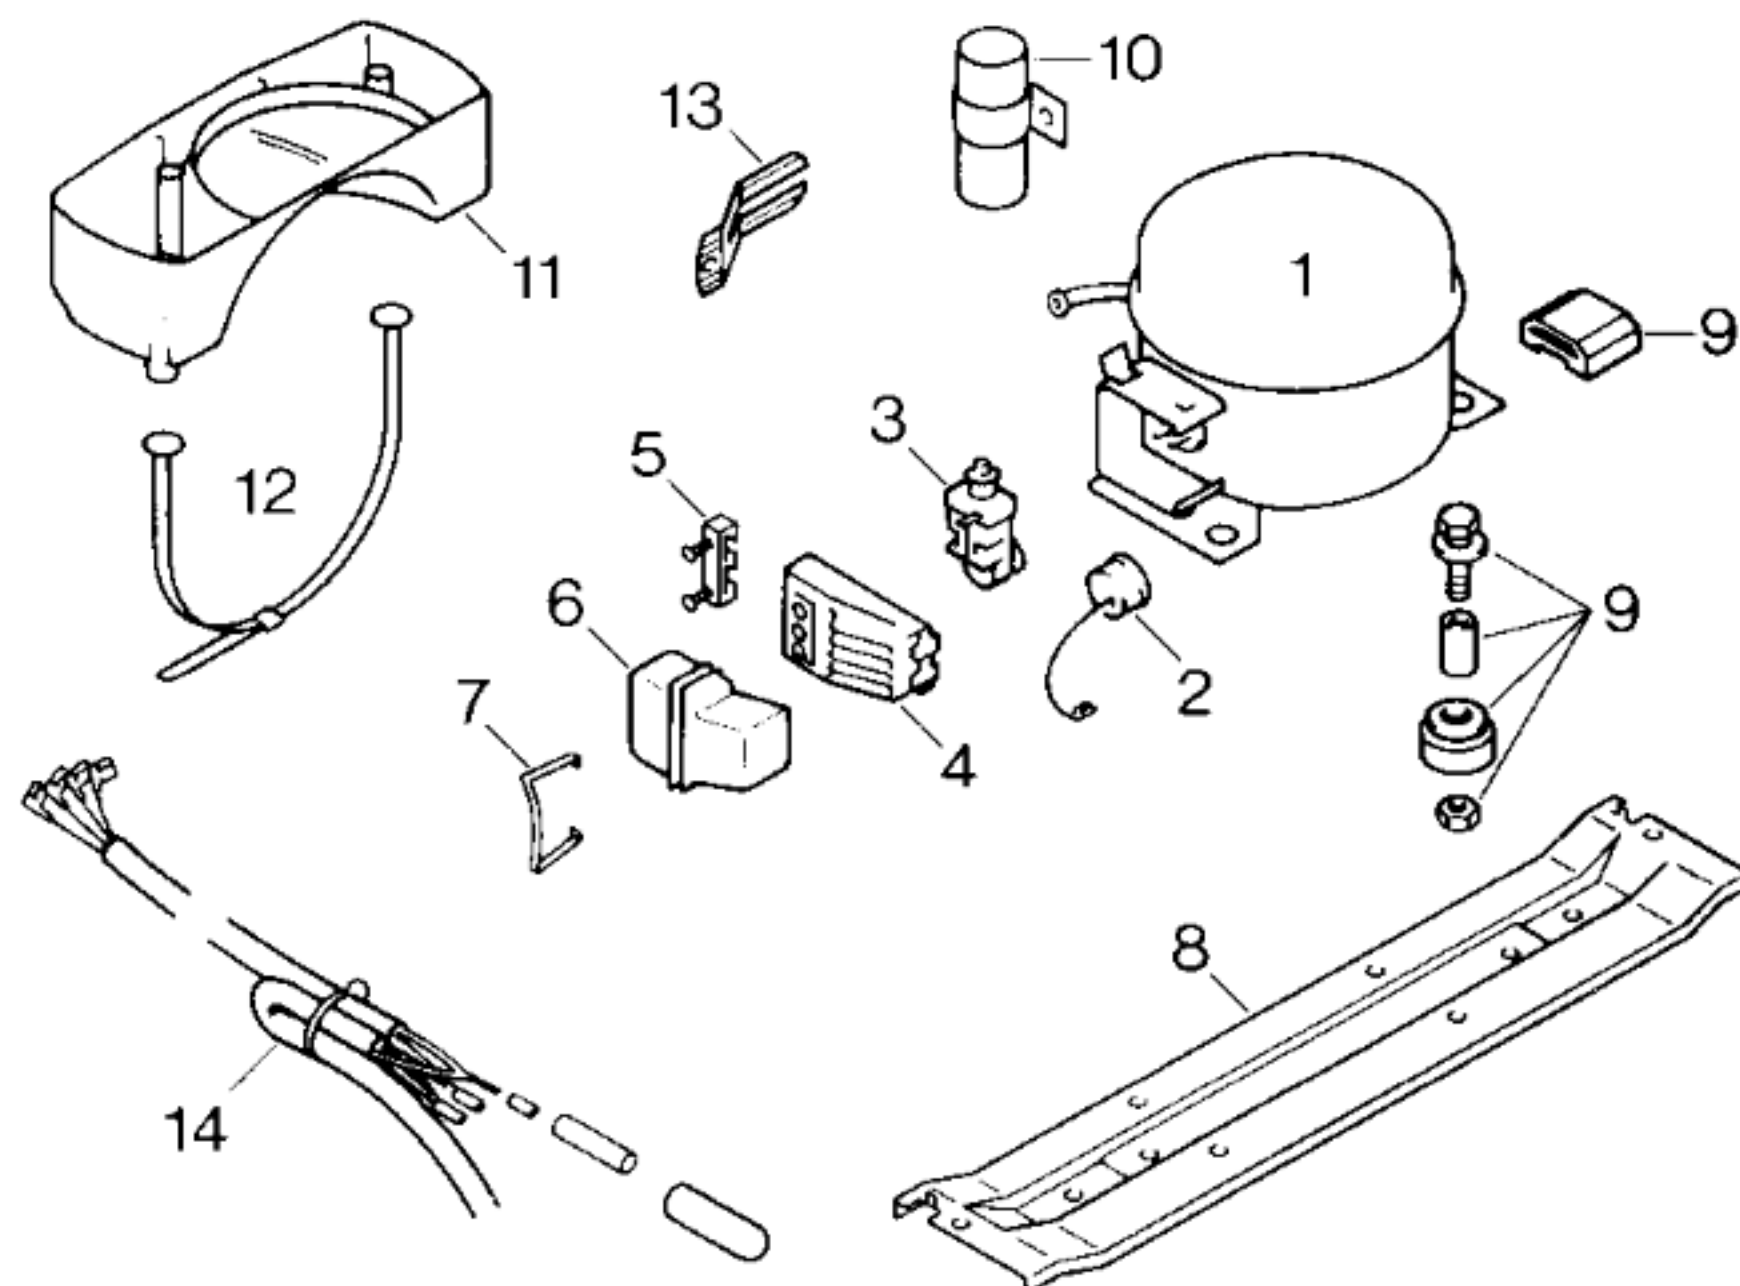

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita				
Typ/Type		FN 91 F 17 S				
Förderleistung/Delivery/Débit	l/h	1630				
Anlaufstrom/Starting current/Cour. de démarrage	A	10,7				
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	9,0			
	Hi/aux	Ω	51,1			
Temp.-Regler/Thermostat		Ranco				
Typ/Type		A 56				
Reglerstellung/Position		kalt	warm			
Schaltwerte/Switching values/	„ein“	- 26	- 18			
Valeurs de commutation	„aus“	- 34	- 24			
	(„abtauen“ od.)	„alarm“	- 20	- 13		
Füllmenge/Fill.quantity/Charge	R12	g	220			
Anschlußwert/Conn.load/Puiss. connectée		W	190			
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance	Ω					
Leistung/Power/Puissance	W					
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance	Ω	178				
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance	Ω					
Spannung/Voltage/Tension	V					

Pos.	Matsushita			
1	14 0164/47			
2	02 2118/16			
3	02 2117/16			
4	05 1289/14			
5				
6	15 1289/14			
7	02 1735/01			
8	11 1919/04			
9	05 0166/05			
10				
11				
12				
13				
14				