

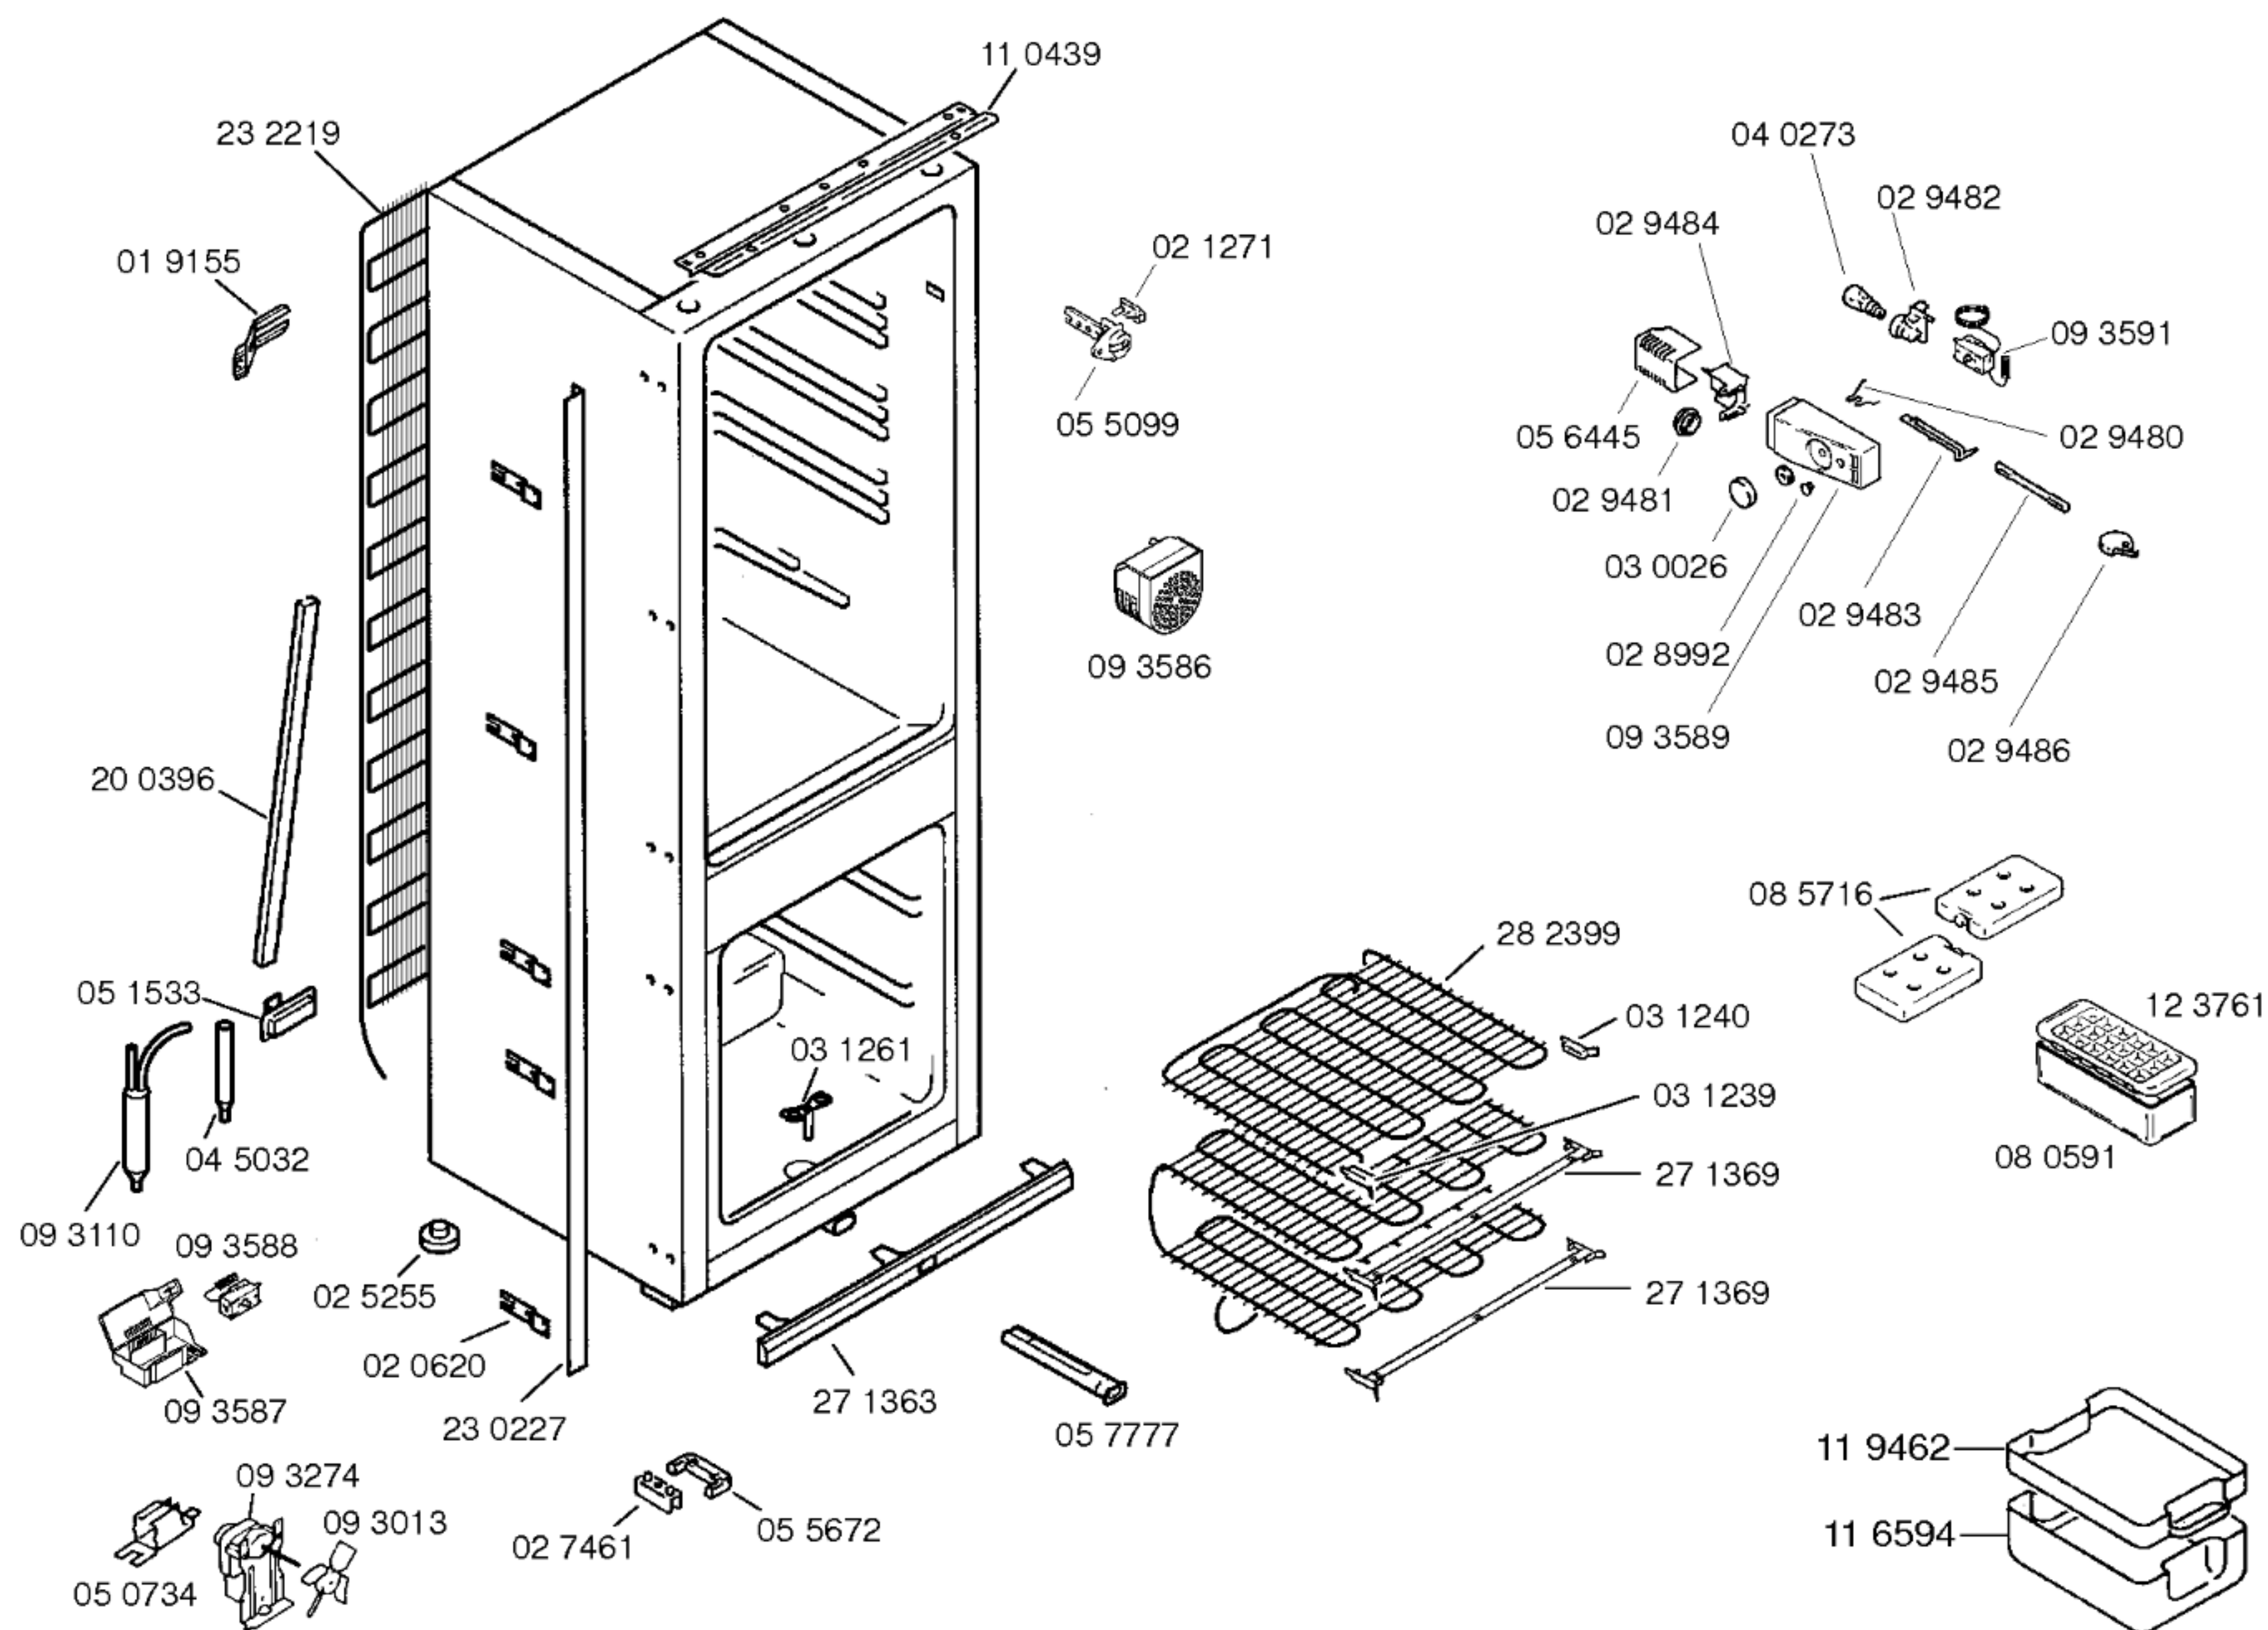
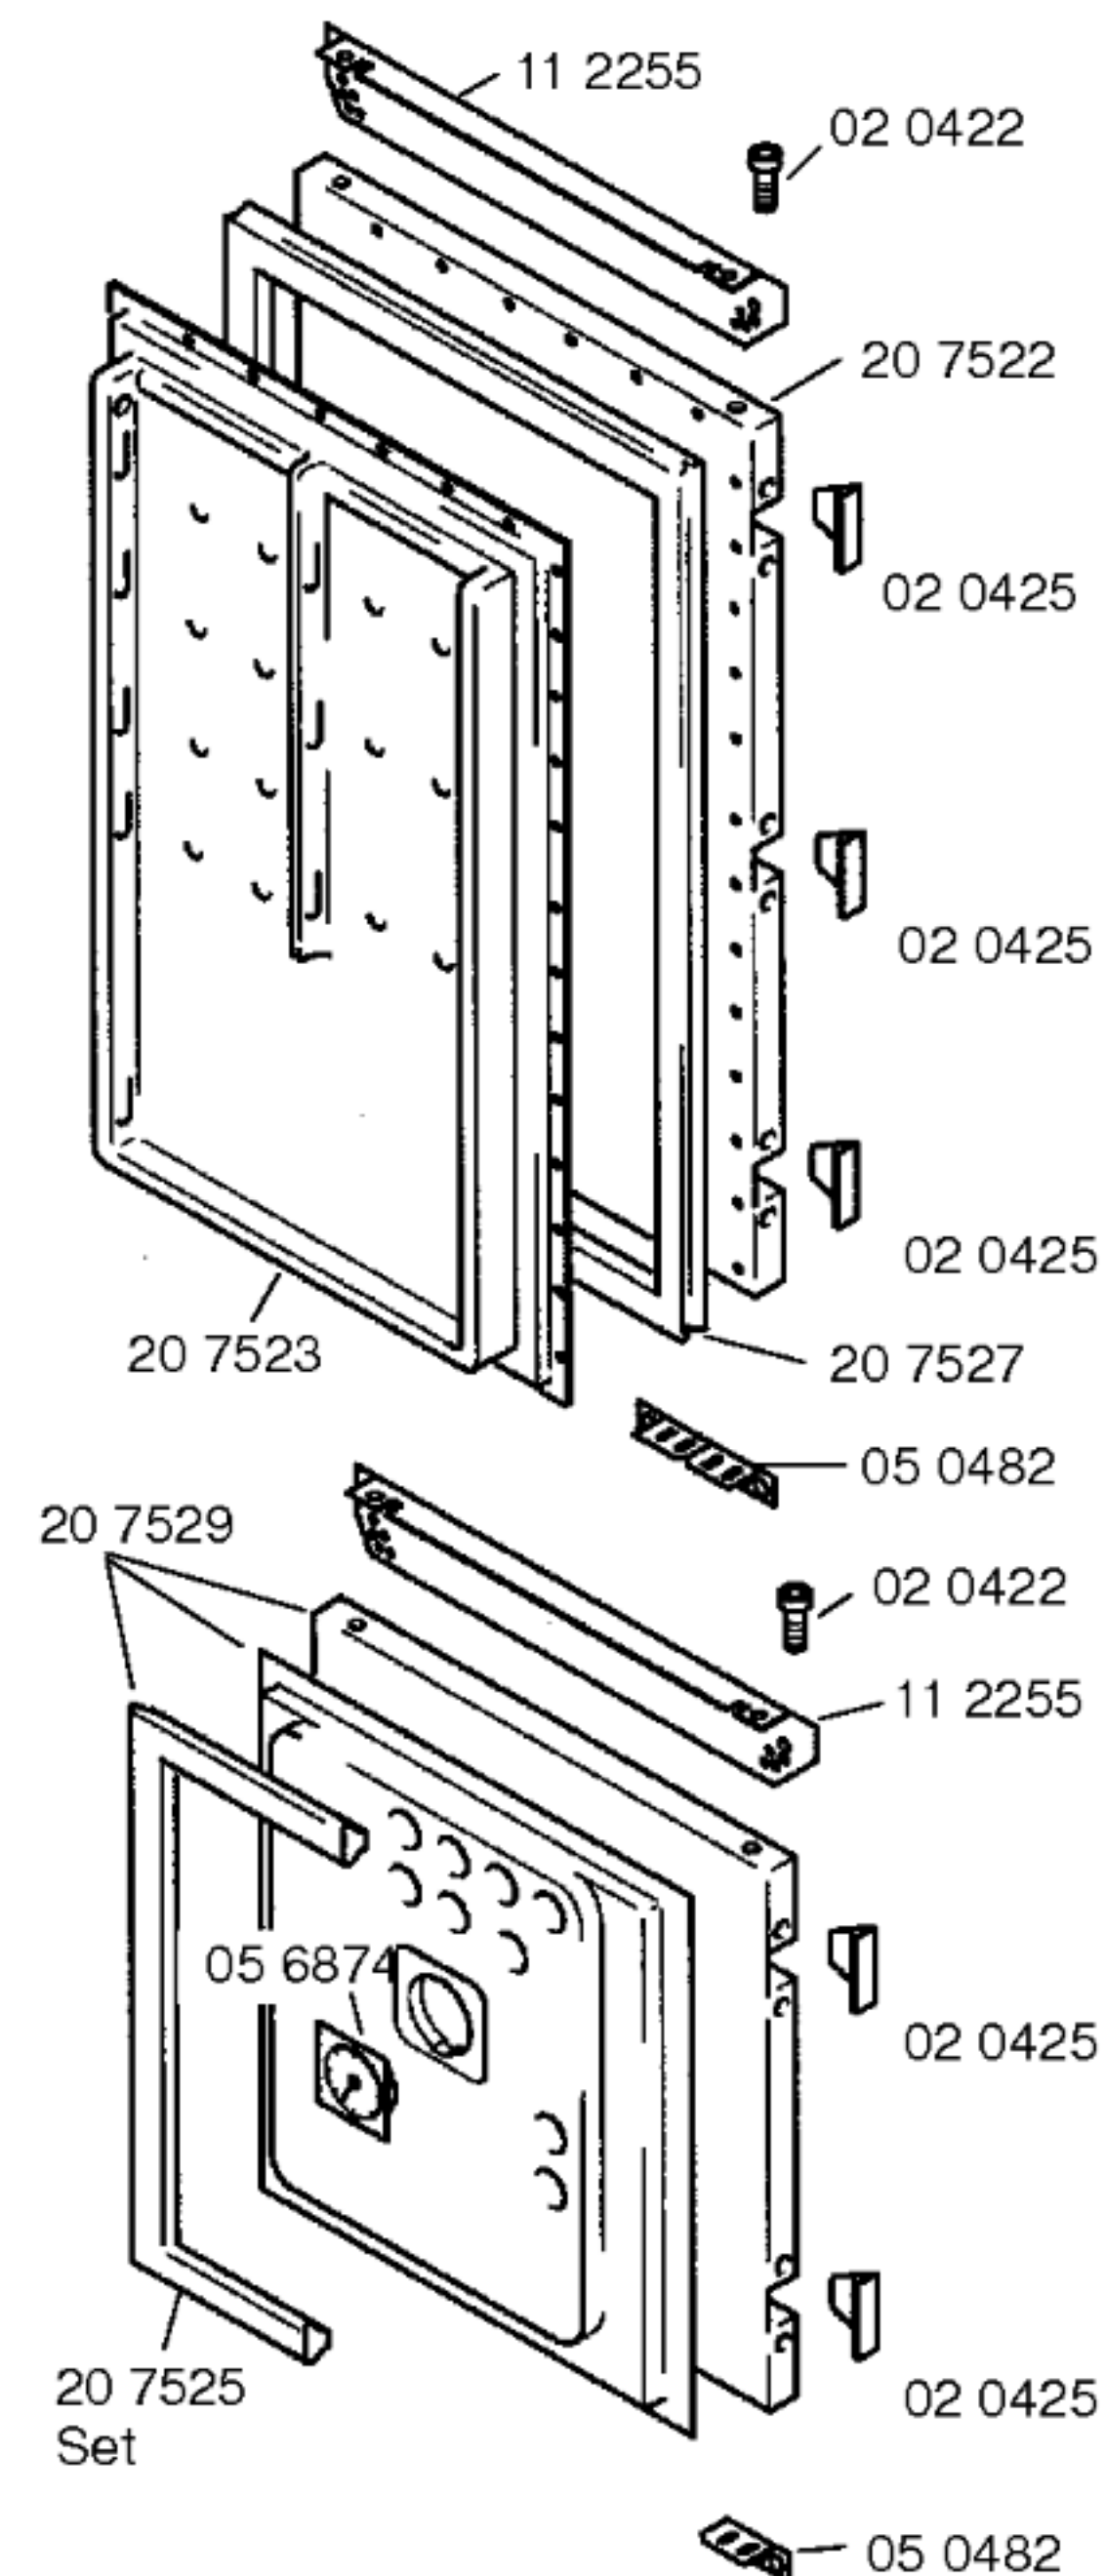
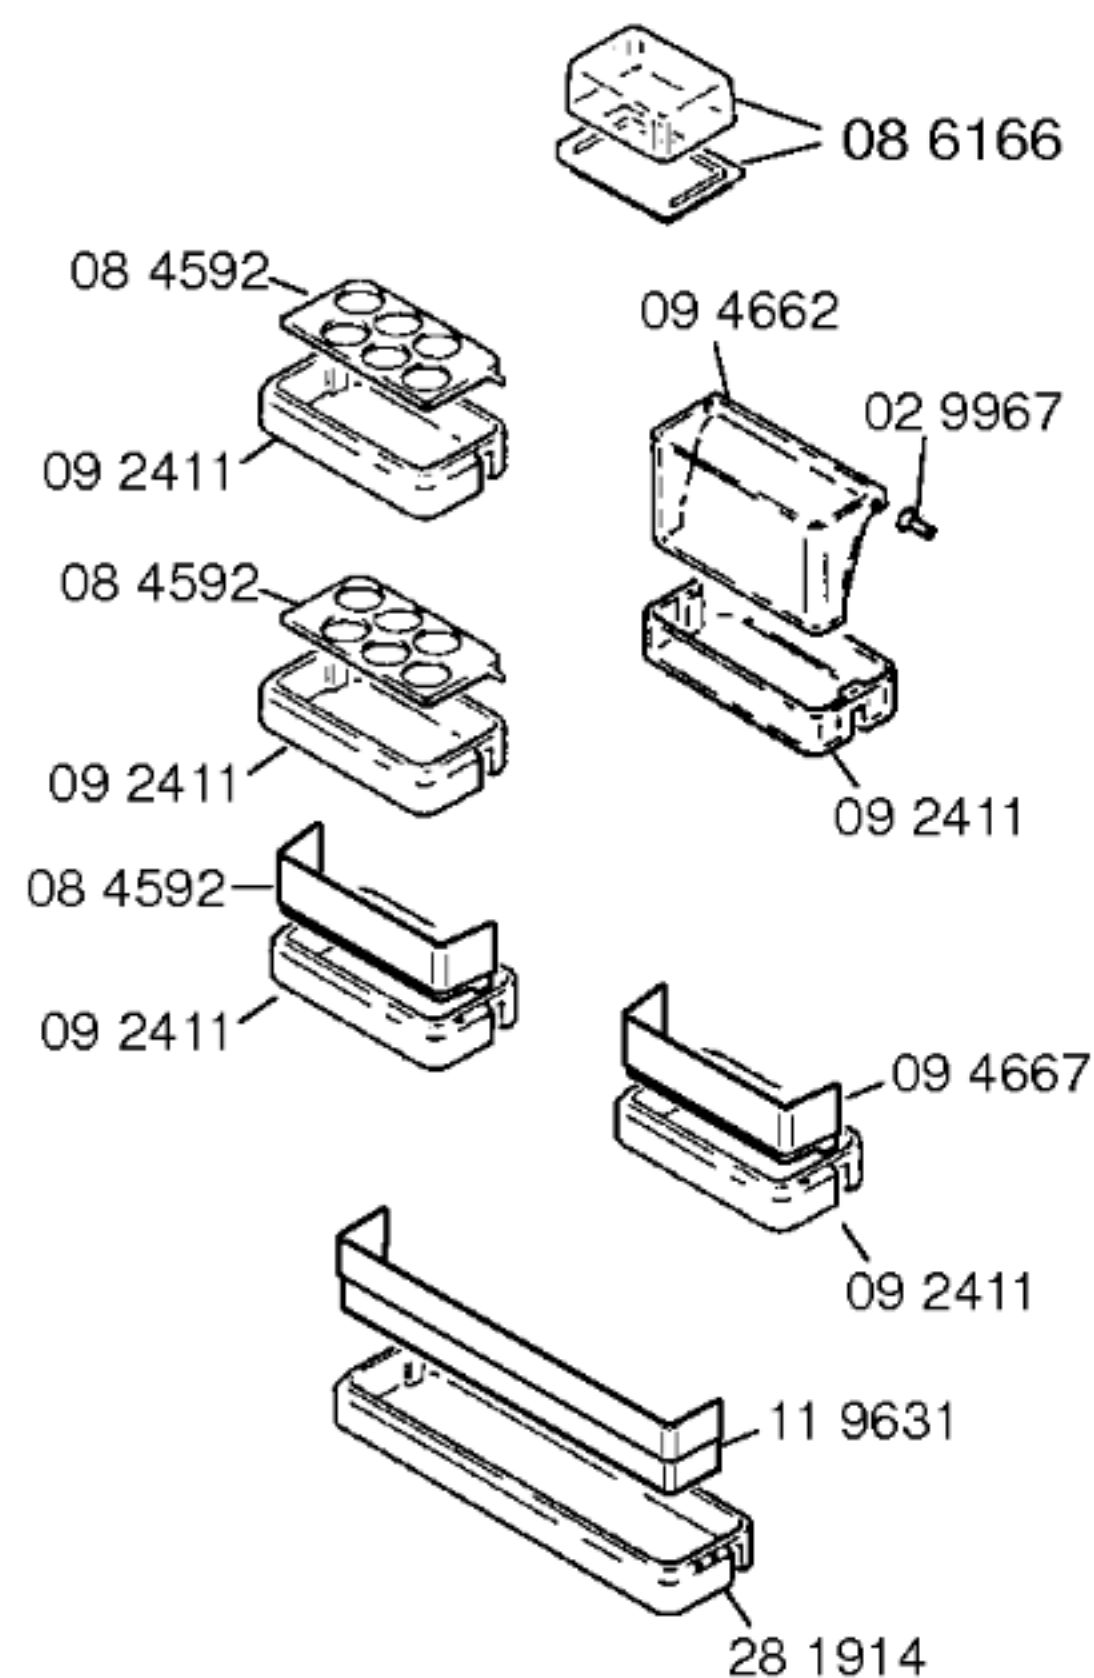


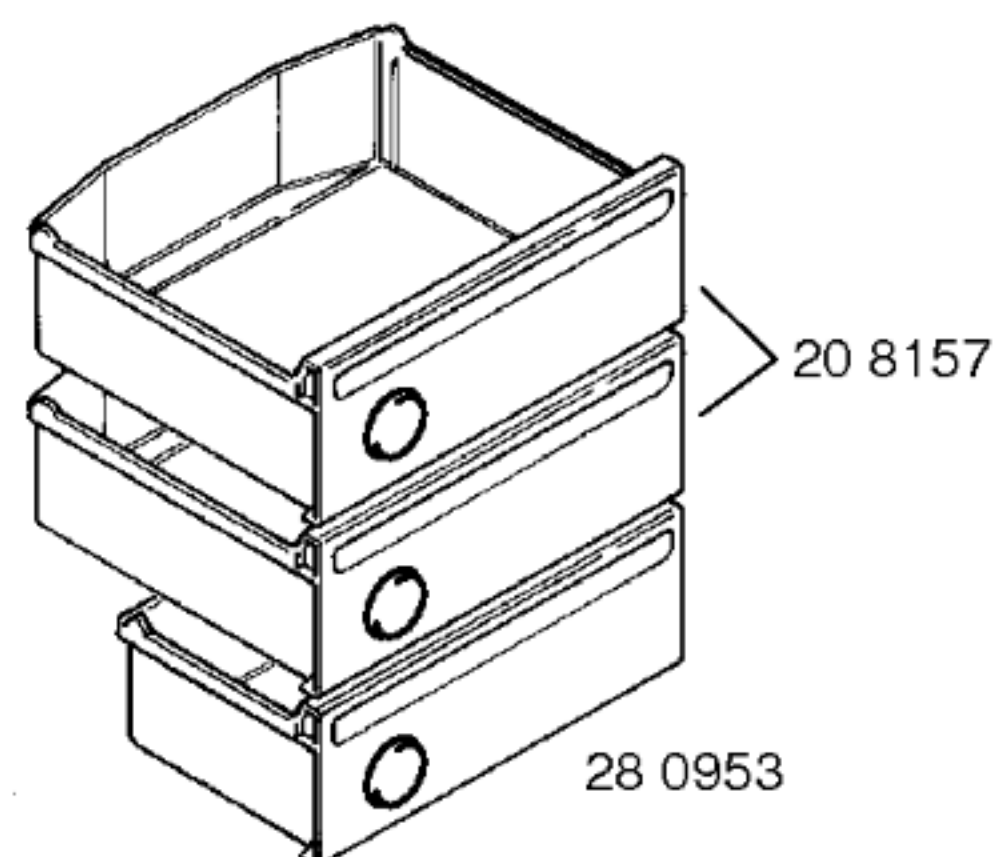


Folleto de instrucciones
51 6905
(D,GB,F,I,NL,S,E,DK,N,,SF)

Instrucciones de montaje
51 5546
(D,GB,F,I,NL,S,E,DK,N,SF)

Juego fijación
08 4137
Juego de tornillos
08 4136

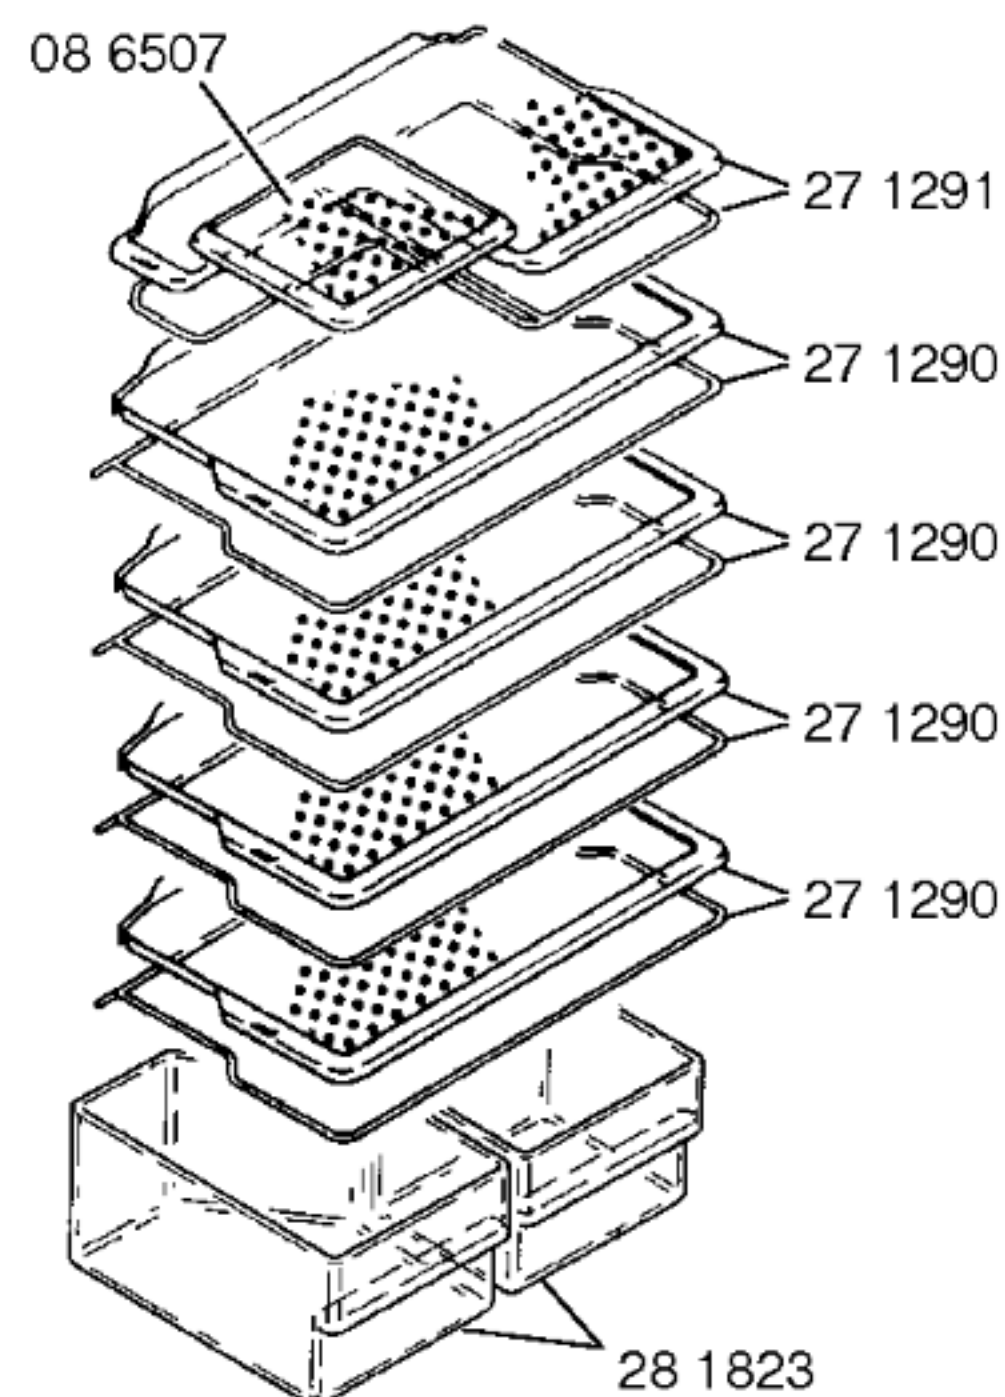

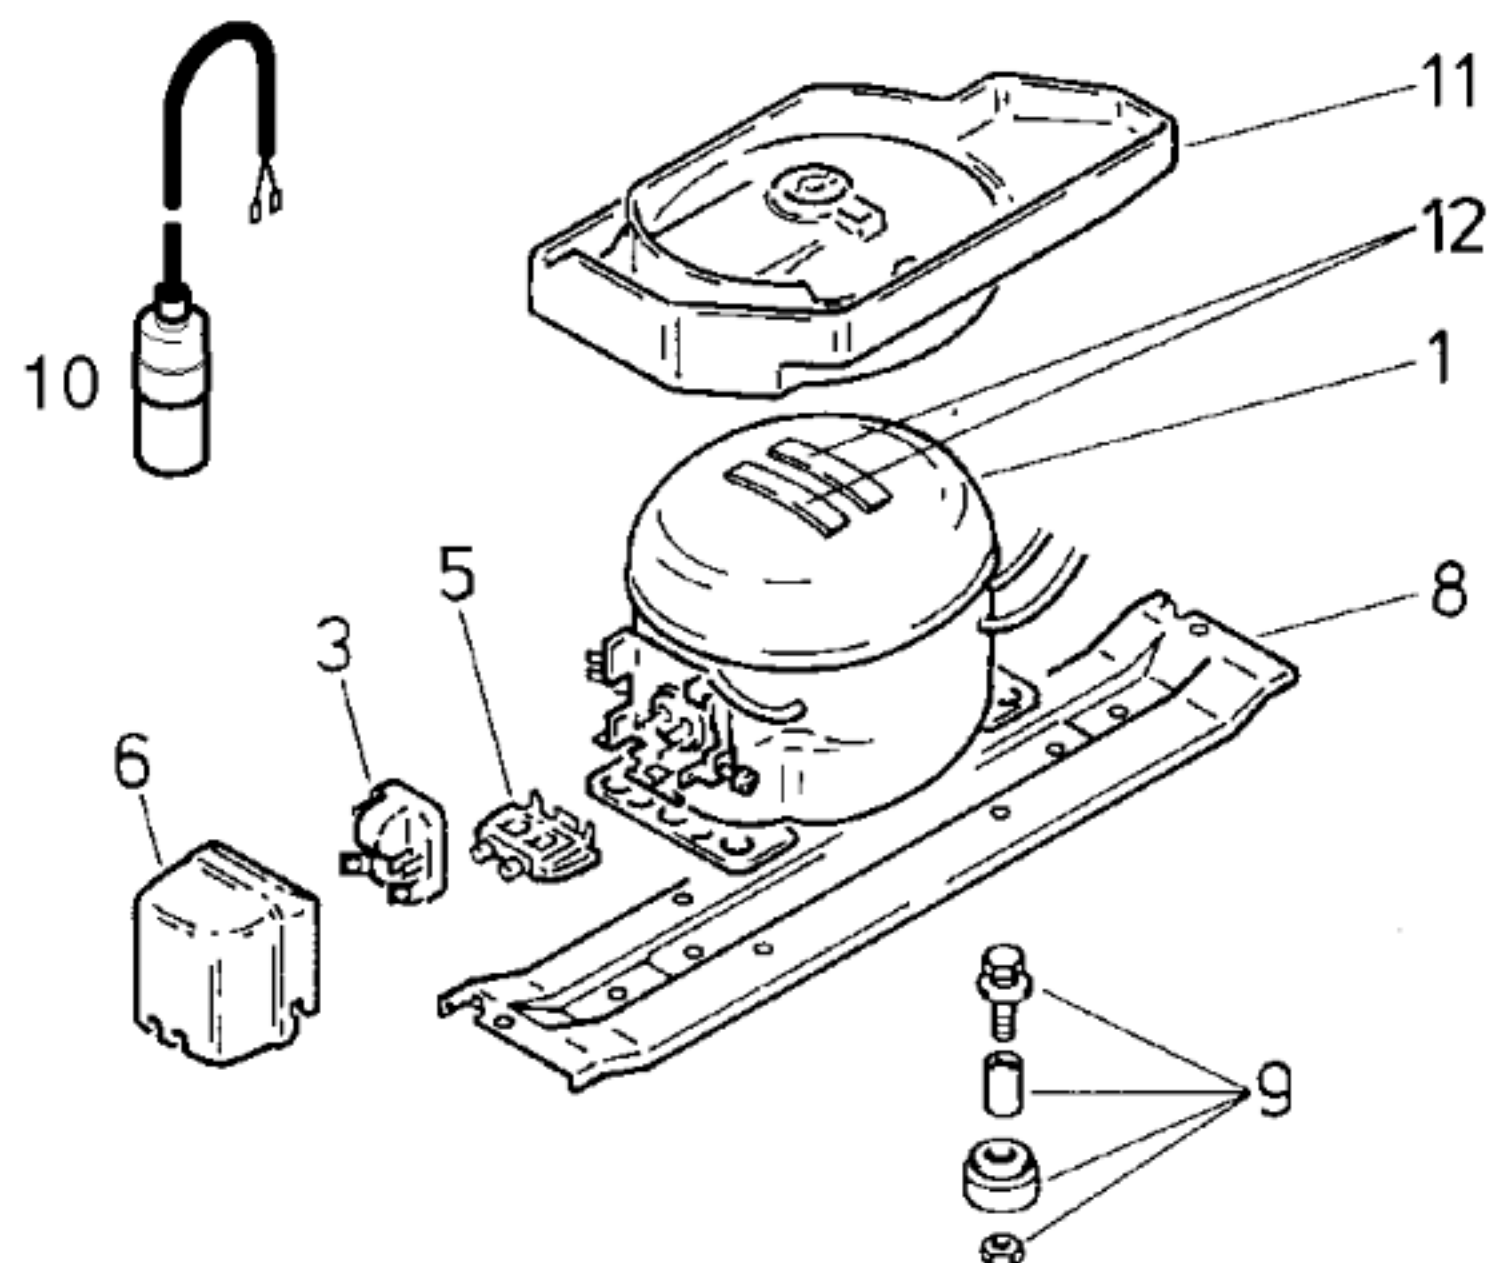

Pos.	V01	V02	
	Danfoss NL7A	Danfoss NLE 15 K	
1	14 0908	14 1311	
2			
3	05 9191	15 1055	
4			
5	02 7310	15 0760	
6	05 1413	15 1072	
7			
8	28 1825	28 1825	
9	05 0166	05 0166	
10	05 9467	05 9467	
11	28 1826	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Danfoss	
Typ/Type		NL7A	NLE 15 K	
Förderleistung/Delivery/Débit	l/h	1314	2637	
Anlaufstrom/Starting current/Cour de démarrage	A	10,5	10,5	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	13,3	13,3	
	Hi/aux Ω	16,3	16,3	
Temp.-Regler/Thermostat		Innentemp.		Außentemp.
Typ/Type	Ranco	K 52-1		K 50-L5772
Reglerstellung/Position			kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	Kontaktf.	+4	+7,5
Valeurs de commutation	„aus“	Luftf.	0	+10
(„abtauen“ od.)	„alarm“			+31,5
				+28,5
Füllmenge/Fill.quantity/Charge	g	*	*	
Anschlußwert/Conn.load/Puiss. connectée	W	150	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur		Innen	Außen	
Widerstand/Resistance/Résistance	Ω	1300	350	
Schaltuhr/Timer/Minuterle de contact				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* Ver plaqueta de características