


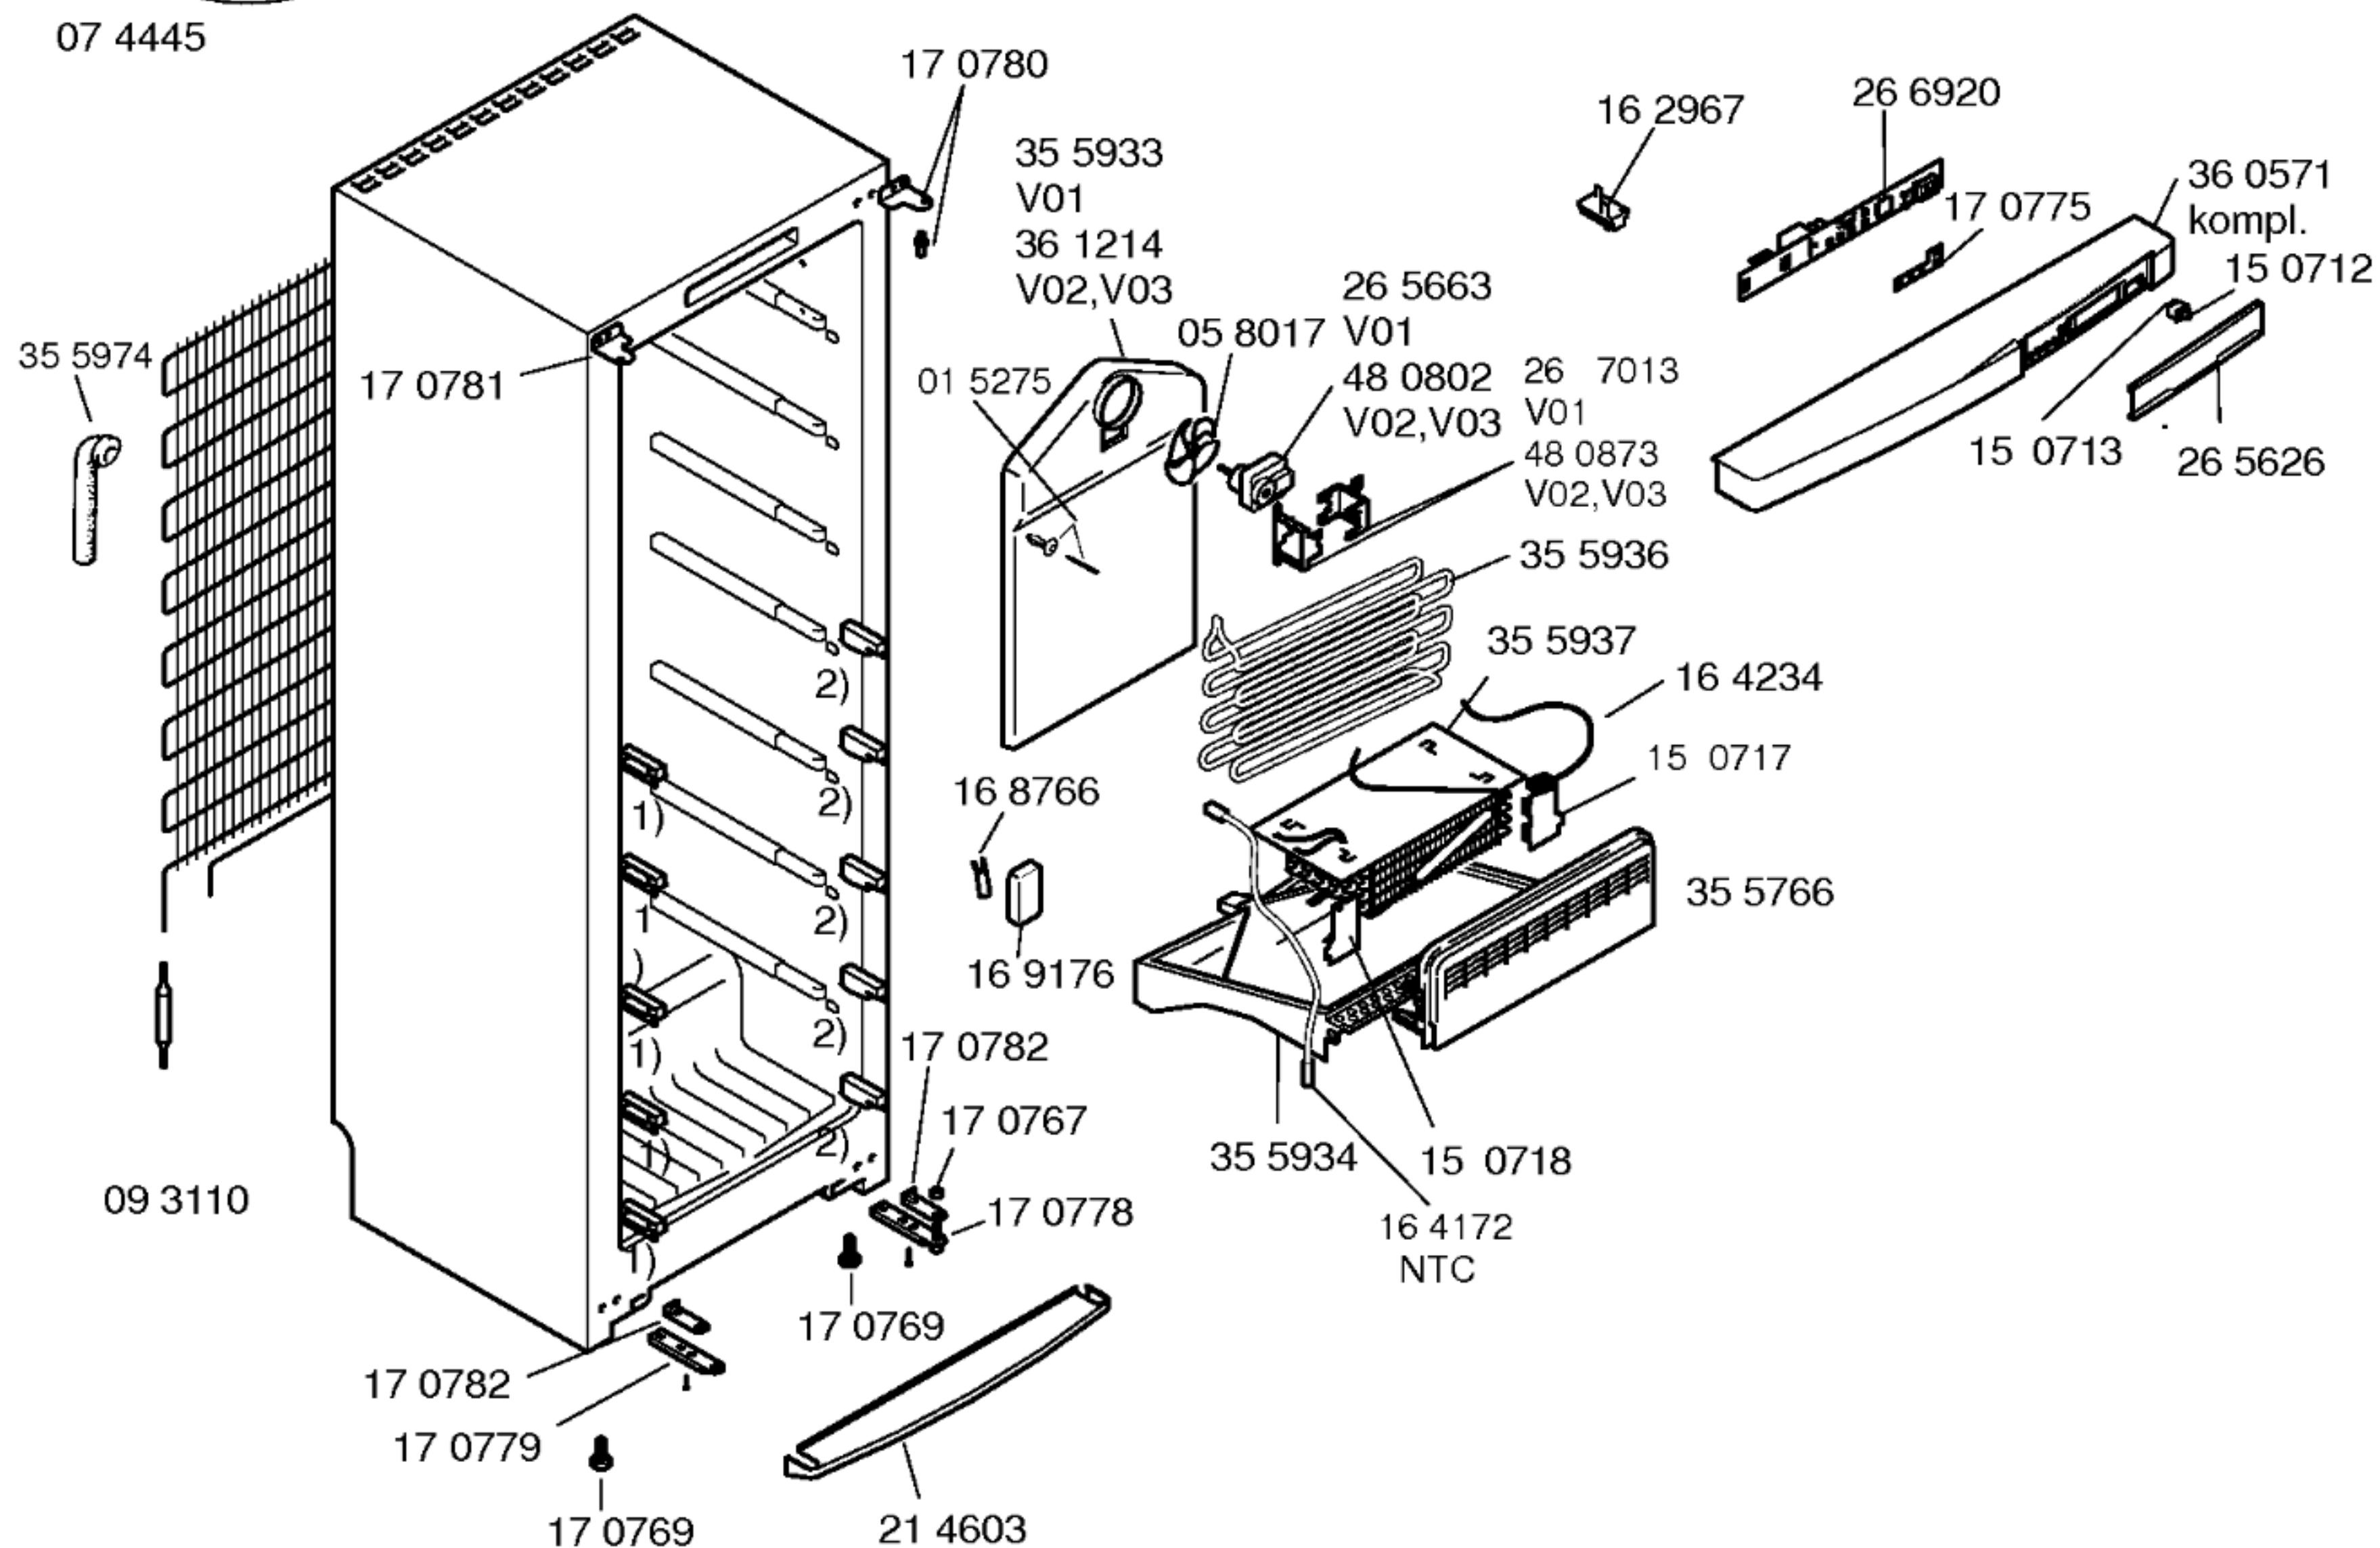

07 4445


 Mat. – Nr. – Konstante
 3740

Gebrauchsanweisung

52 2851

(D,GB,F,I,NL,E,P)

Montageanleitung

52 2772

(D,GB,F,I,NL,DK,N)

SF,S,E,P,TR,GR)

Beistellsatz




26 5629


Gefrierraumteiler

35 3678

1) 17 1455

2) 17 1454

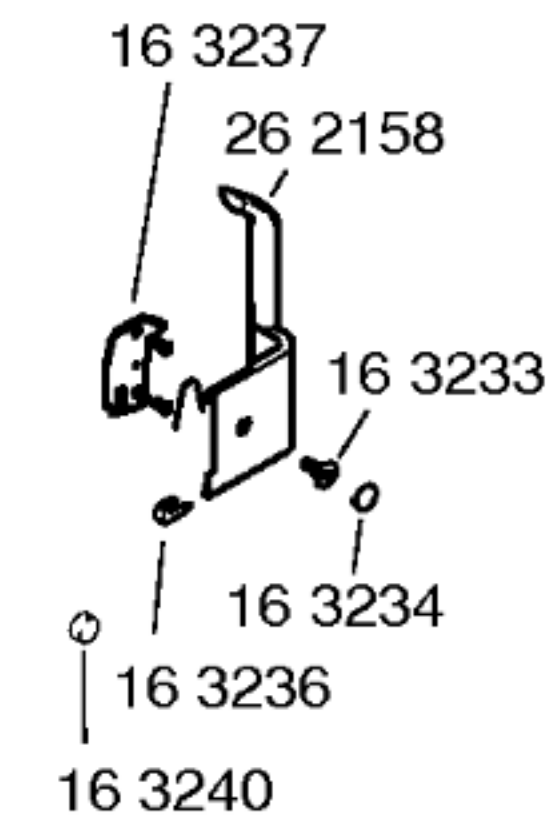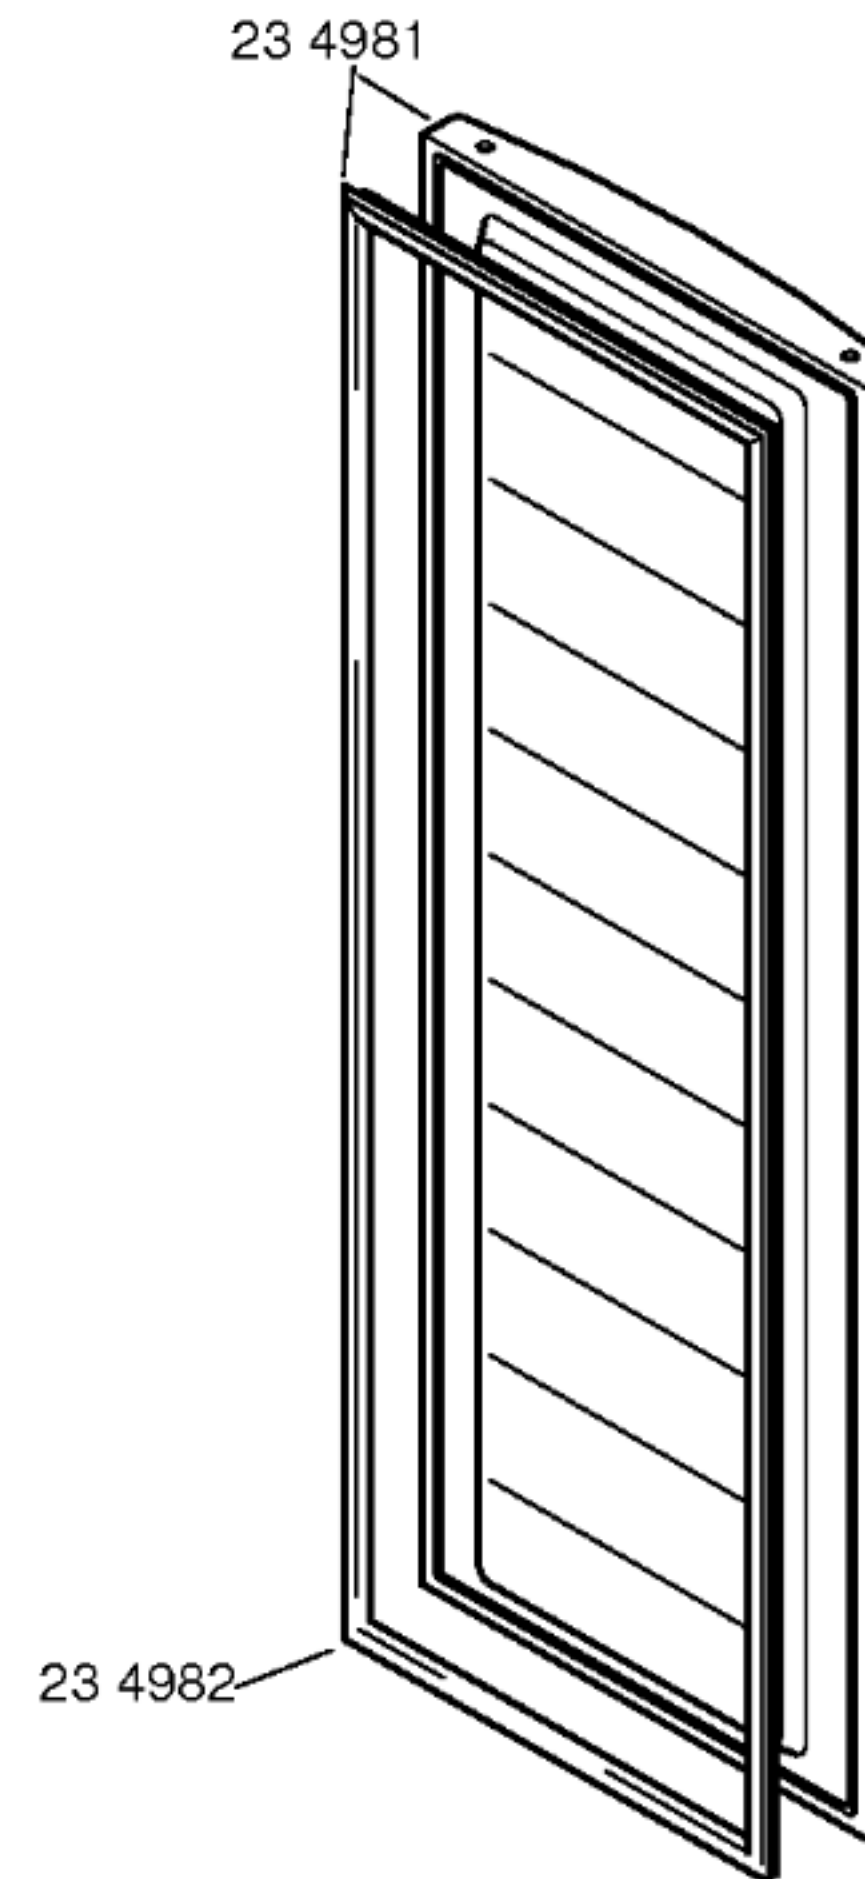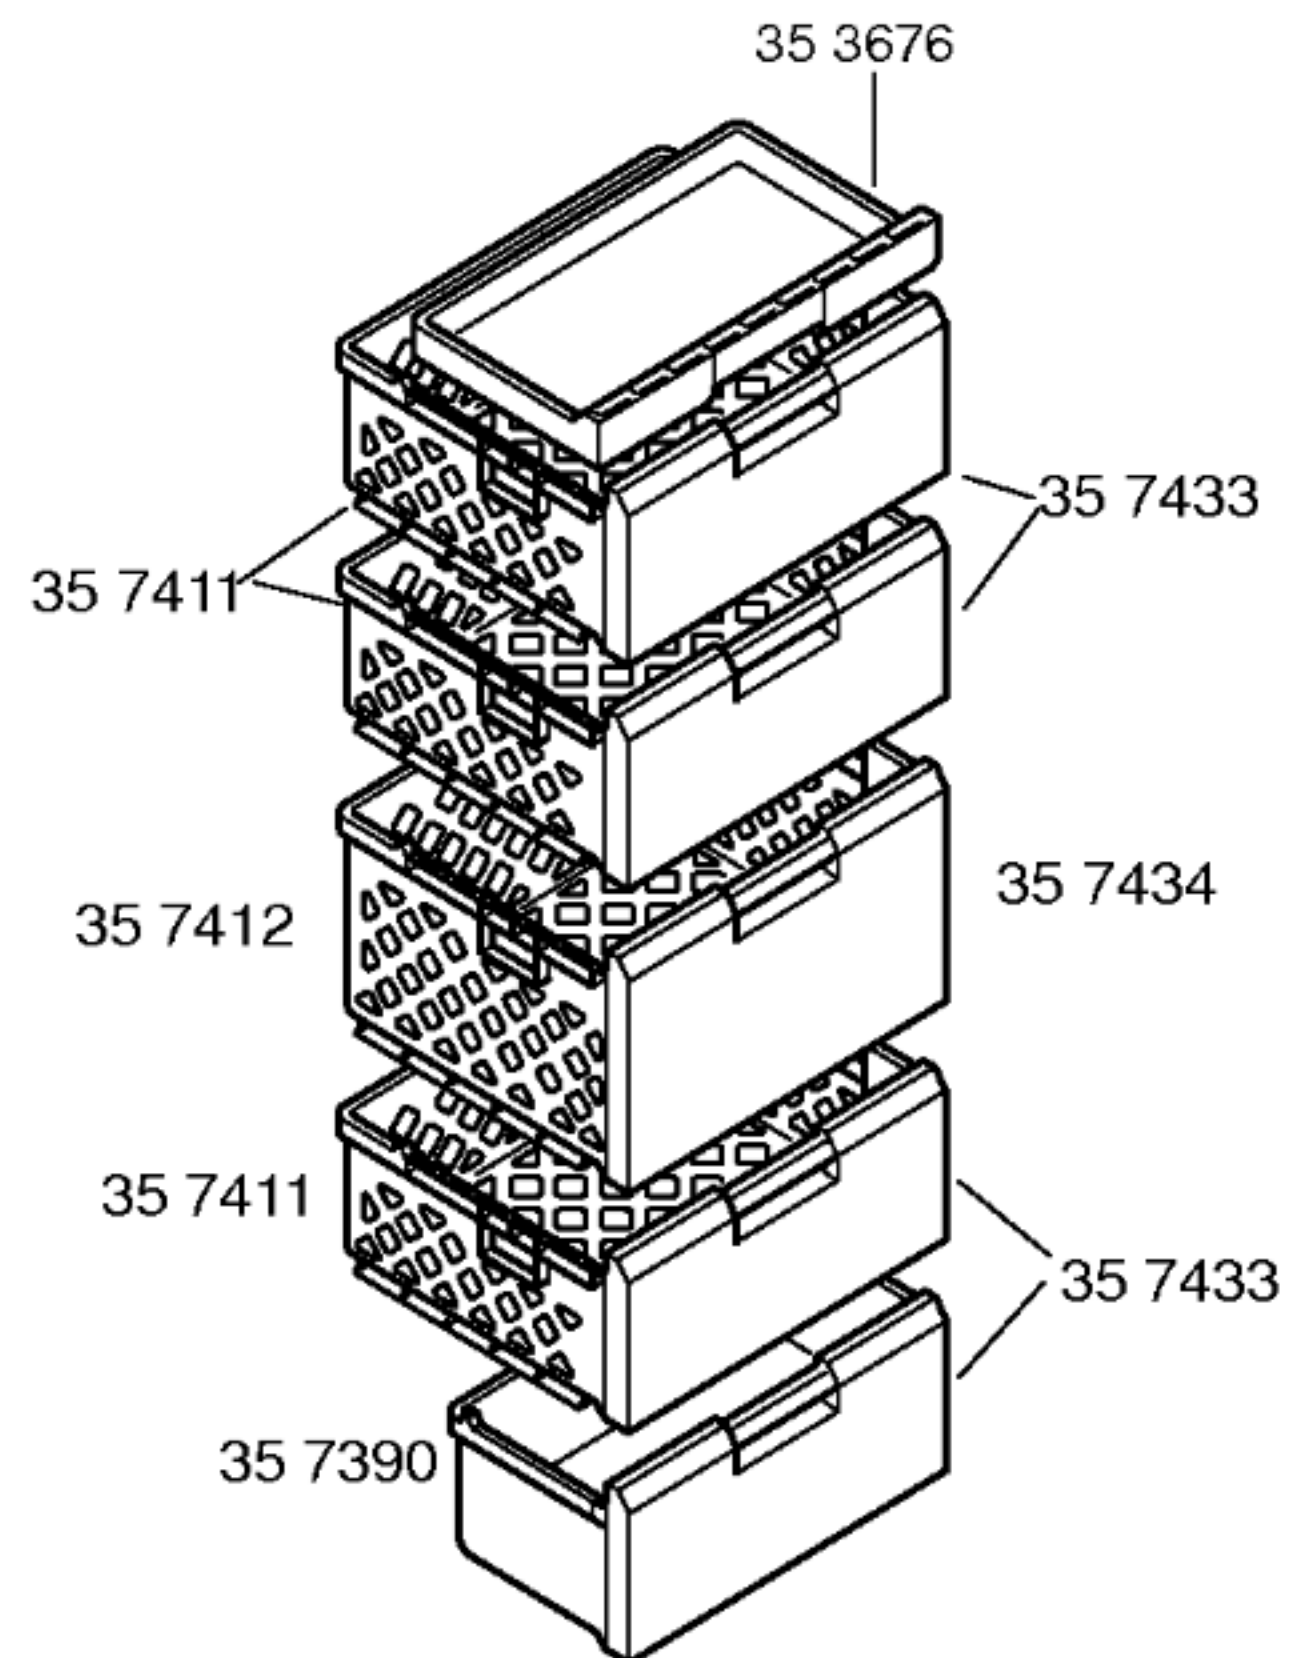

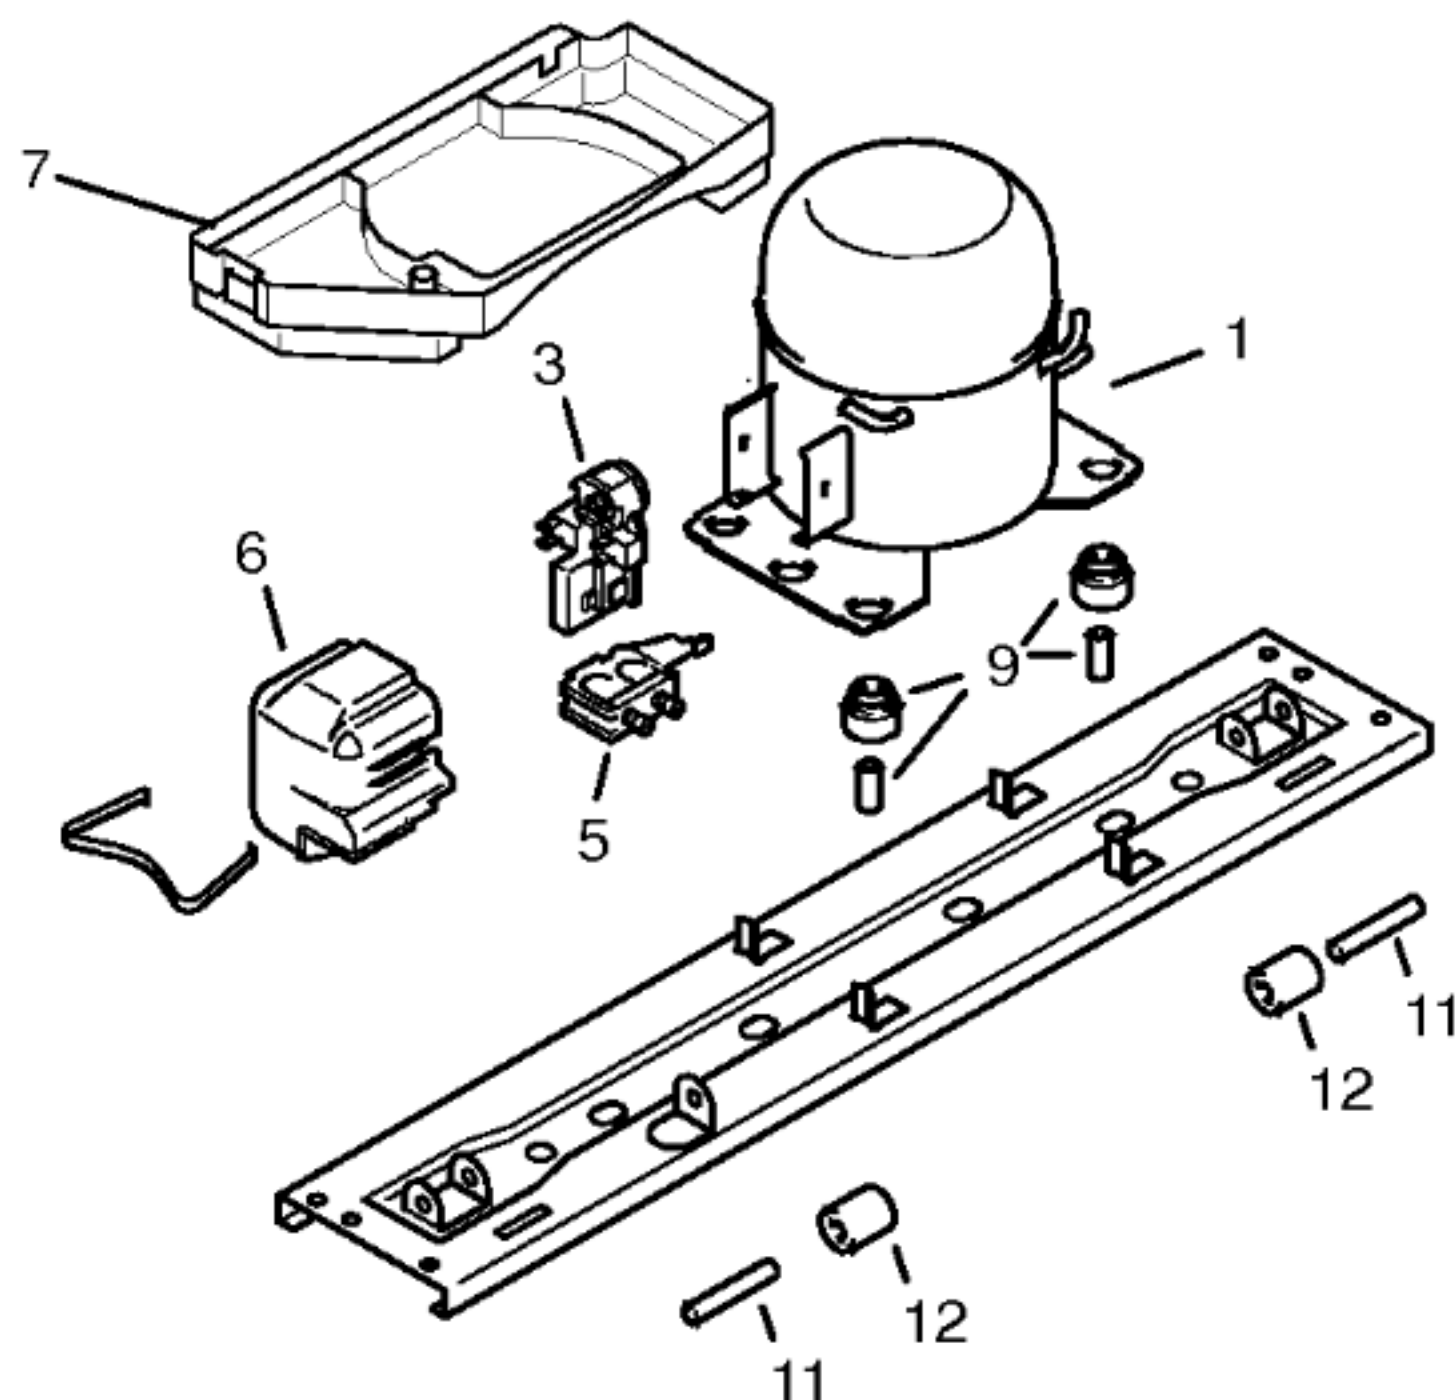

	V01	V02	V03
	Matsushita	Matsushita	Danfoss
Pos.	DC125E	DC125E	NLY 13K
1	141965	14 2131	14 1747
2			
3	17 2967	17 2967	15 1055
4			
5	16 2549	16 2549	15 0760
6	16 6782	16 6782	15 1072
7	08 8535	08 8535	09 6212
8			
9	05 0166	05 0166	05 0166
10	15 2222	15 2222	
11	01 9017	01 9017	01 9017
12	01 9016	01 9016	01 1916

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Matsushita		Danfoss	
Typ/Type		DC125E		NLY 13 K	
Förderleistung/Delivery/Débit		l/h	2246		2394
Anlaufstrom/Starting current/Cour de démarrage		A	9,2		11,3
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	12,1	10,5
		Hi/aux	Ω	13,8	11,0
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values		"warm"	-19 -20		
Valeurs de commutation		"kalt"	-23 -24		
		"alarm"	-9 -14		
Füllmenge/Fill.quantity/Charge		R600a	*	*	
Anschlußwert/Conn.load/Puiss. connectée		W	120	120	133
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance		Ω	288	240	
Leistung/Power/Puissance		W	200	24	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	560		
Raumtemperaturfühler		C	K	C	k
		+10	9,9	-18	43,3
		+5	12,7	-22	54,6
		+0	16,3	-26	69,4
Widerstand NTC-Fühler		°C	kΩ	°C	kΩ
		-1	17,3	-15	36,5
		-9	26,2	-16	38,8
		-14	34,5	-19	45,9
Magnetventil/Magnetic valve/Electrovanne				-24	61,6
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild