



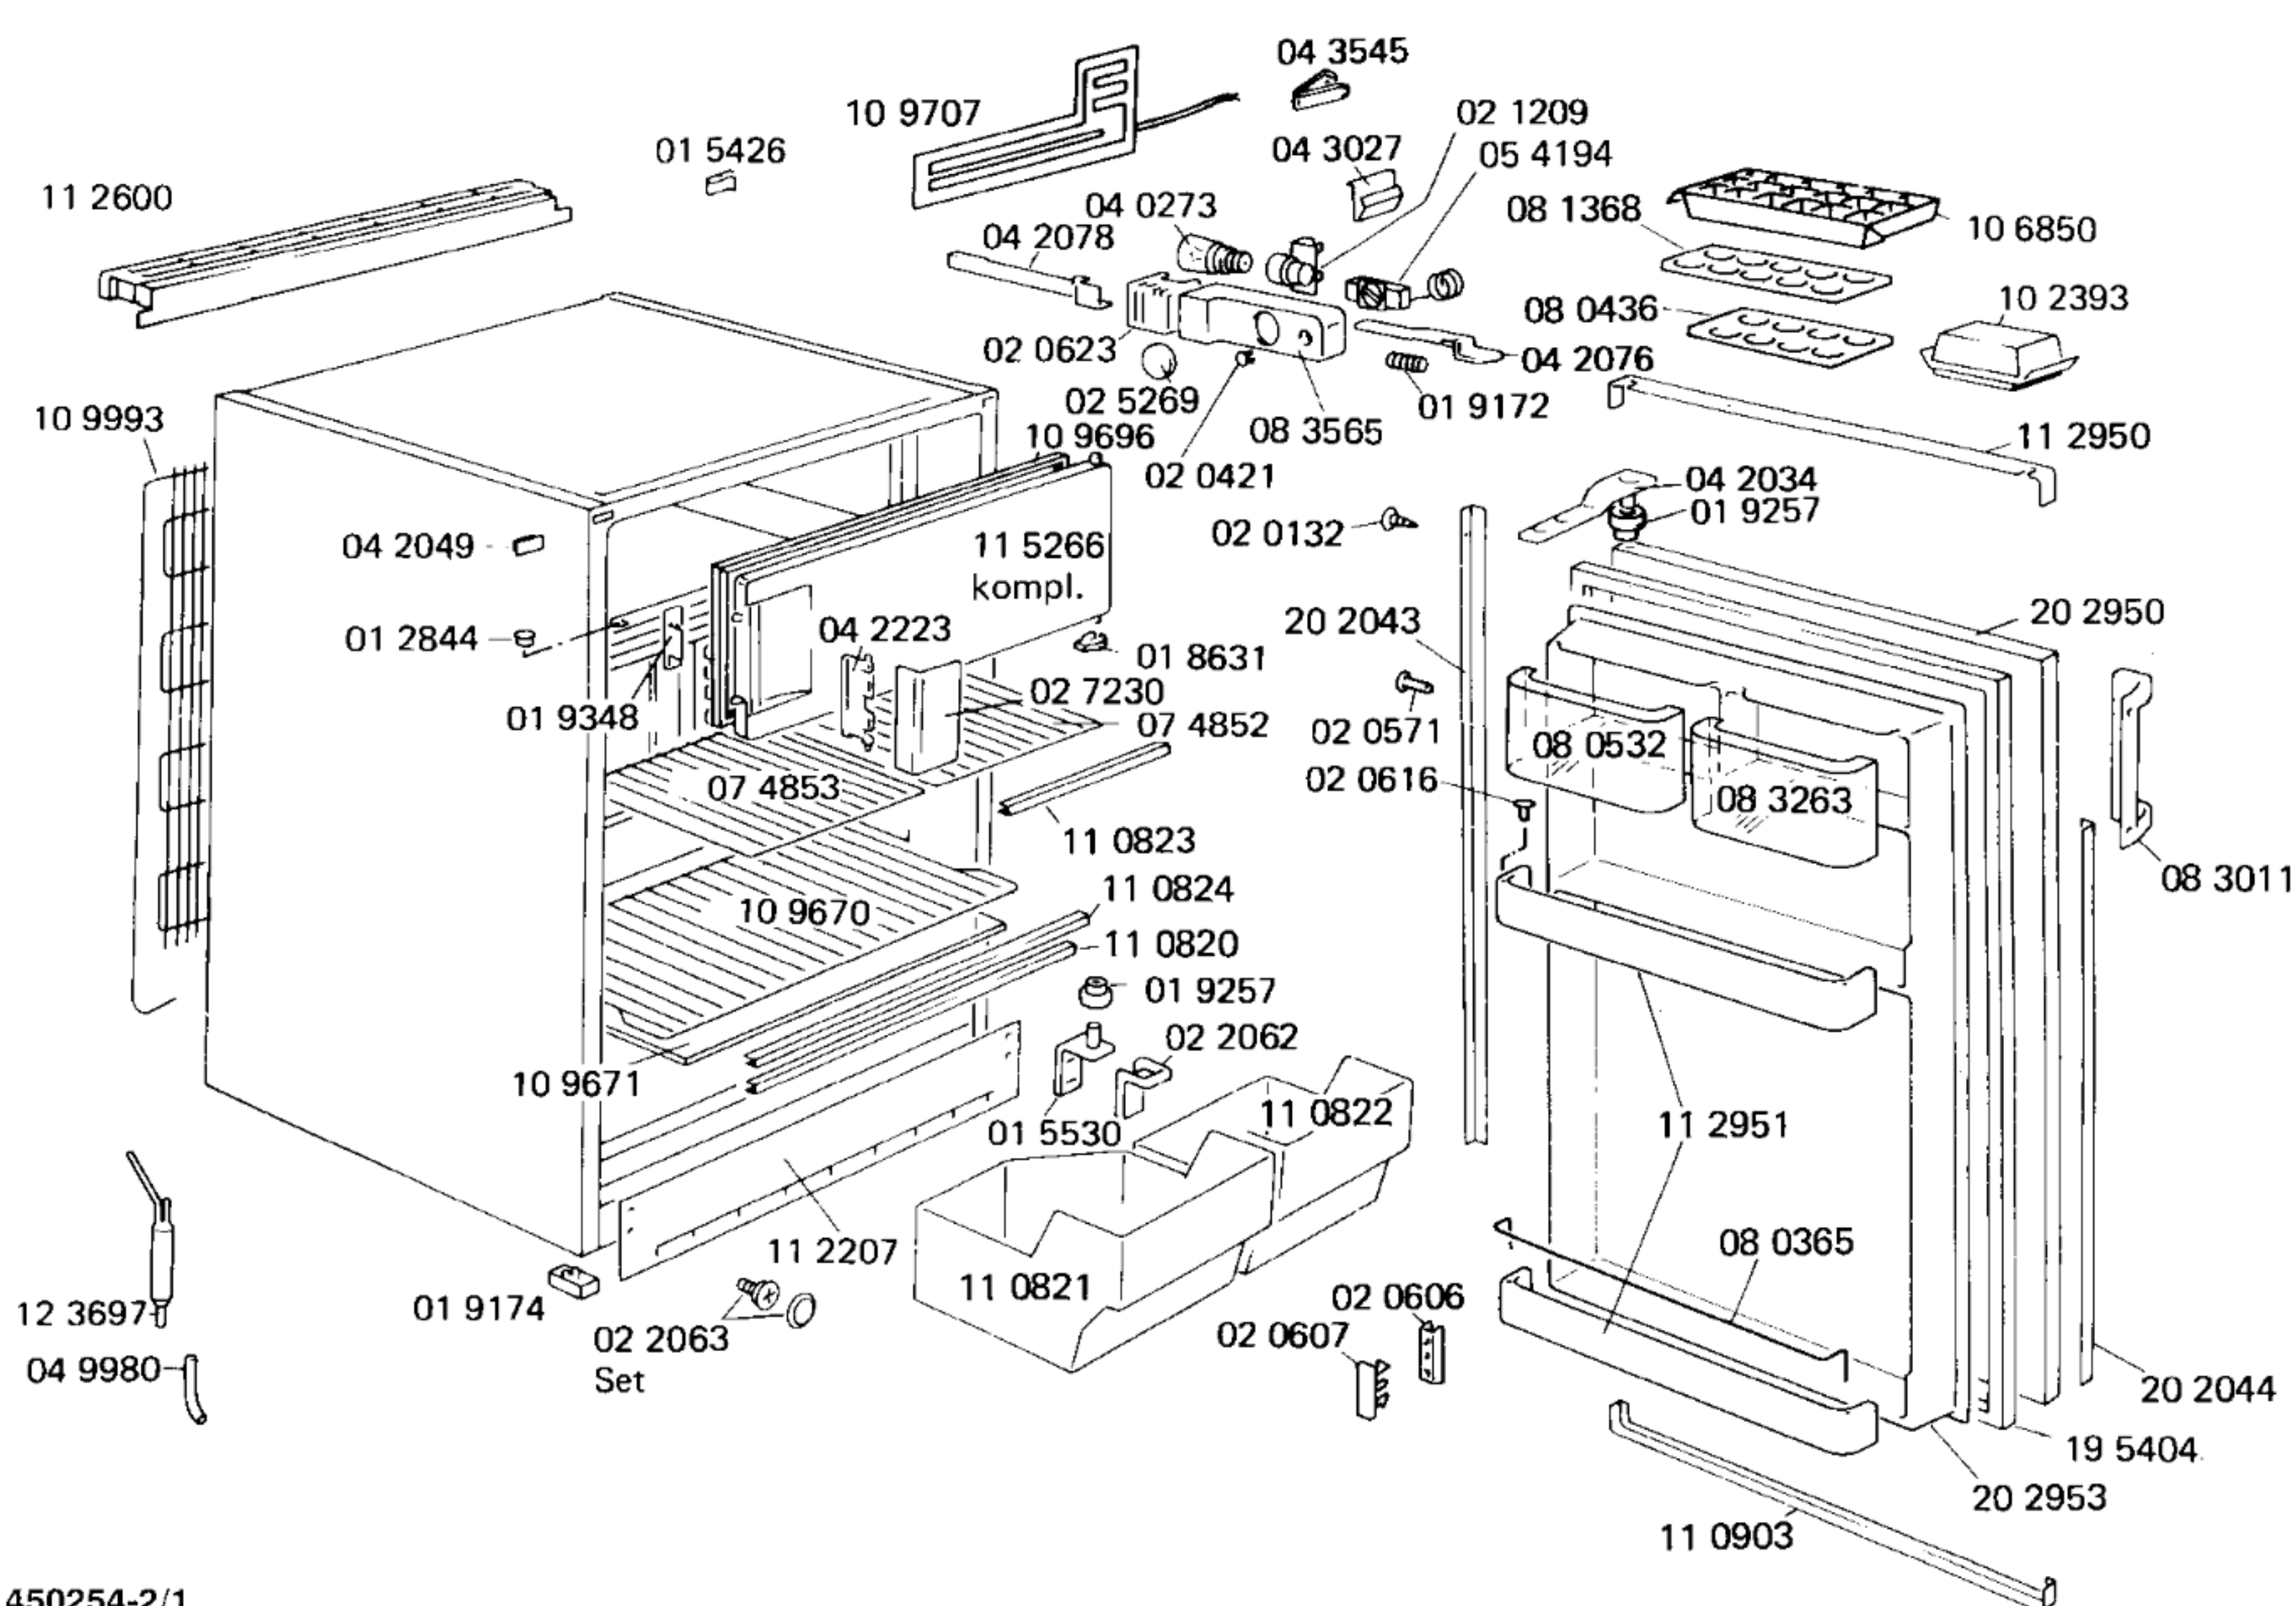

51 1424
EU1, F1, GB1
Gebrauchsanweisung
(D, GB, F, I, NL, E)

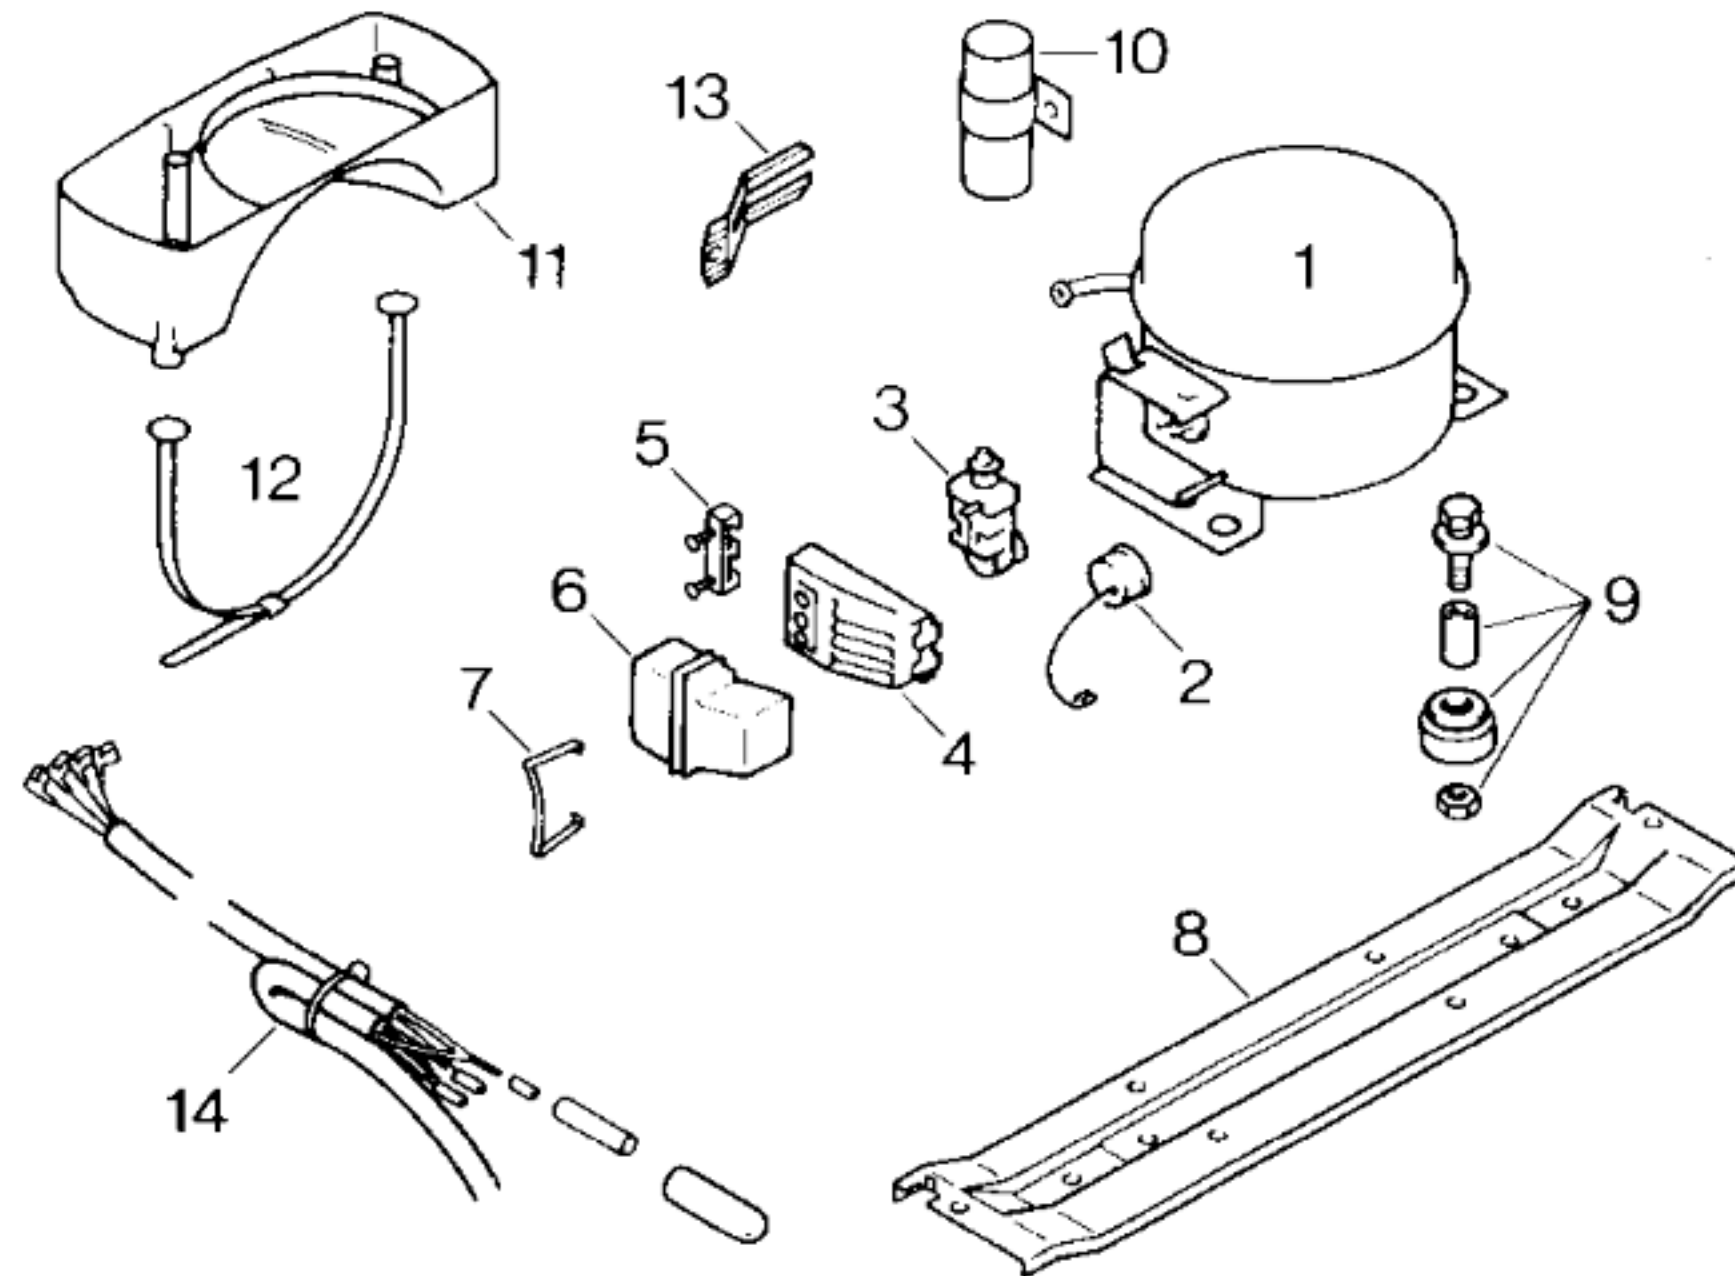

	bis FD 6510	ab FD 6511	ab FD 6606
Pos.	EU1, F1, GB1	GB1, EU1	GB1, EU1
	Necchi	Aspera	Danfoss
1	13 1054	14 0344	14 0380
2	07 3679	02 7423	
3	07 3680	02 7424	02 0108
4	04 9990		
5		02 7425	02 7310
6	04 9991	05 5145	05 1413
7	04 9996		
8	11 1567	11 1567	11 1567
9	05 0166	05 0166	05 0166
10			
11	07 5162	08 4744	08 4744
12	02 1562		
13	04 1568	04 1568	04 1568
14			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Necchi	Aspera	Danfoss	
Typ/Type	M 4 J	BP 1072 A	TL 4 A	
Förderleistung/Delivery/Débit	l/h	684	702	
Anlaufstrom/Starting current/Cour. de démarrage	A	7,2	3,6	7,8
Widerstand/Resistance/Résistance	Ha/main/prin.	22,1	27,9	23,8
	Hi/aux	42,5	27,6	17,0
Temp.-Regler/Thermostat	Ranco			
Typ/Type	A 59			
Reglerstellung/Position	kalt	warm		
Schaltwerte/Switching values/	+ 4	+ 4		
Valeurs de commutation	- 29	- 20		
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge	R12	g	120	
Anschlußwert/Conn.load/Puiss. connectée	W	110		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			