




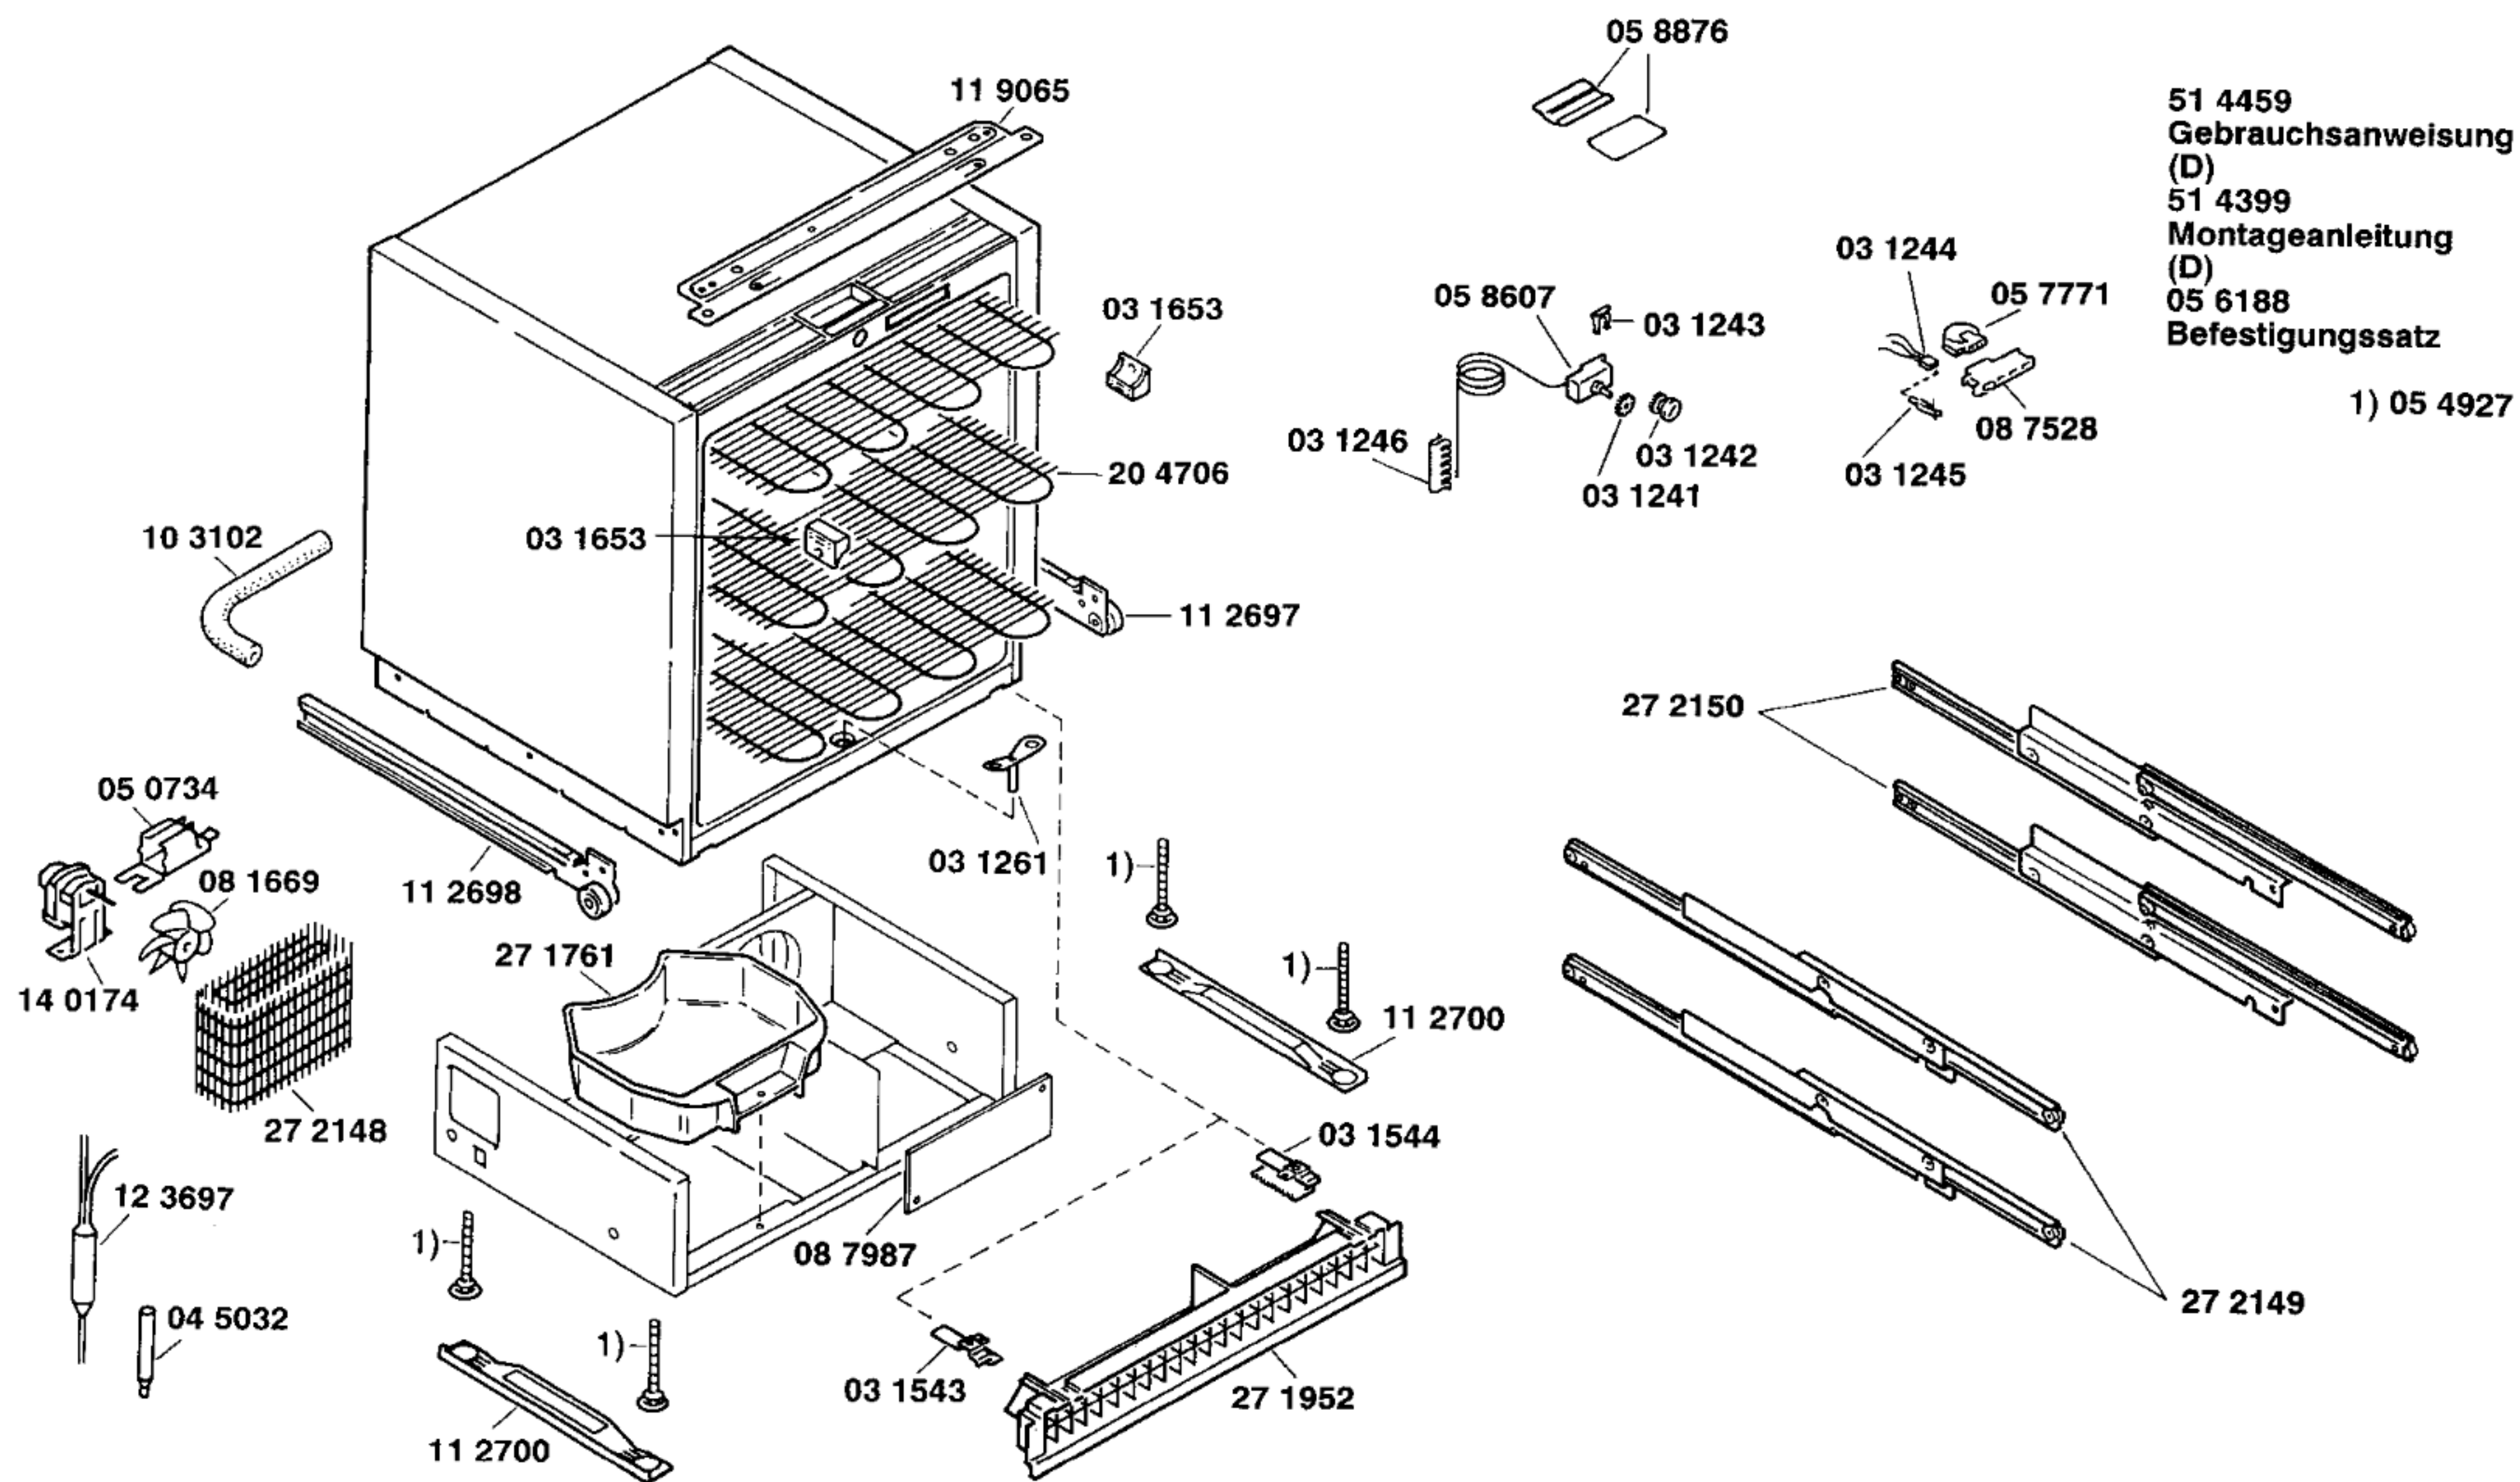

1) 03 0074
2) 02 0422

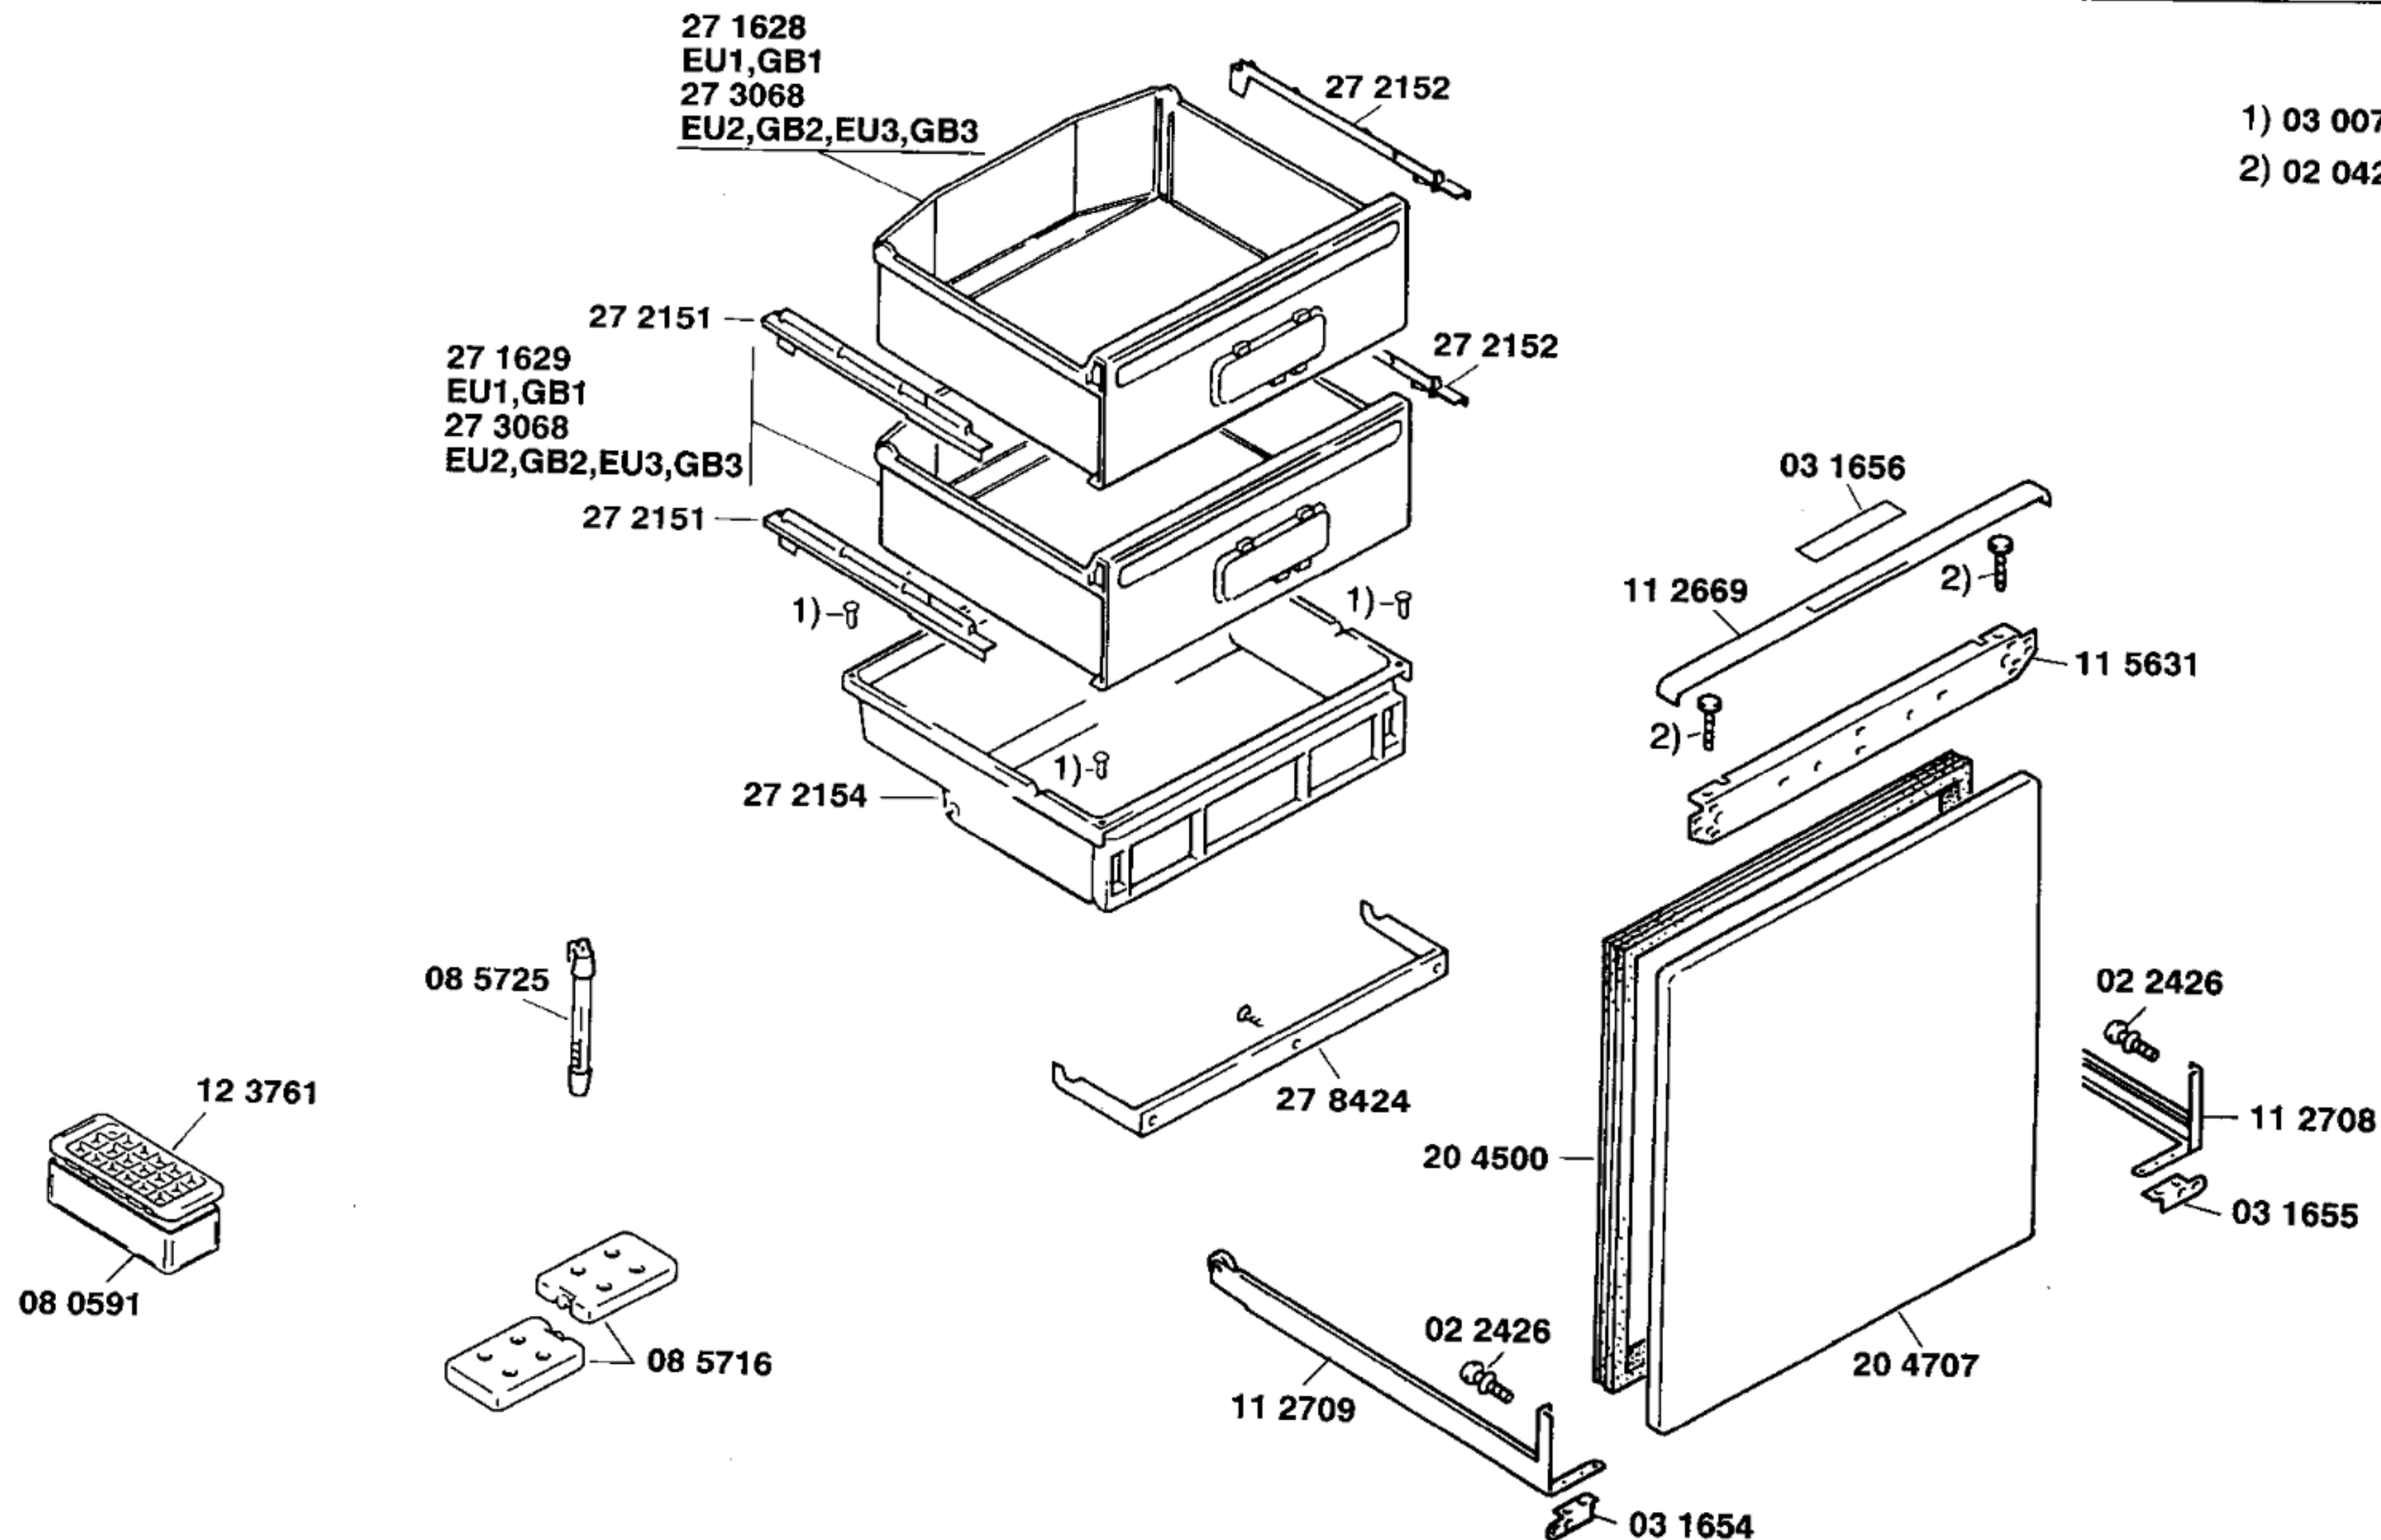

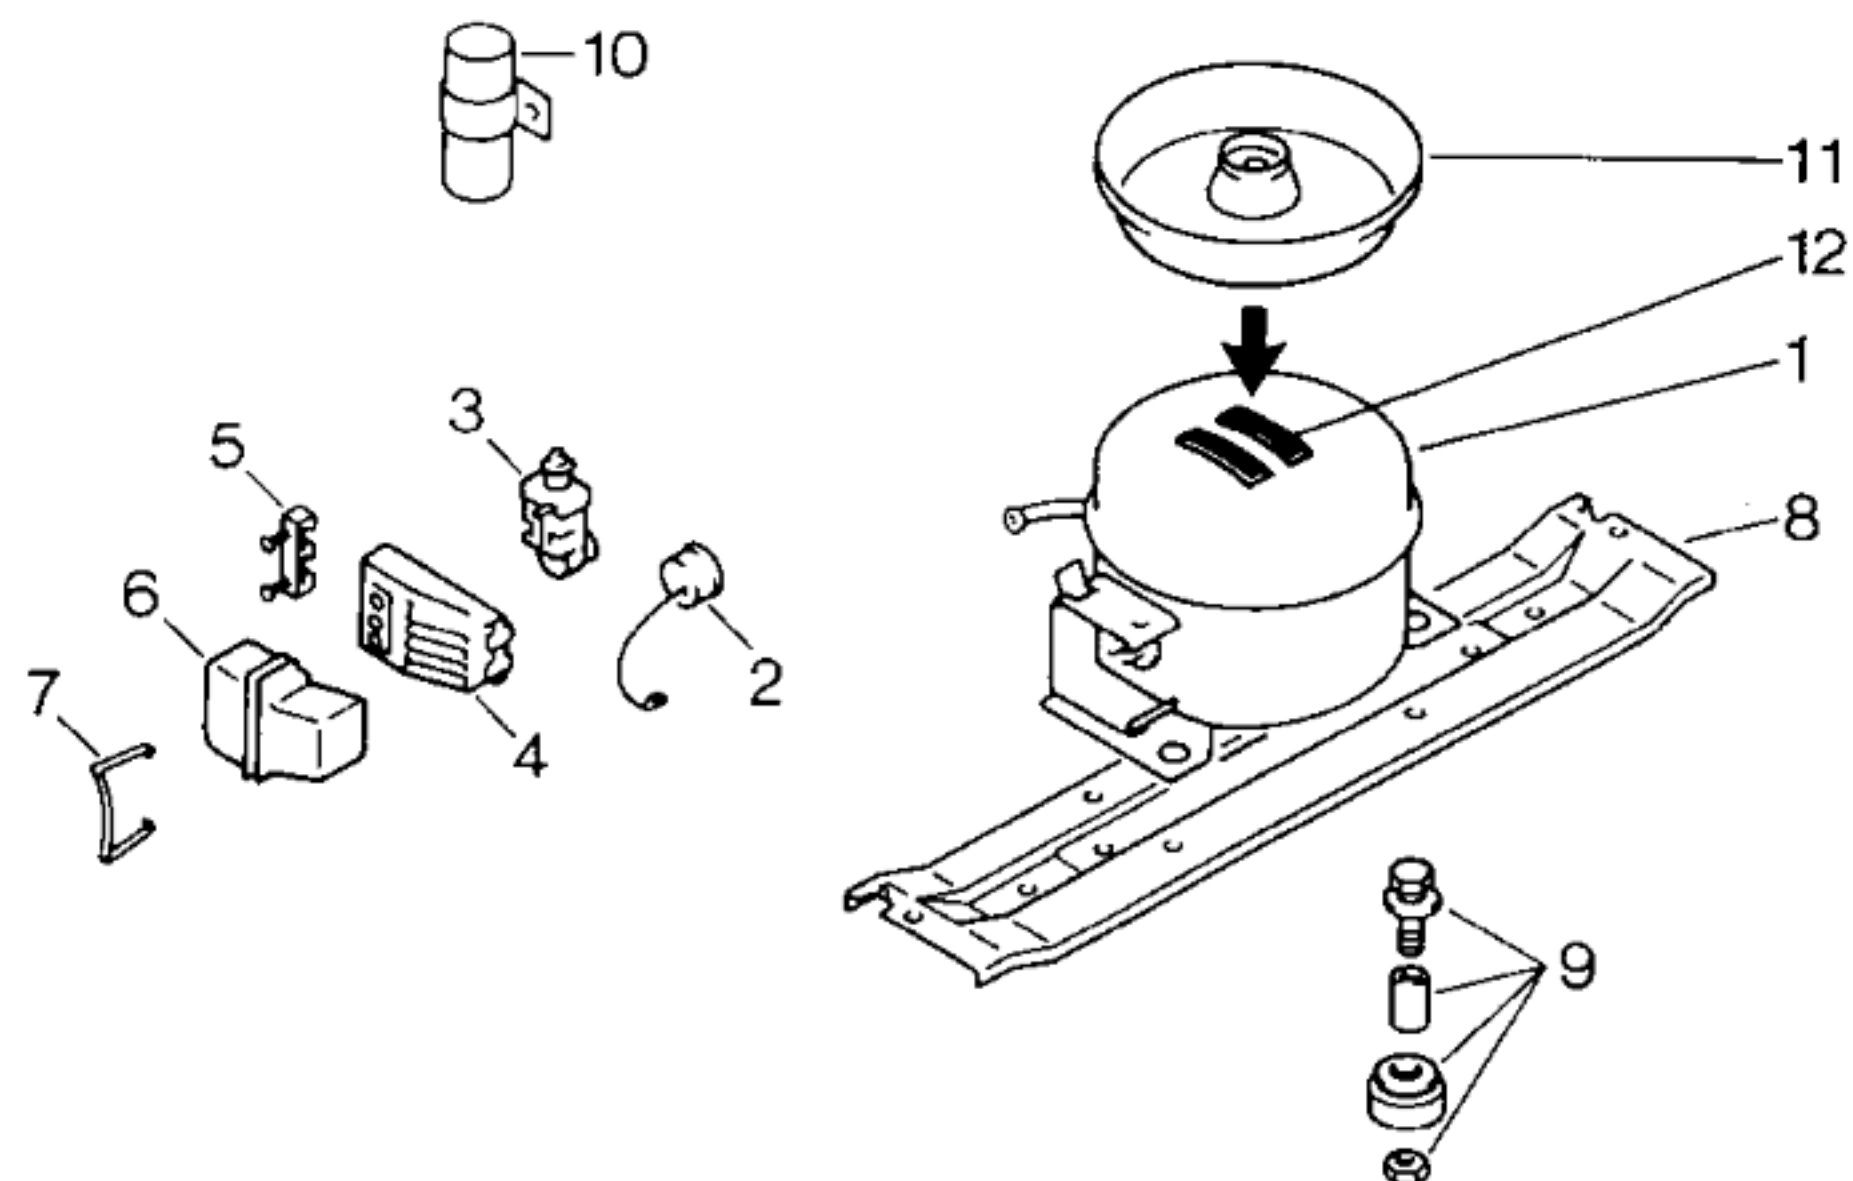

	EU1,GB1, EU2,GB2	EU3,GB3	EU4,GB4
Pos.	Aspera BP1111A	Matsushita S111LKAA	Danfoss TL5A
1	14 0516	14 0571	14 0065
2	03 1238		
3	02 7424	03 2034	02 0108
4			
5	02 7425		02 7310
6	05 5145	05 8457	05 1413
7		02 6731	
8			
9	05 0166	05 0166	05 0166
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour. de démarrage Widerstand/Resistance/Résistance	Aspera BP 1111 A 1031 8,4 18,3 37,9	Matsushita S111LKAA 873 6,9 14,3 34,1	Danfoss TL 5 A 914 9,0 15,5 16,8
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	WHF TF 57 SF 2 kalt -25 -33 -19,5	warm -17 -23 -13	
Füllmenge/Fill.quantity/Charge	R12	g	170
Anschlußwert/Conn.load/Puiss. connectée	W	120	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V		