



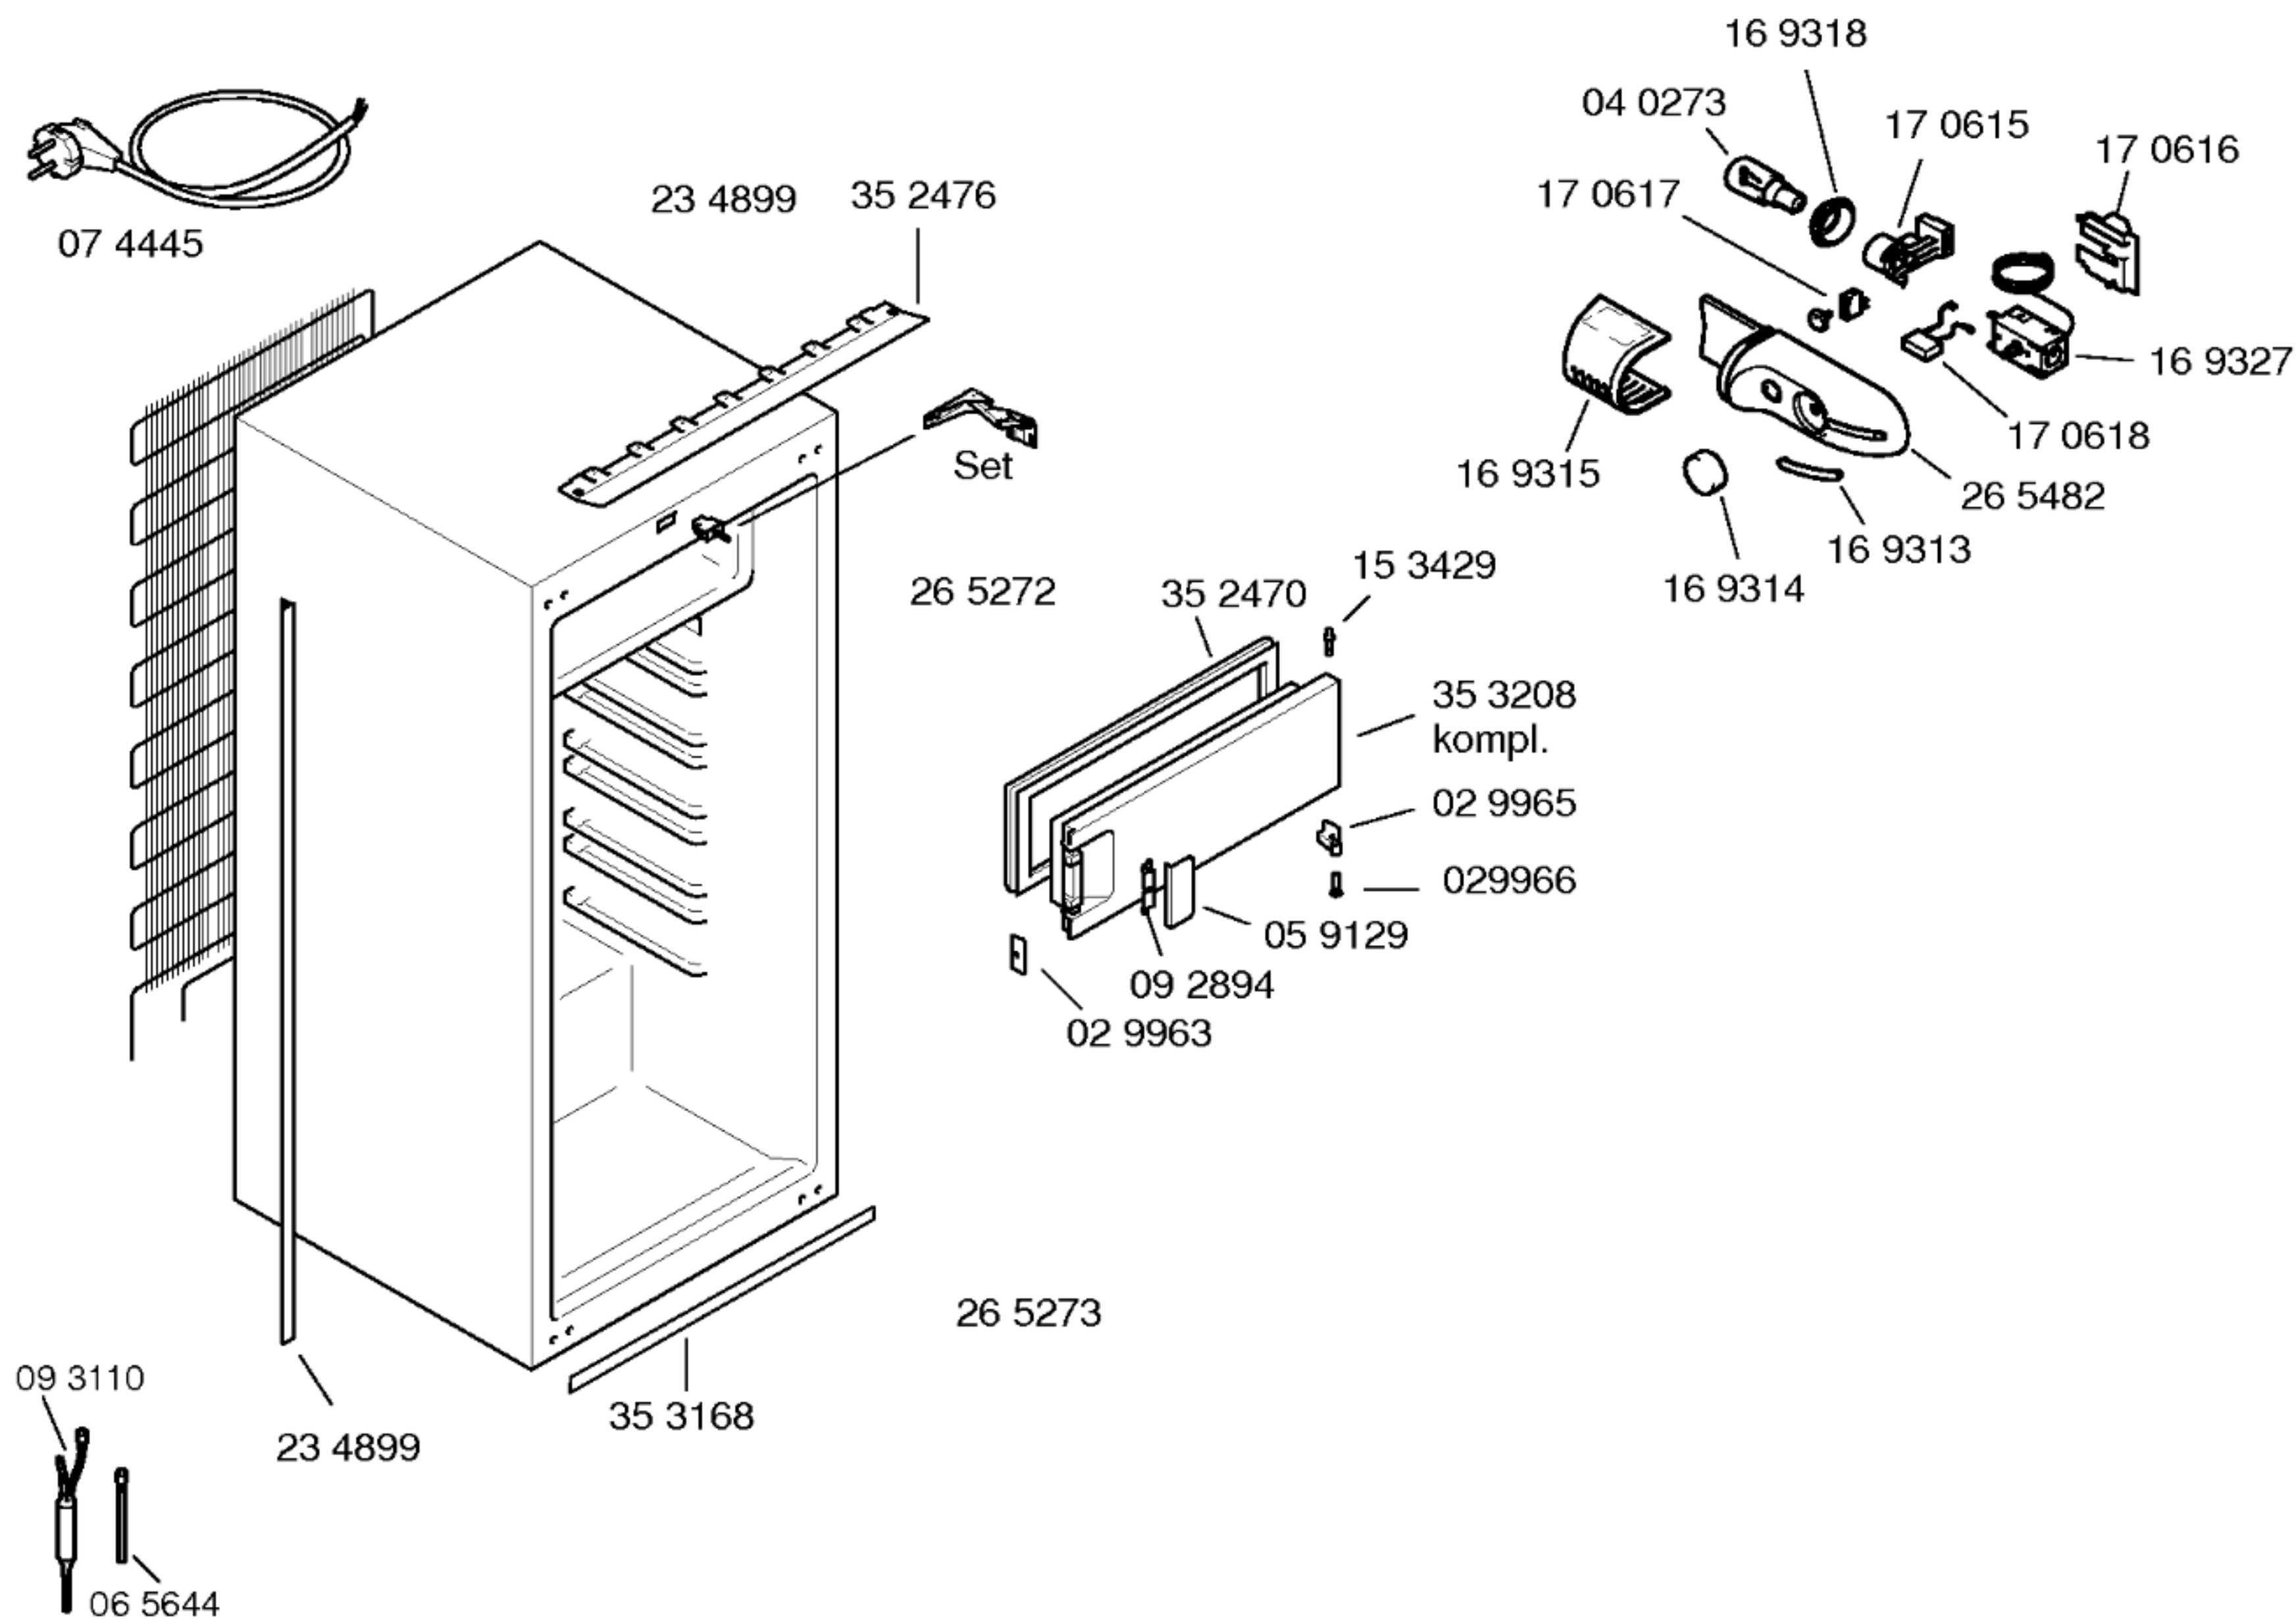


Gebrauchsanweisung  
52 2693  
(D,GB,F,I,NL)

Montageanleitung  
52 2494

Beistellsatz  
26 5163

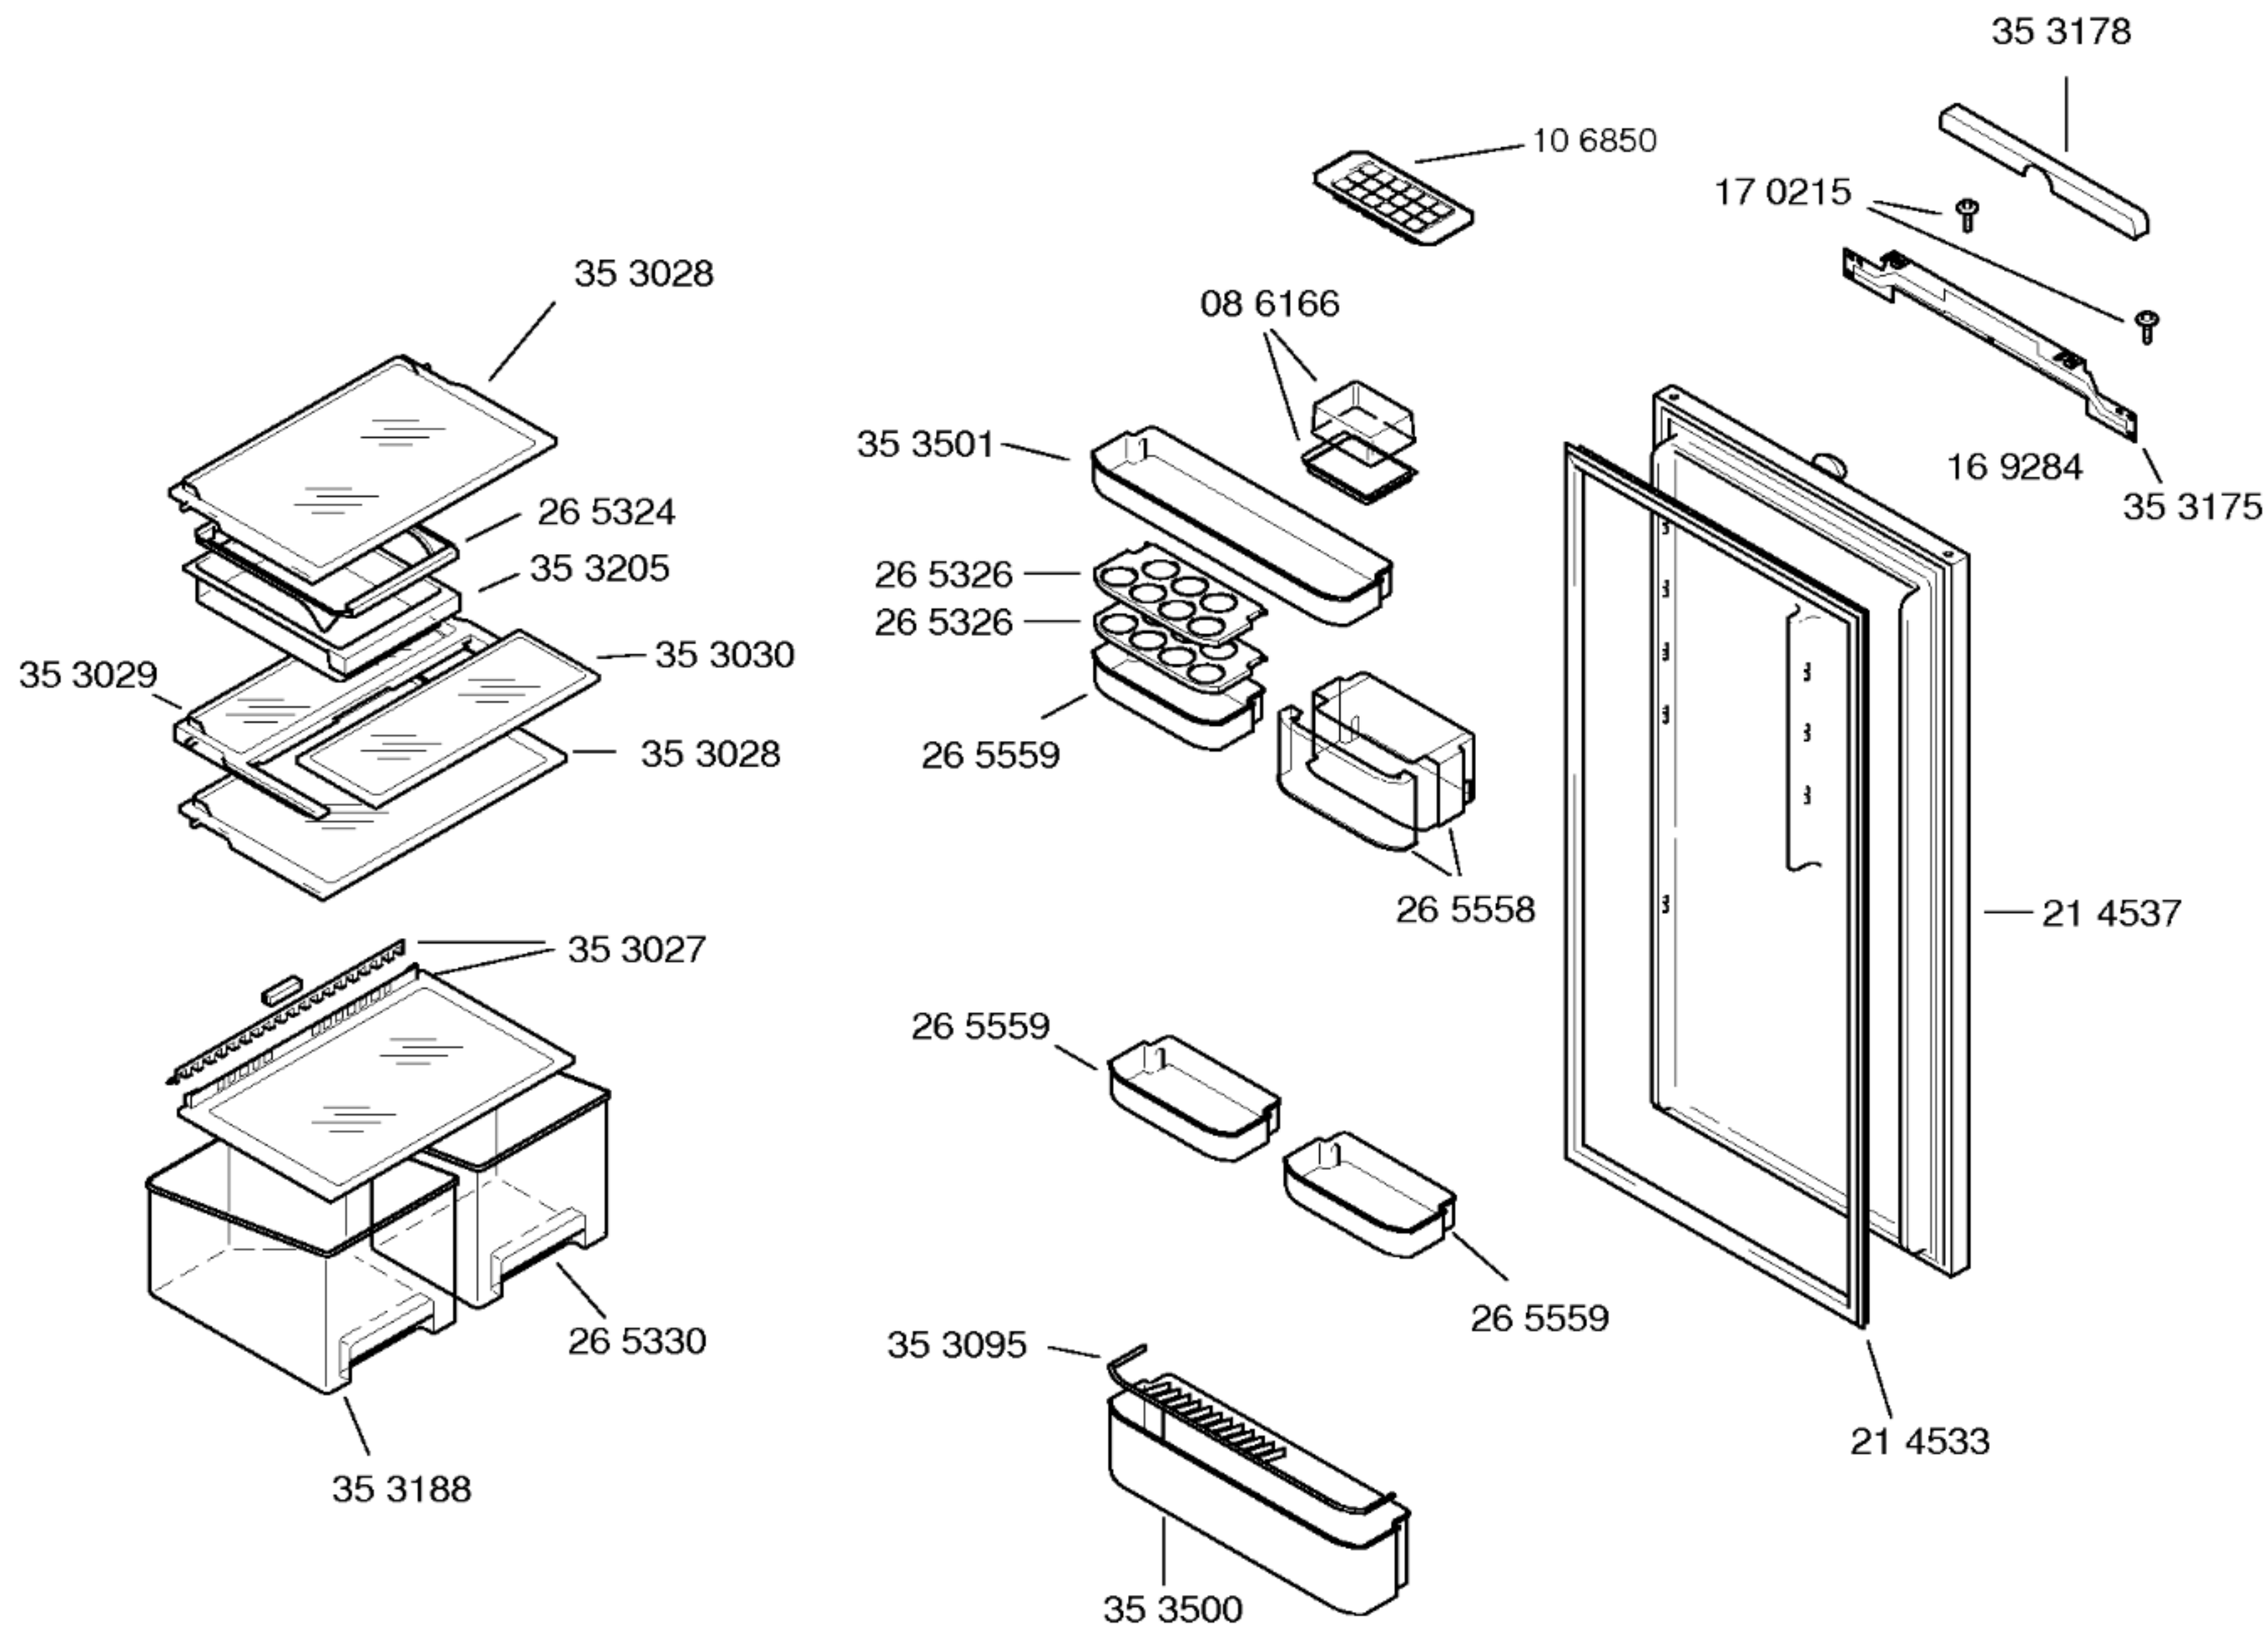

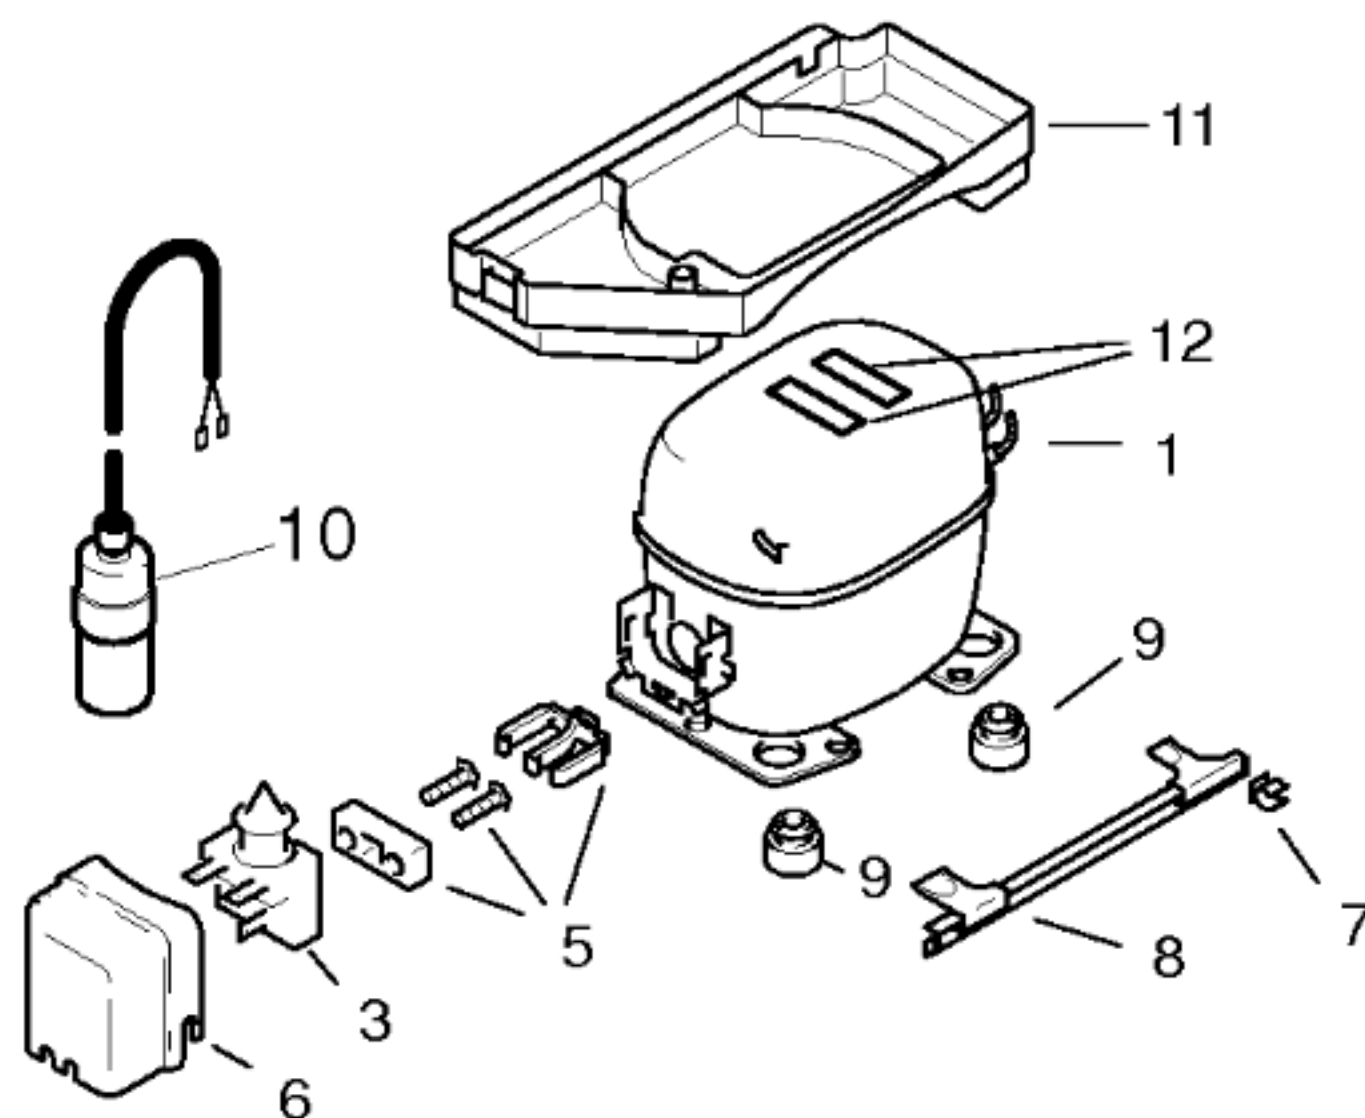

|      | V01              | V02                 |  |
|------|------------------|---------------------|--|
| Pos. | Danfoss<br>TLY7K | Aspera<br>BPK 1084Y |  |
| 1    | 14 1816          | 14 2101             |  |
| 2    |                  |                     |  |
| 3    | 15 1055          | 18 0819             |  |
| 4    | 15 1053          |                     |  |
| 5    | 15 0760          | 17 0882             |  |
| 6    | 15 1072          | 17 0881             |  |
| 7    | 16 9319          | 16 9319             |  |
| 8    | 26 4879          | 26 4879             |  |
| 9    | 050166           | 05 0166             |  |
| 10   | 16 5852          |                     |  |
| 11   | 26 4878          | 36 5099             |  |
| 12   | 05 6008          | 05 6008             |  |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES |  |              |       |           |
|--------------------------------------------------------|--|--------------|-------|-----------|
| Verdichter/Compressor/Compresseur                      |  | Danfoss      |       | Aspera    |
| Typ/Type                                               |  | TLY7K        |       | BPK 1084Y |
| Förderleistung/Delivery/Débit                          |  | l/h          | 1168  | 1201      |
| Anlaufstrom/Starting current/Cour de démarrage         |  | A            | 5,7   | 3,6       |
| Widerstand/Resistance/Résistance                       |  | Ha/main/prin | W     | 27,1      |
|                                                        |  | Hi/aux       | W     | 27,2      |
| Hi/aux                                                 |  | W            | 27,2  | 39,1      |
| Temp.-Regler/Thermostat                                |  | Ranco        |       |           |
| Typ/Type                                               |  | K59          |       |           |
| Regelstellung/Position                                 |  | kalt         | warm  |           |
| Schaltwerte/Switching values                           |  | "warm"       | +5,2  | +5,2      |
| Valeurs de commutation                                 |  | "kalt"       | -32,0 | -15,0     |
| "alarm"                                                |  |              |       |           |
| Füllmenge/Fill.quantity/Charge                         |  | R600a        | +     |           |
| Anschlußwert/Conn.load/Puiss. connectée                |  | W            | 67    | 79        |
| Heizung/Heater/Chauffage                               |  |              |       |           |
| Widerstand/Resistance/Résistance                       |  | W            |       |           |
| Leistung/Power/Puissance                               |  | W            |       |           |
| Ventilator/Blower/Ventilateur                          |  |              |       |           |
| Widerstand/Resistance/Résistance                       |  | W            |       |           |
| Temp.-Regler/Thermostat                                |  |              |       |           |
| Magnetventil/Magnetic valve/Electrovanne               |  |              |       |           |
| Widerstand/Resistance/Résistance                       |  | W            |       |           |
| Spannung/Voltage/Tension                               |  | V            |       |           |

\* siehe Typenschild