



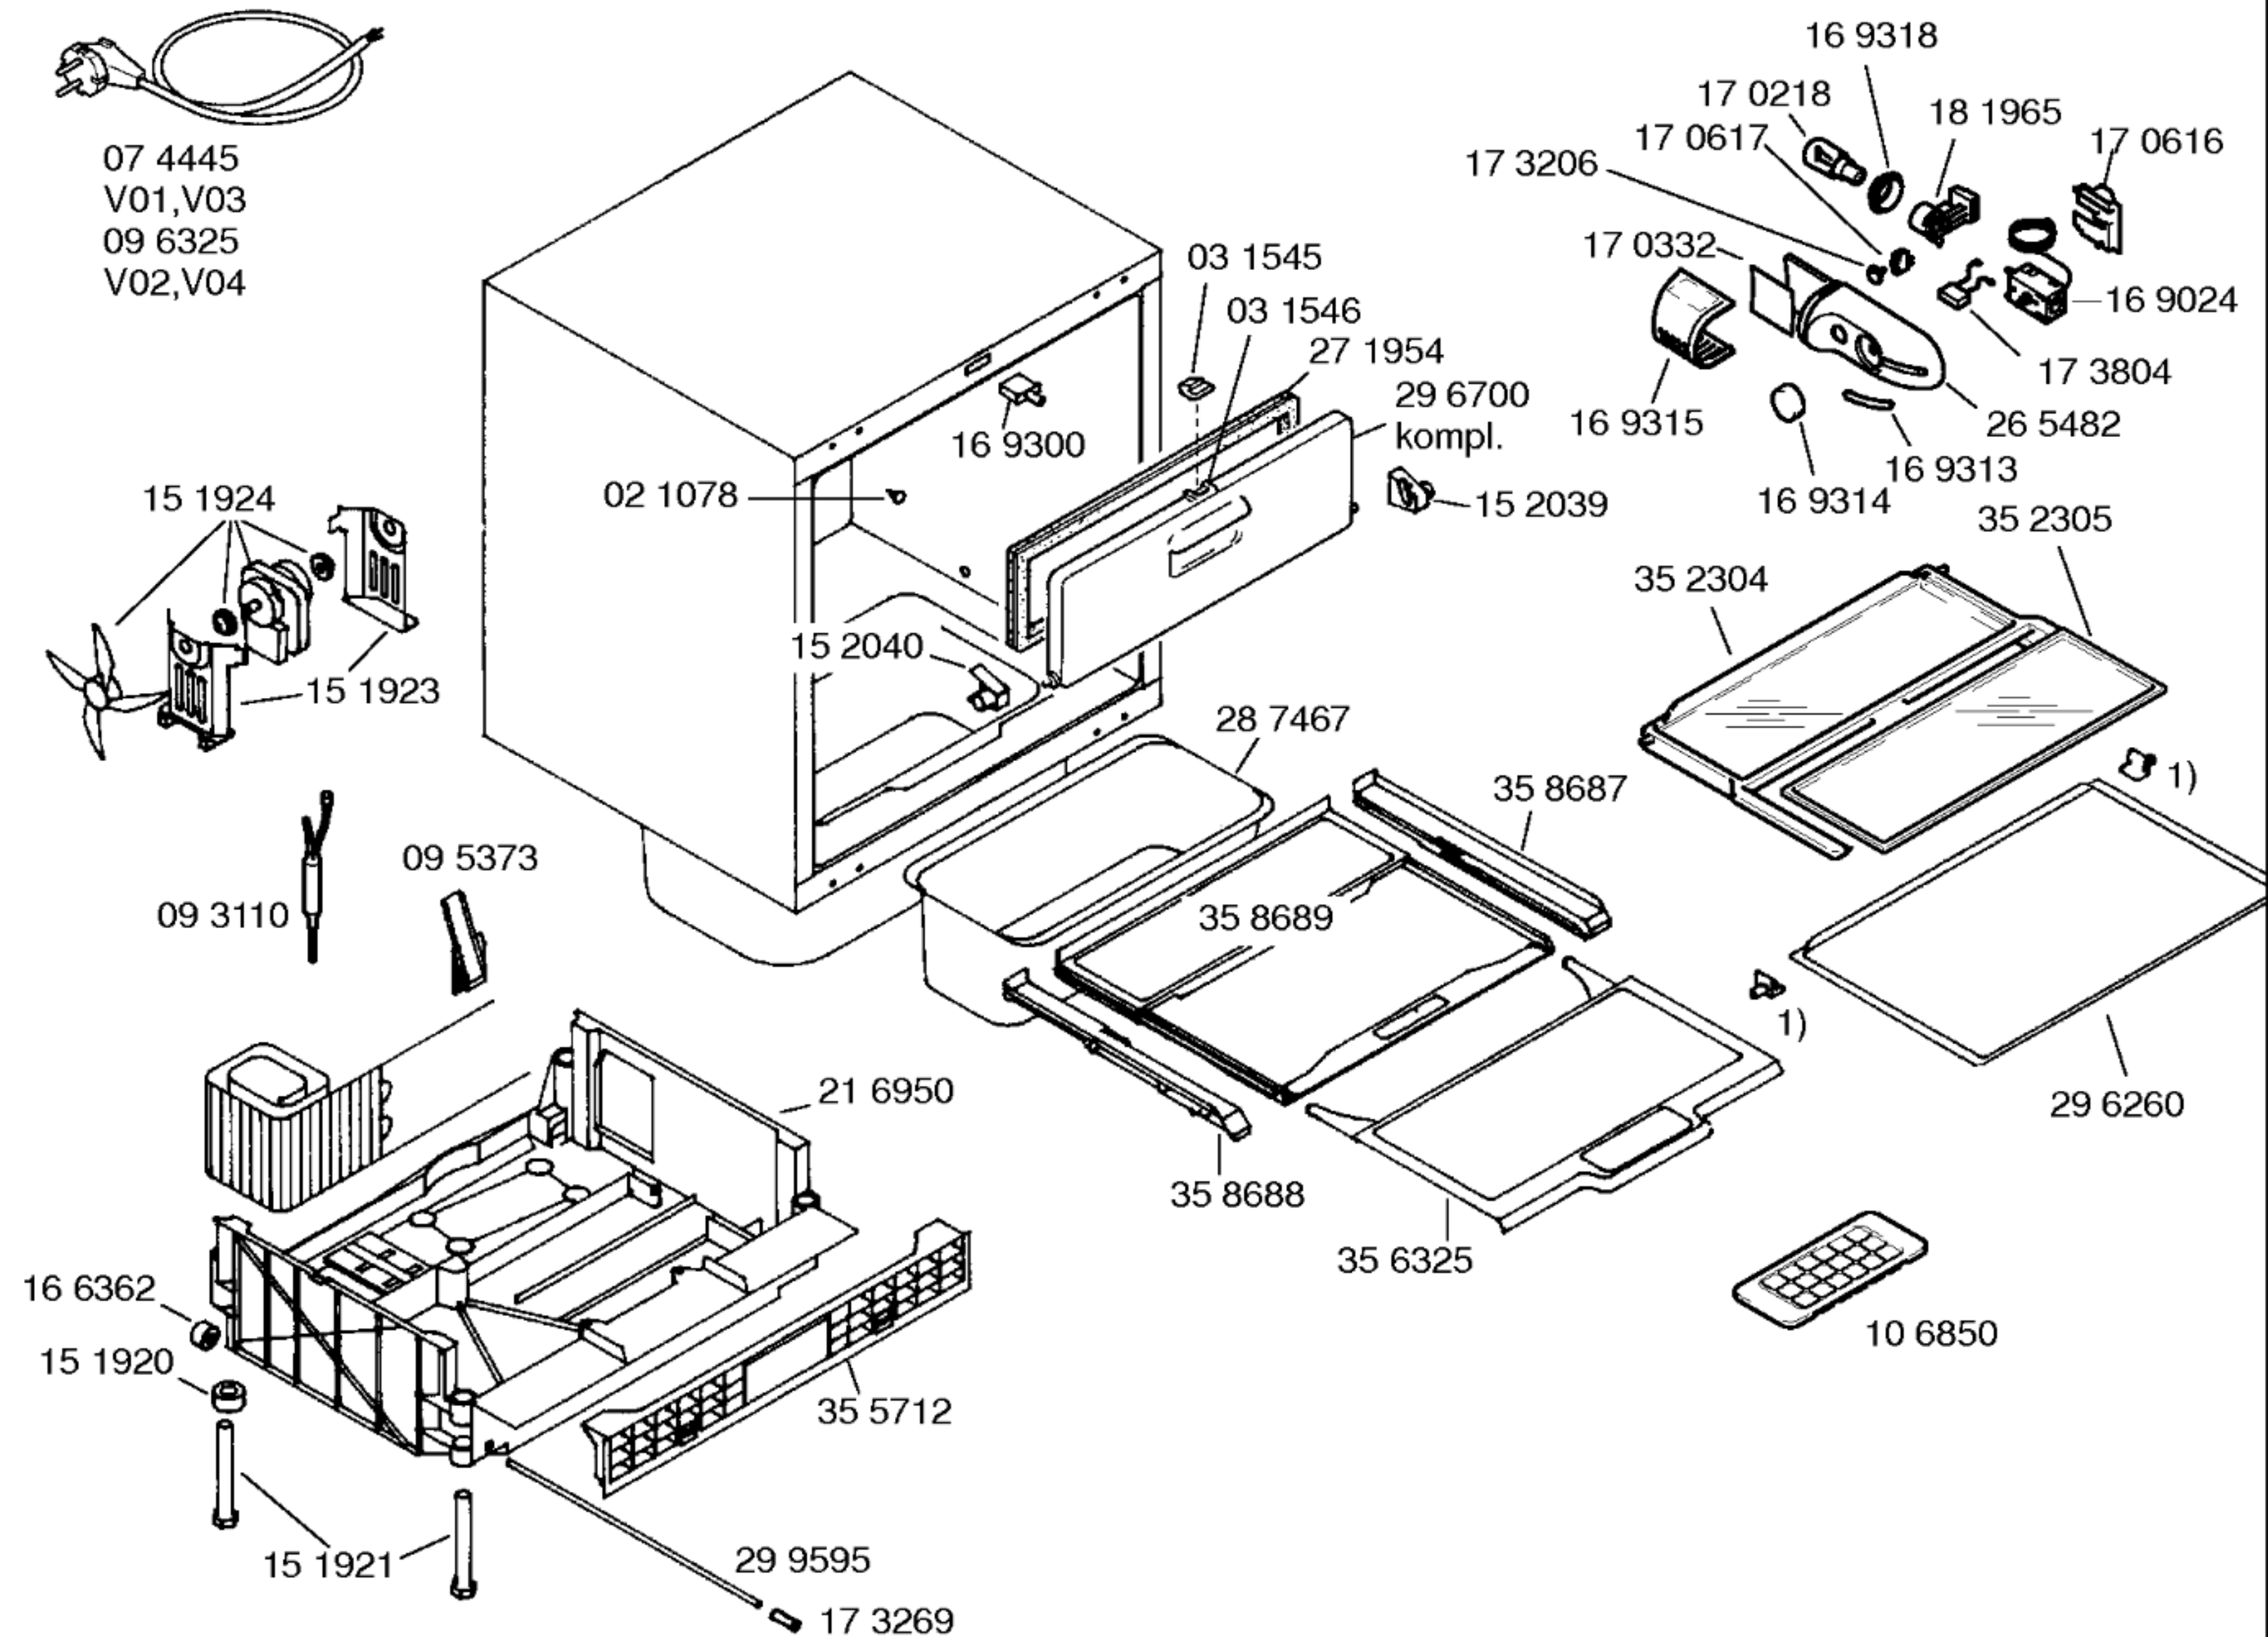


Gebrauchsanweisung
52 4046
Montageanleitung
52 6094

Beistellsatz
26 8429

1) 16 5789

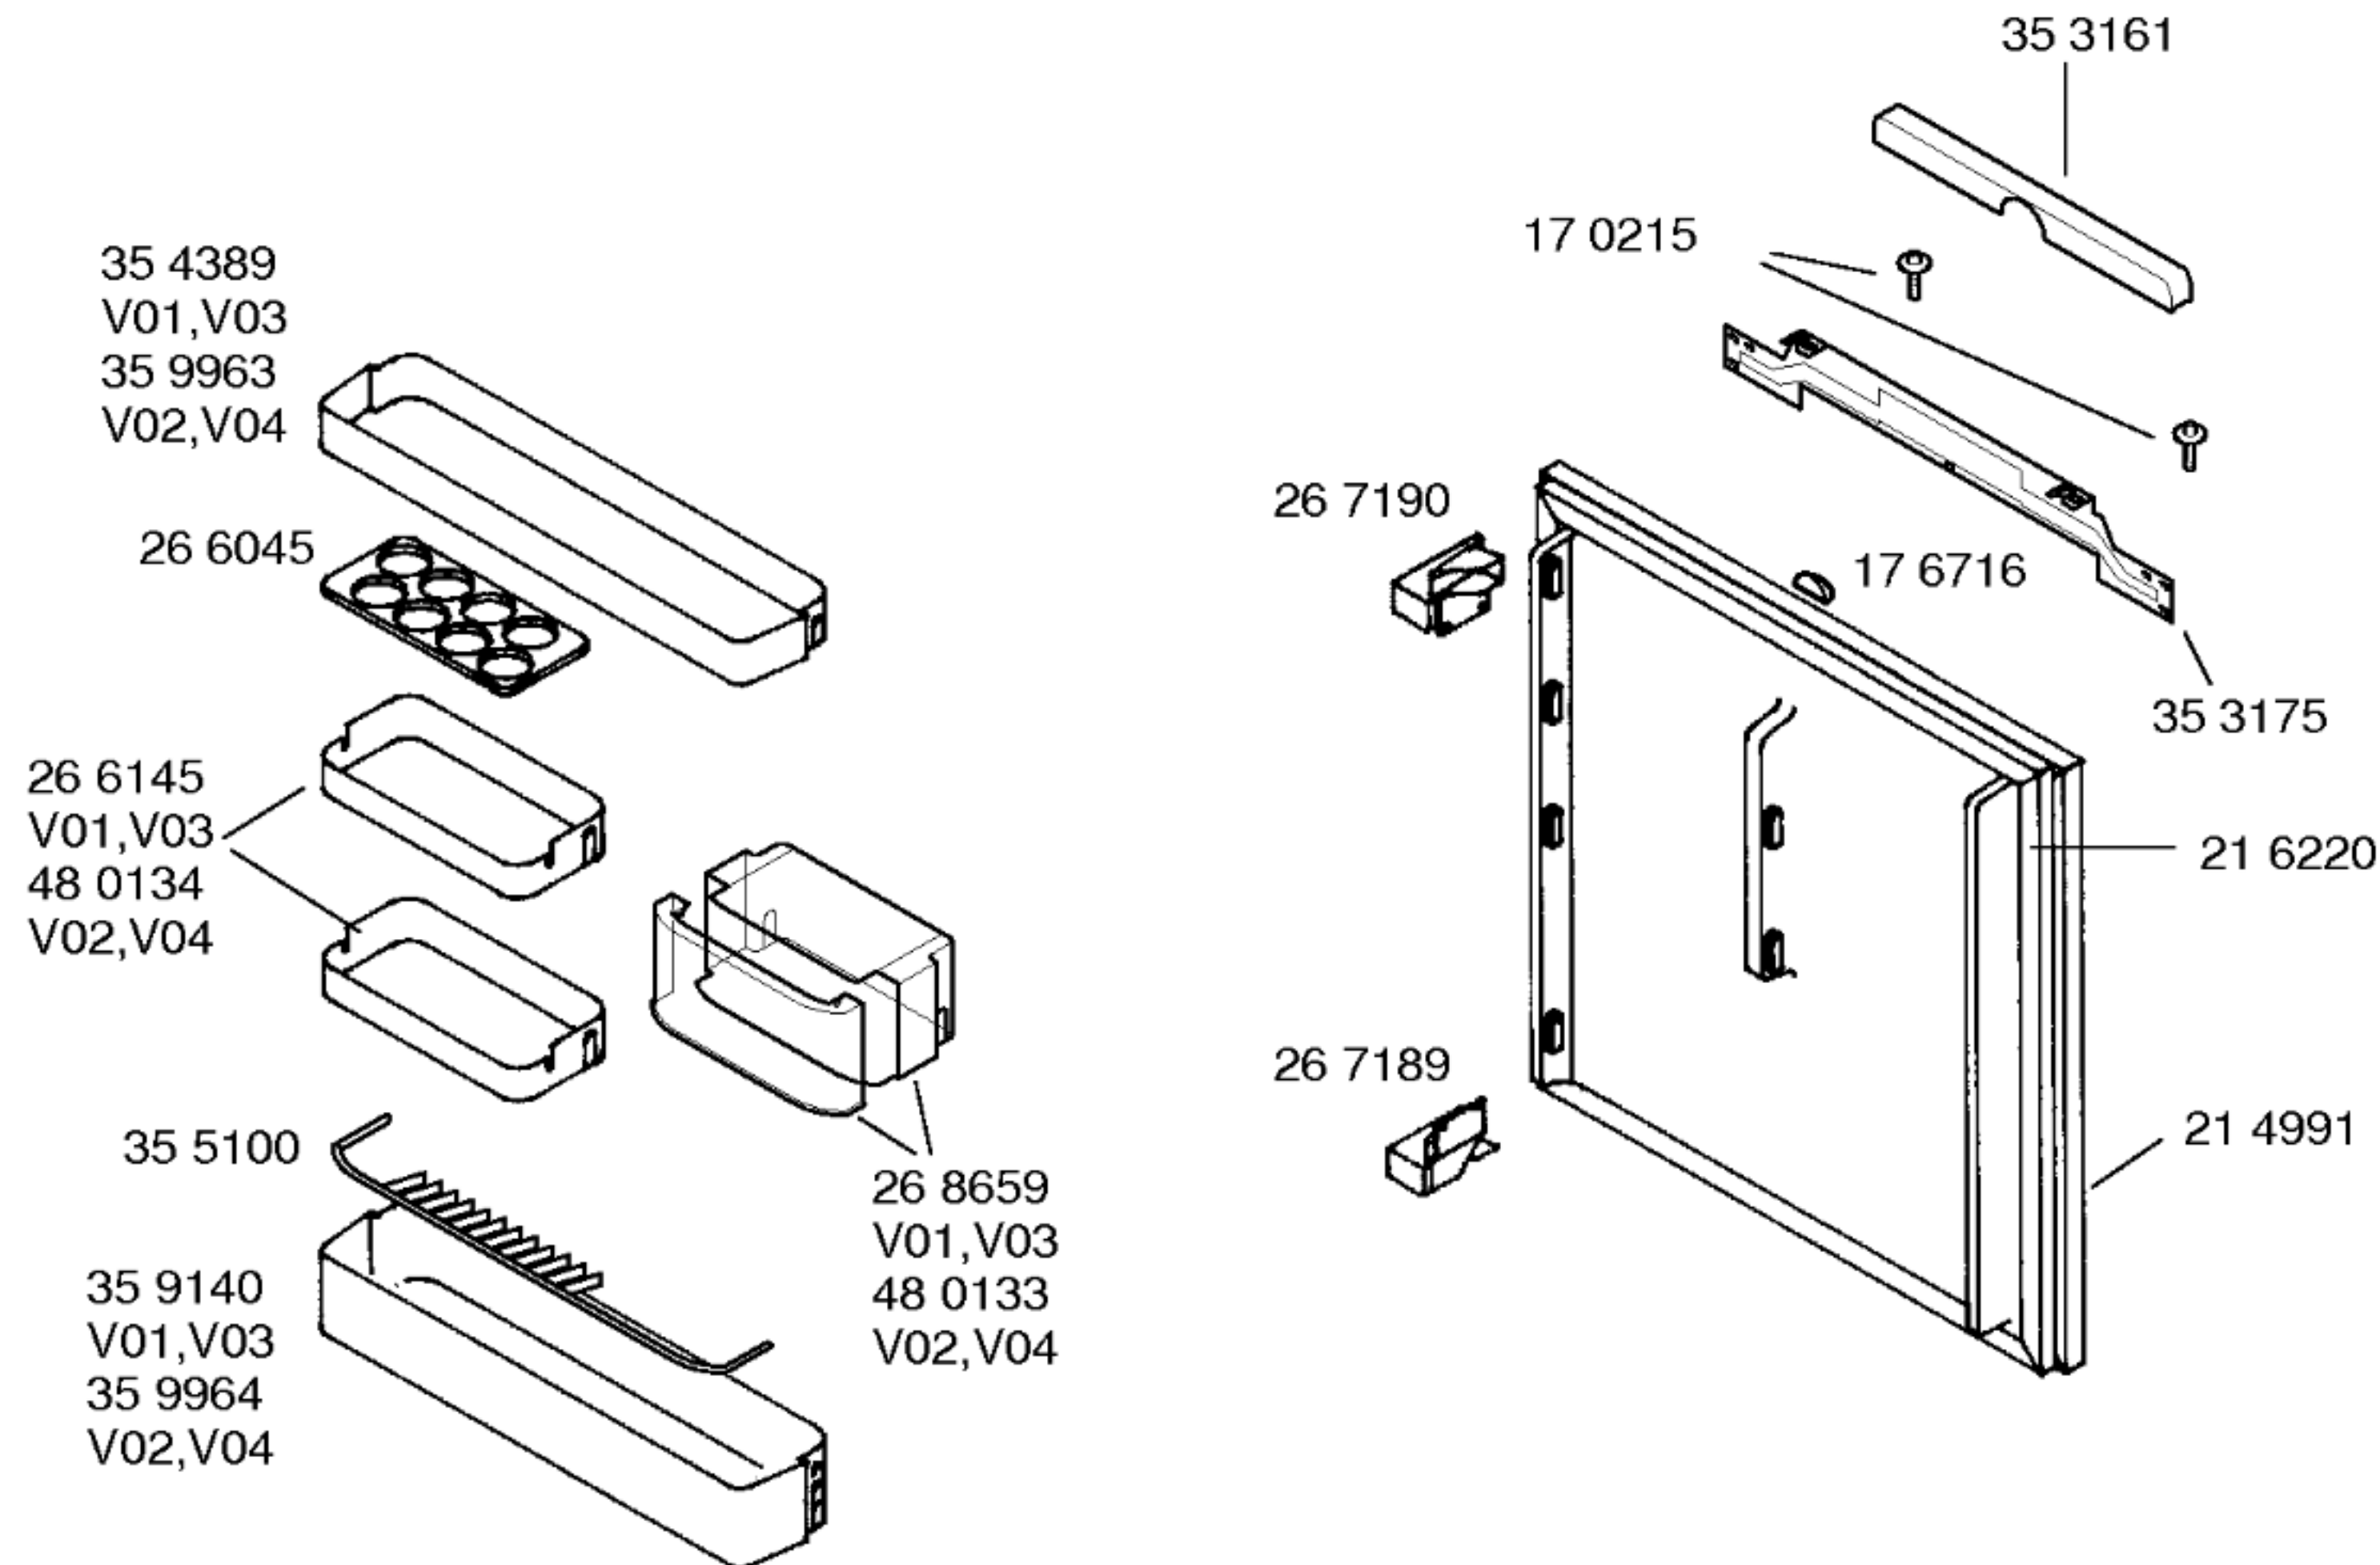

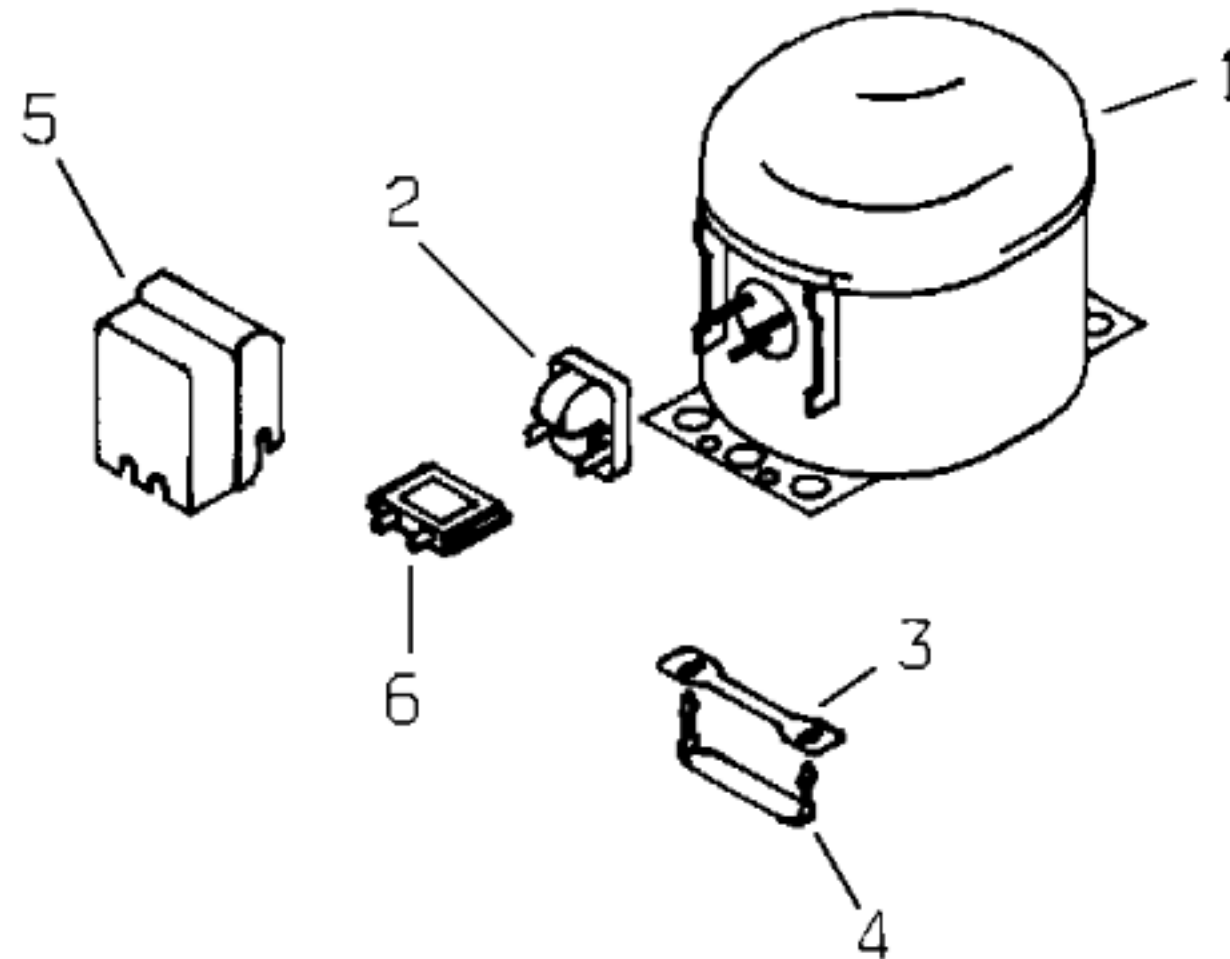

	V01,V02	V03,V04	
Pos.	Danfoss	Goldstar	
	TLES 7 KK2	ND69NAEM	
1	14 1903	14 1999	
2	15 1055	17 0743	
3	18 3656	18 3656	
4	18 3655	18 3655	
5	15 1072	17 0744	
6	15 0760	17 0745	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Goldstar
Typ/Type		TLES 7 KK2	ND69NAEM
Förderleistung/Delivery/Débit	l/h	1168	1242
Anlaufstrom/Starting current/Cour de démarrage	A	7,5	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	
	Hi/aux Ω	15,3	
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5 +5	
Valeurs de commutation	„aus“	-28 -17	
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	75	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild