



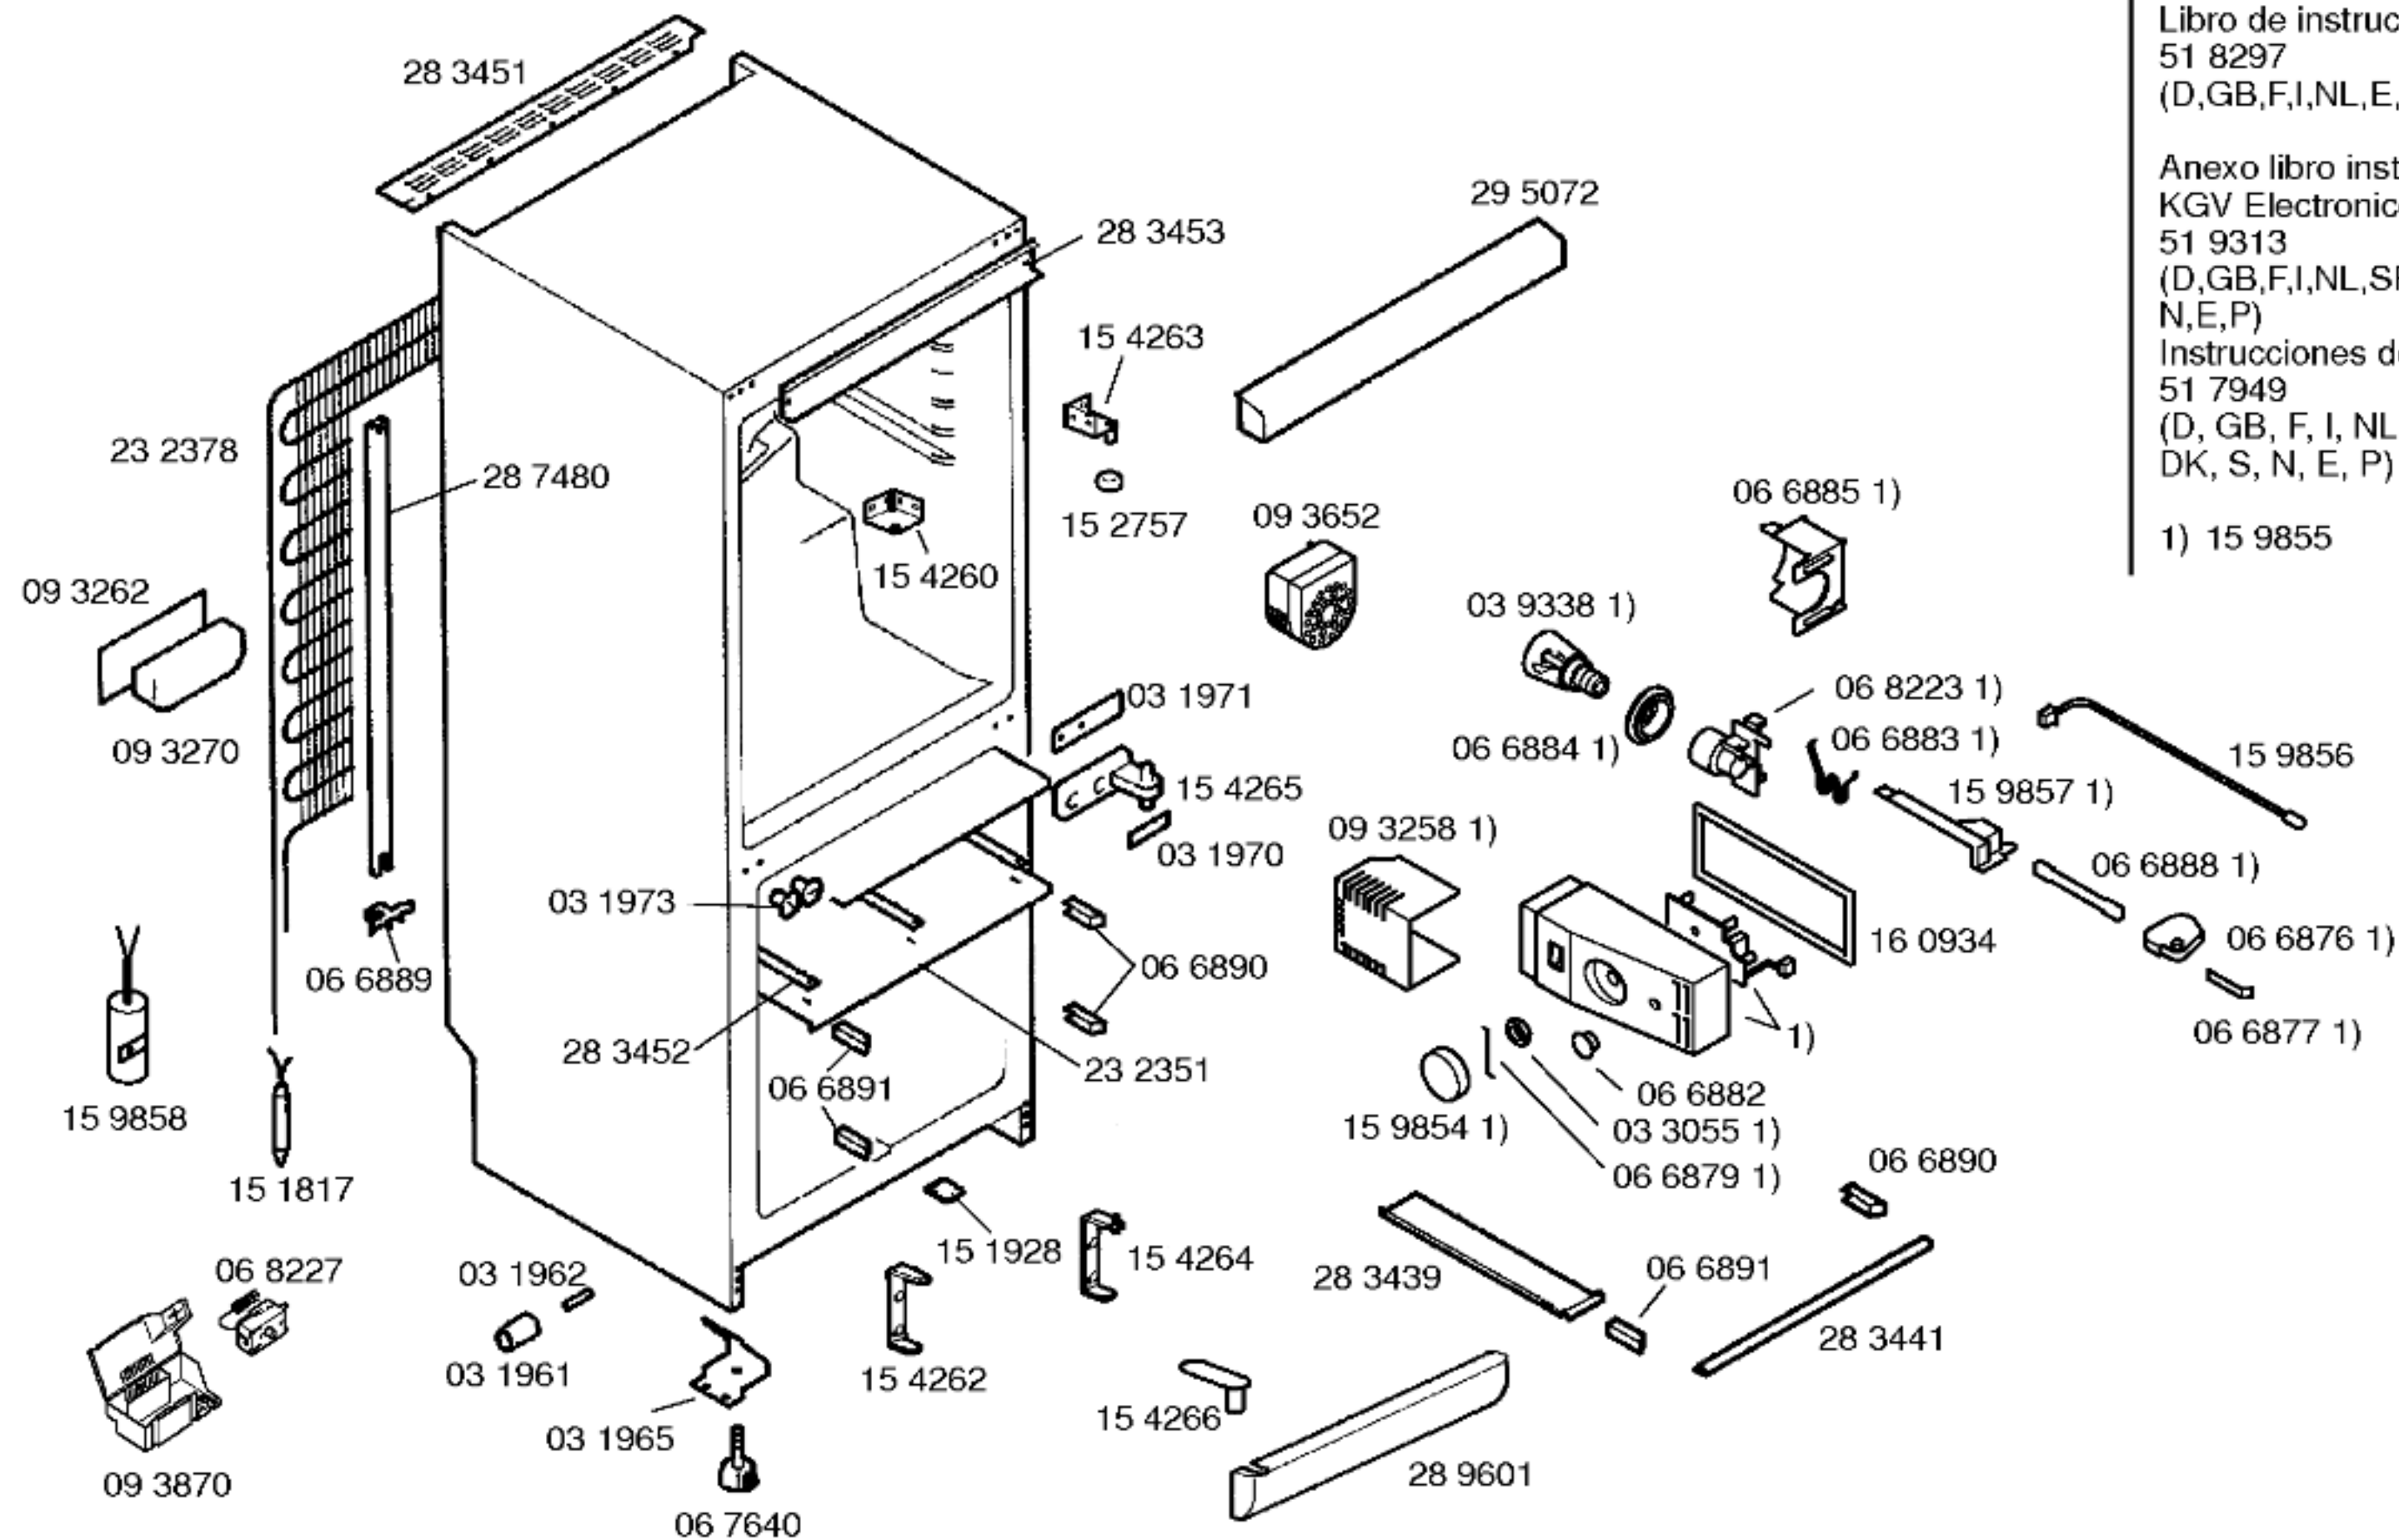


Libro de instrucciones
51 8297
(D,GB,F,I,NL,E,P)

Anexo libro instrucciones
KGV Electronico
51 9313
(D,GB,F,I,NL,SF,DK, S,
N,E,P)
Instrucciones de montaje
51 7949
(D, GB, F, I, NL, SF,
DK, S, N, E, P)

1) 15 9855

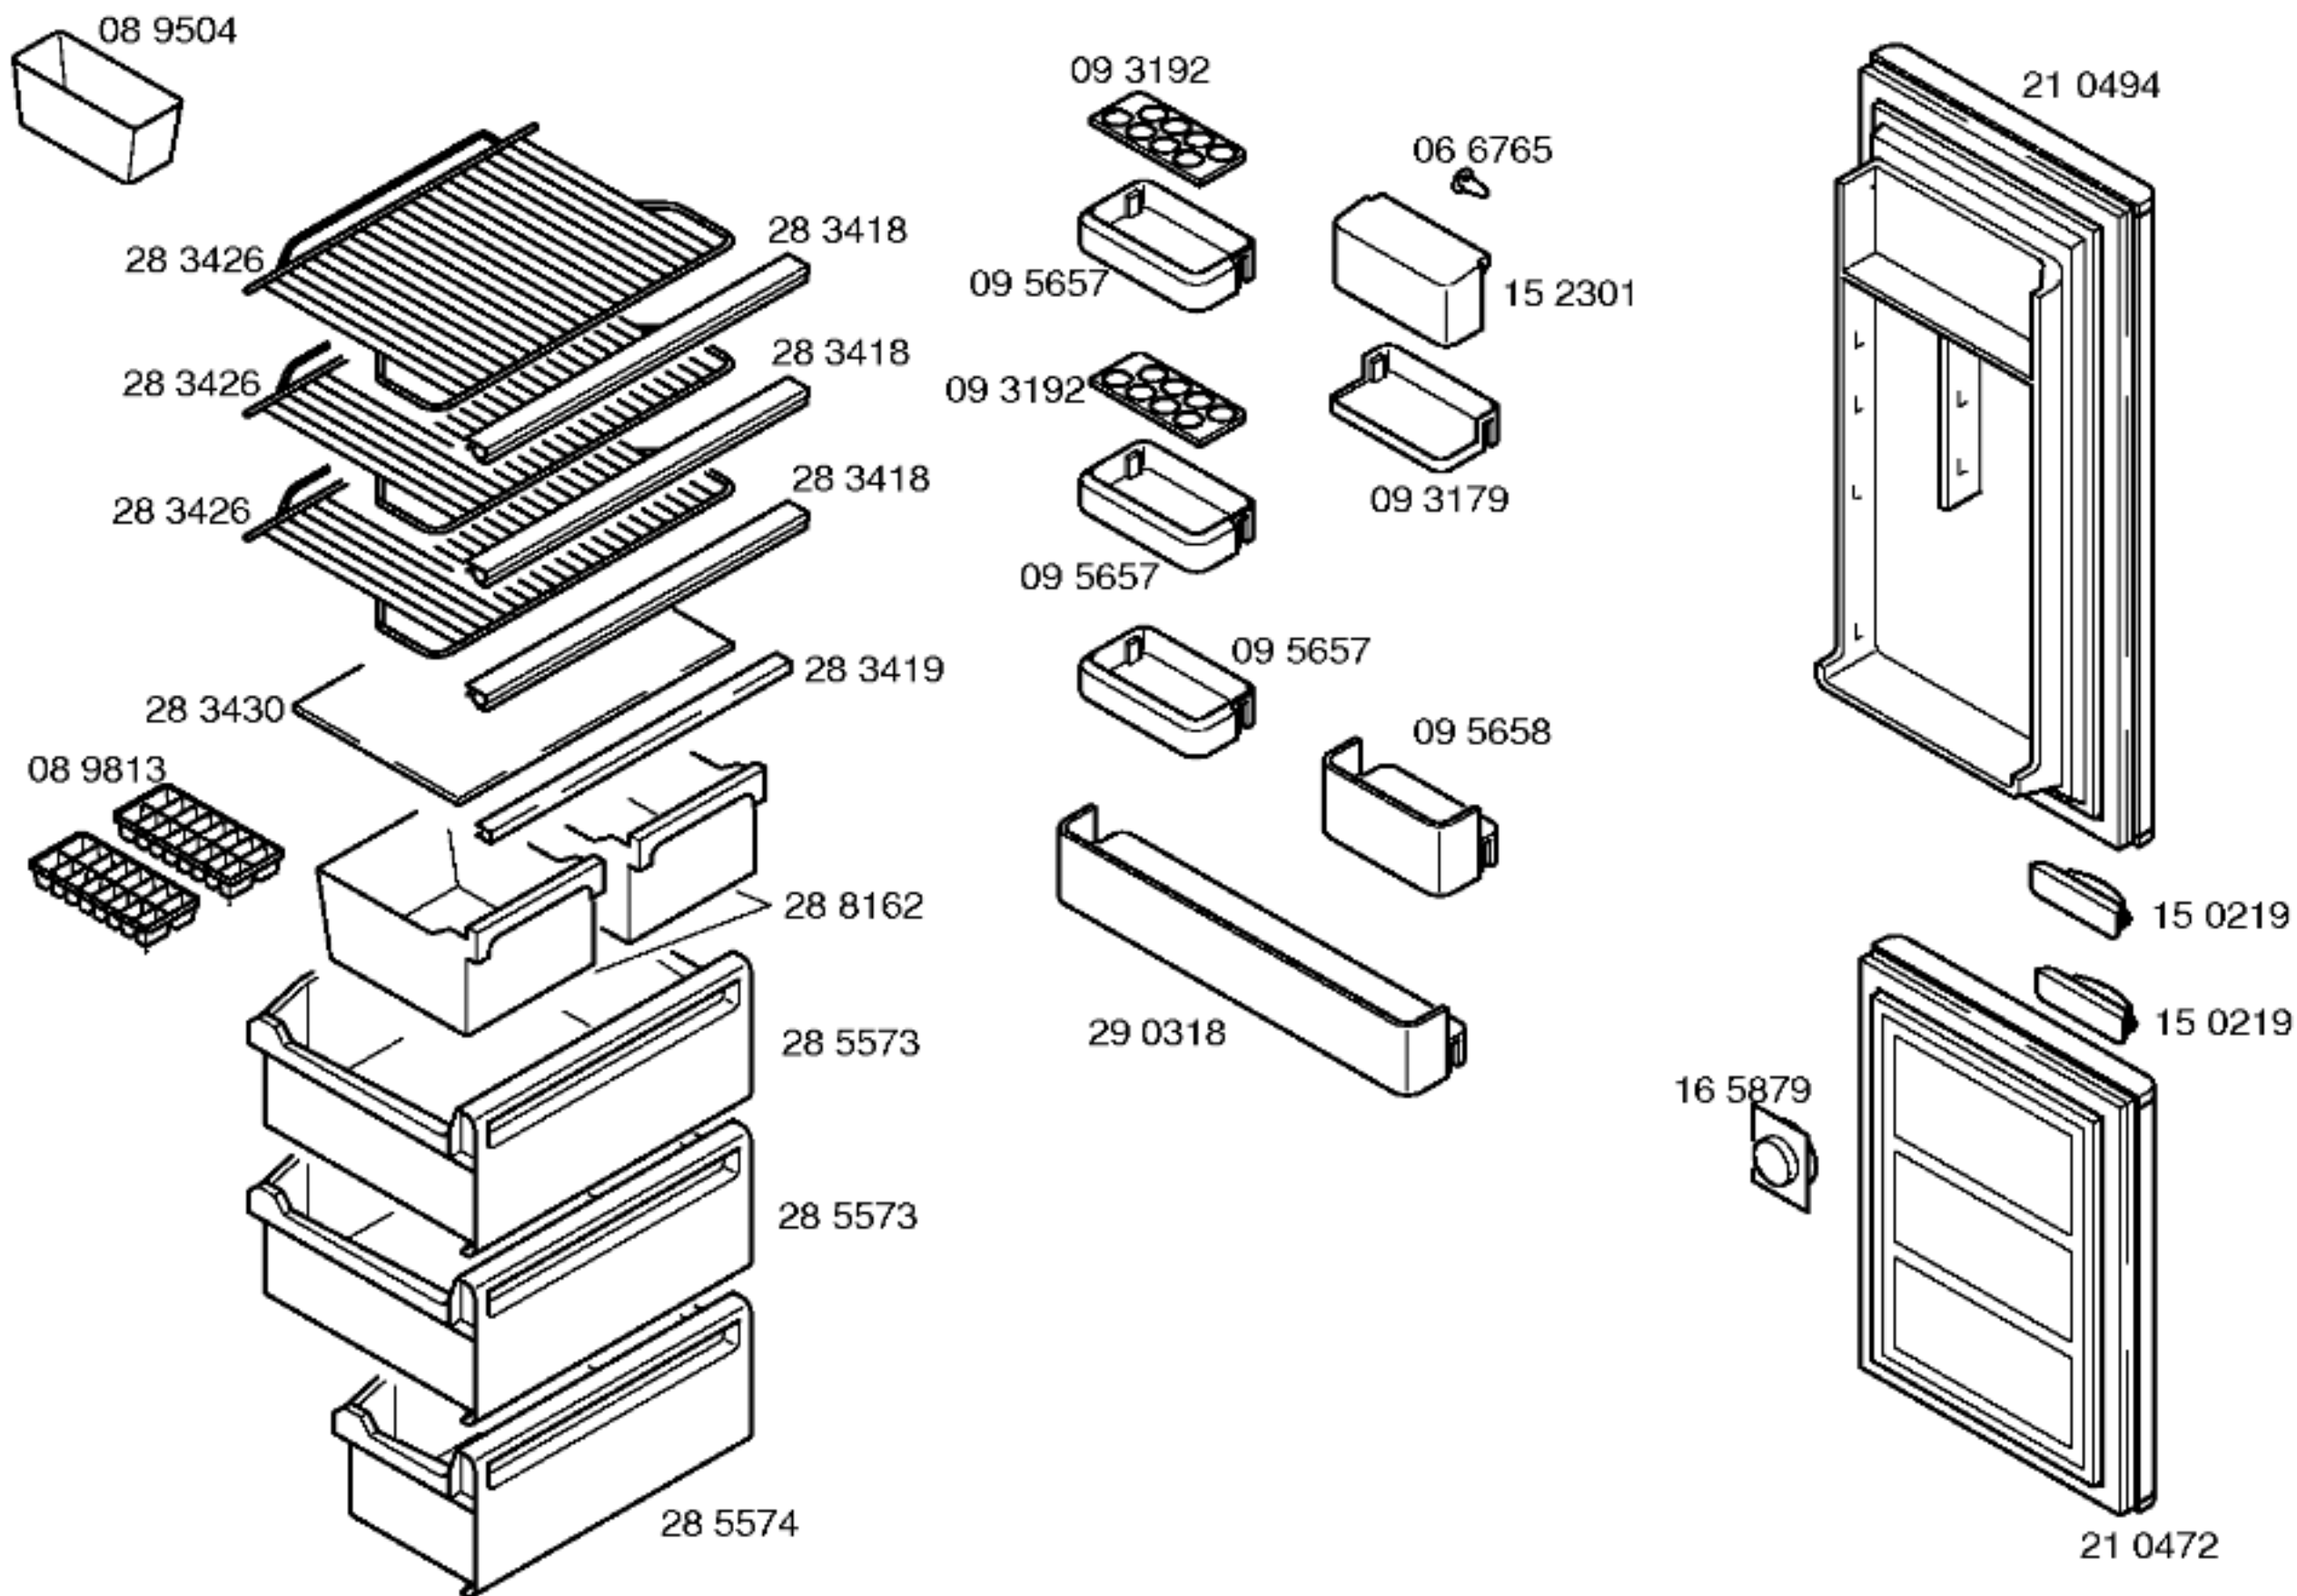

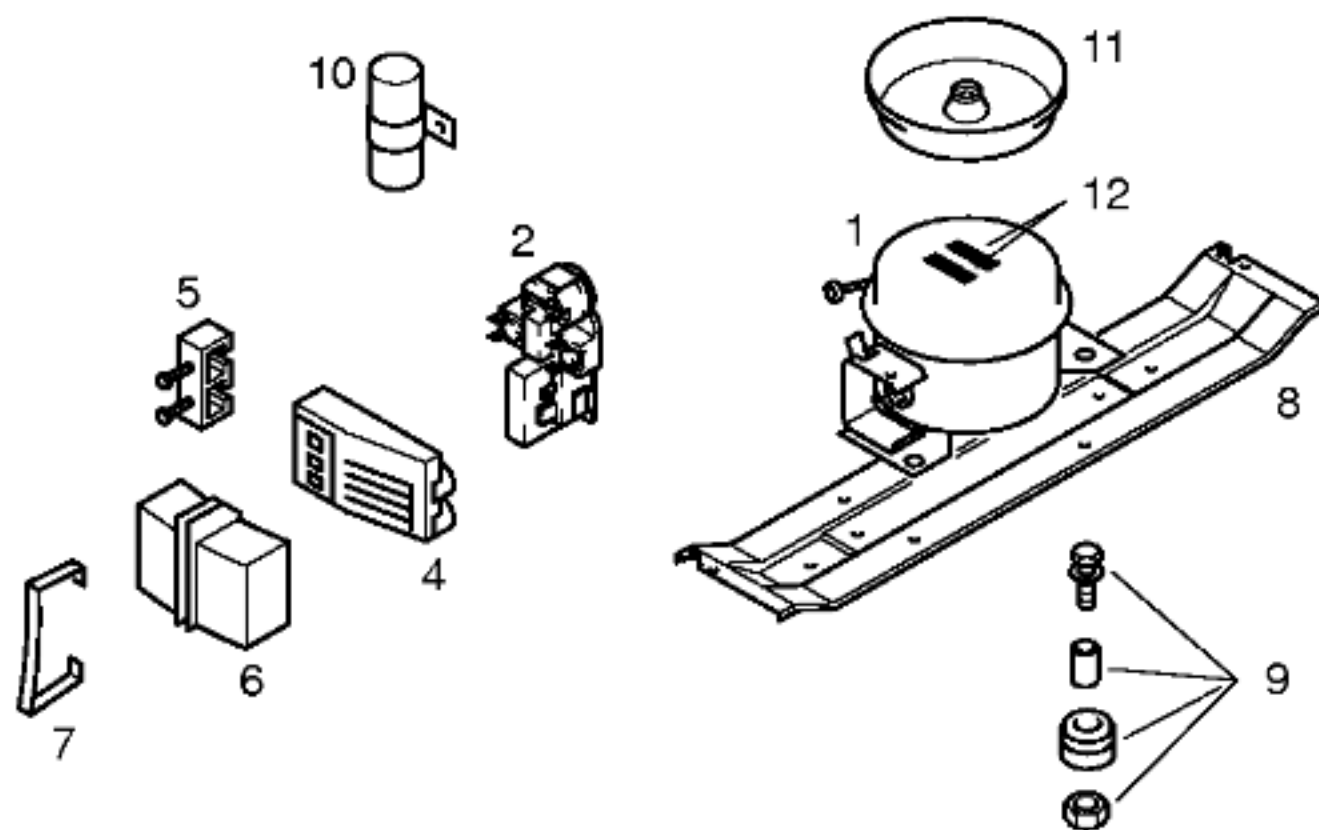

Pos.	MATSUSHITA	
	D91C18RA	
1	14 1289	
2	15 0603	
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	
10		
11	08 5182	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita D91C18RA 10,89 8,53 21,10	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm' Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon.	BOSCH DFR10 MIN. MAX +20°C +10,5°C +19,5°C +10°C +5°C +5°C — —	
Füllmenge/Fill. quantity/Charge/Carga 134a g	150	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	215	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		