




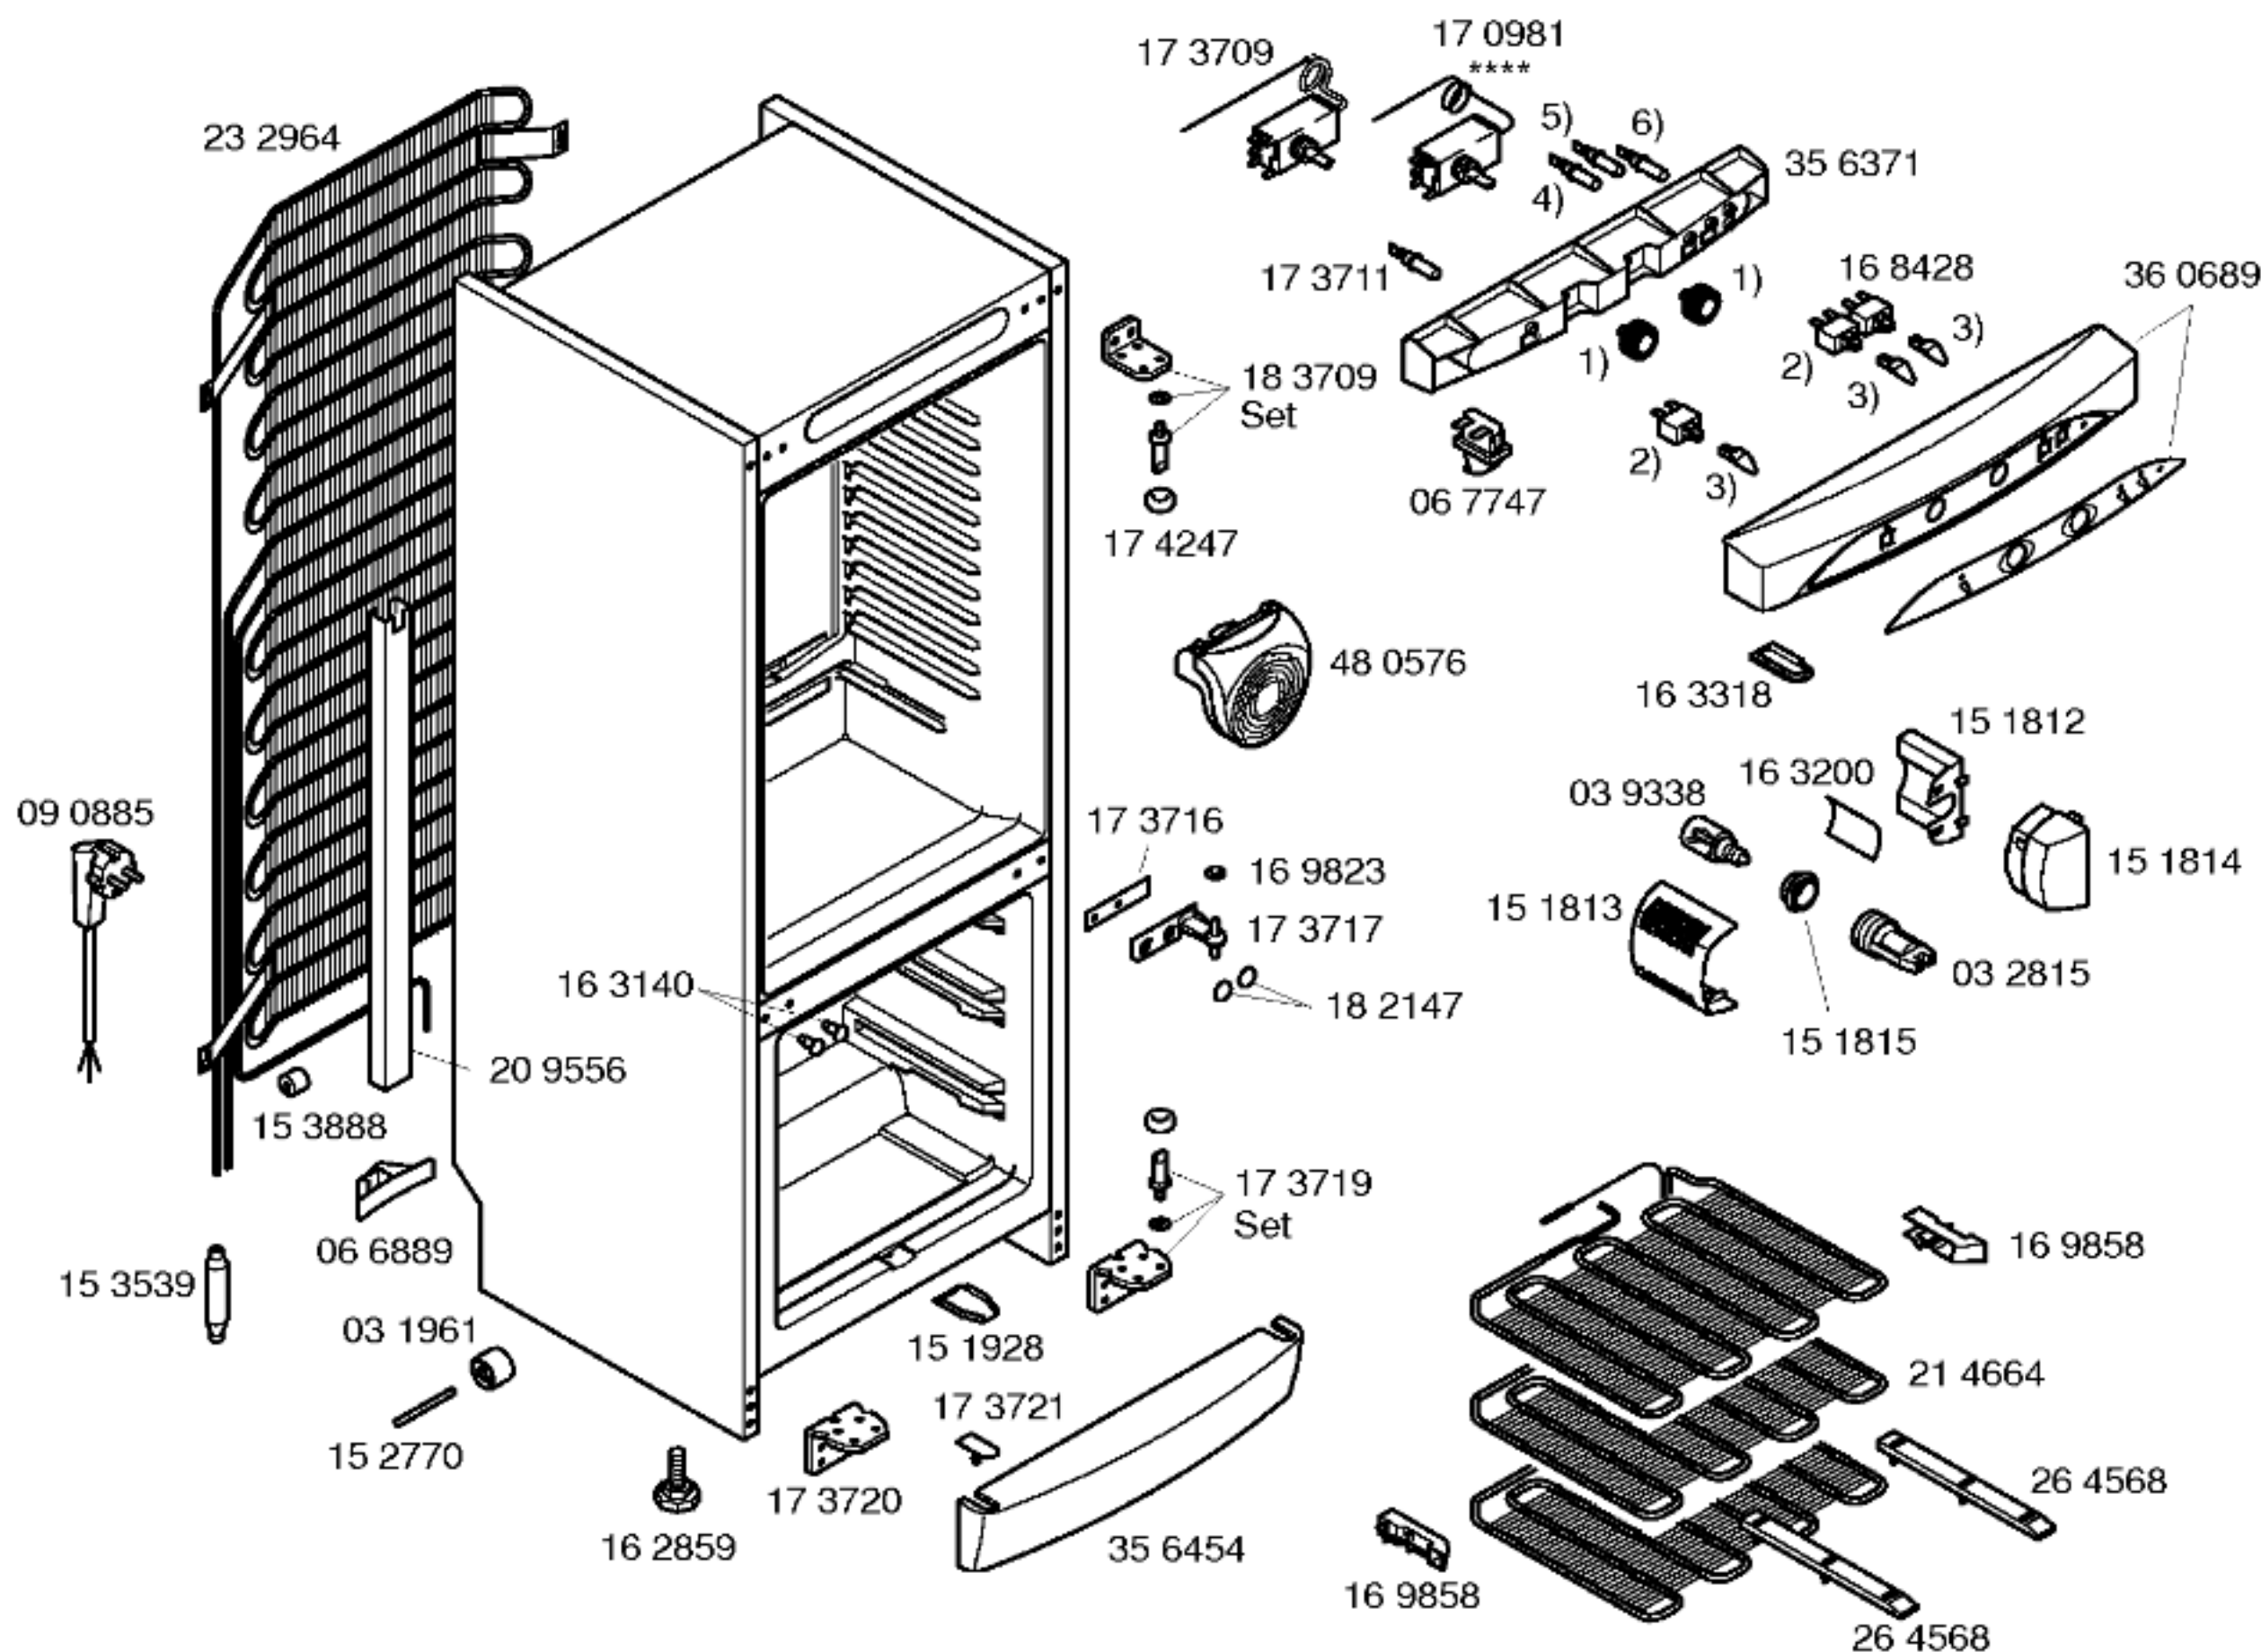

Libro de instrucciones
52 4219
(E,P,GB,F,D)

- 1) 16 5458
- 2) 16 8427
- 3) 17 3835
- 4) 17 3711 Verde
- 5) 17 3712 Ambar
- 6) 17 3713 Rojo

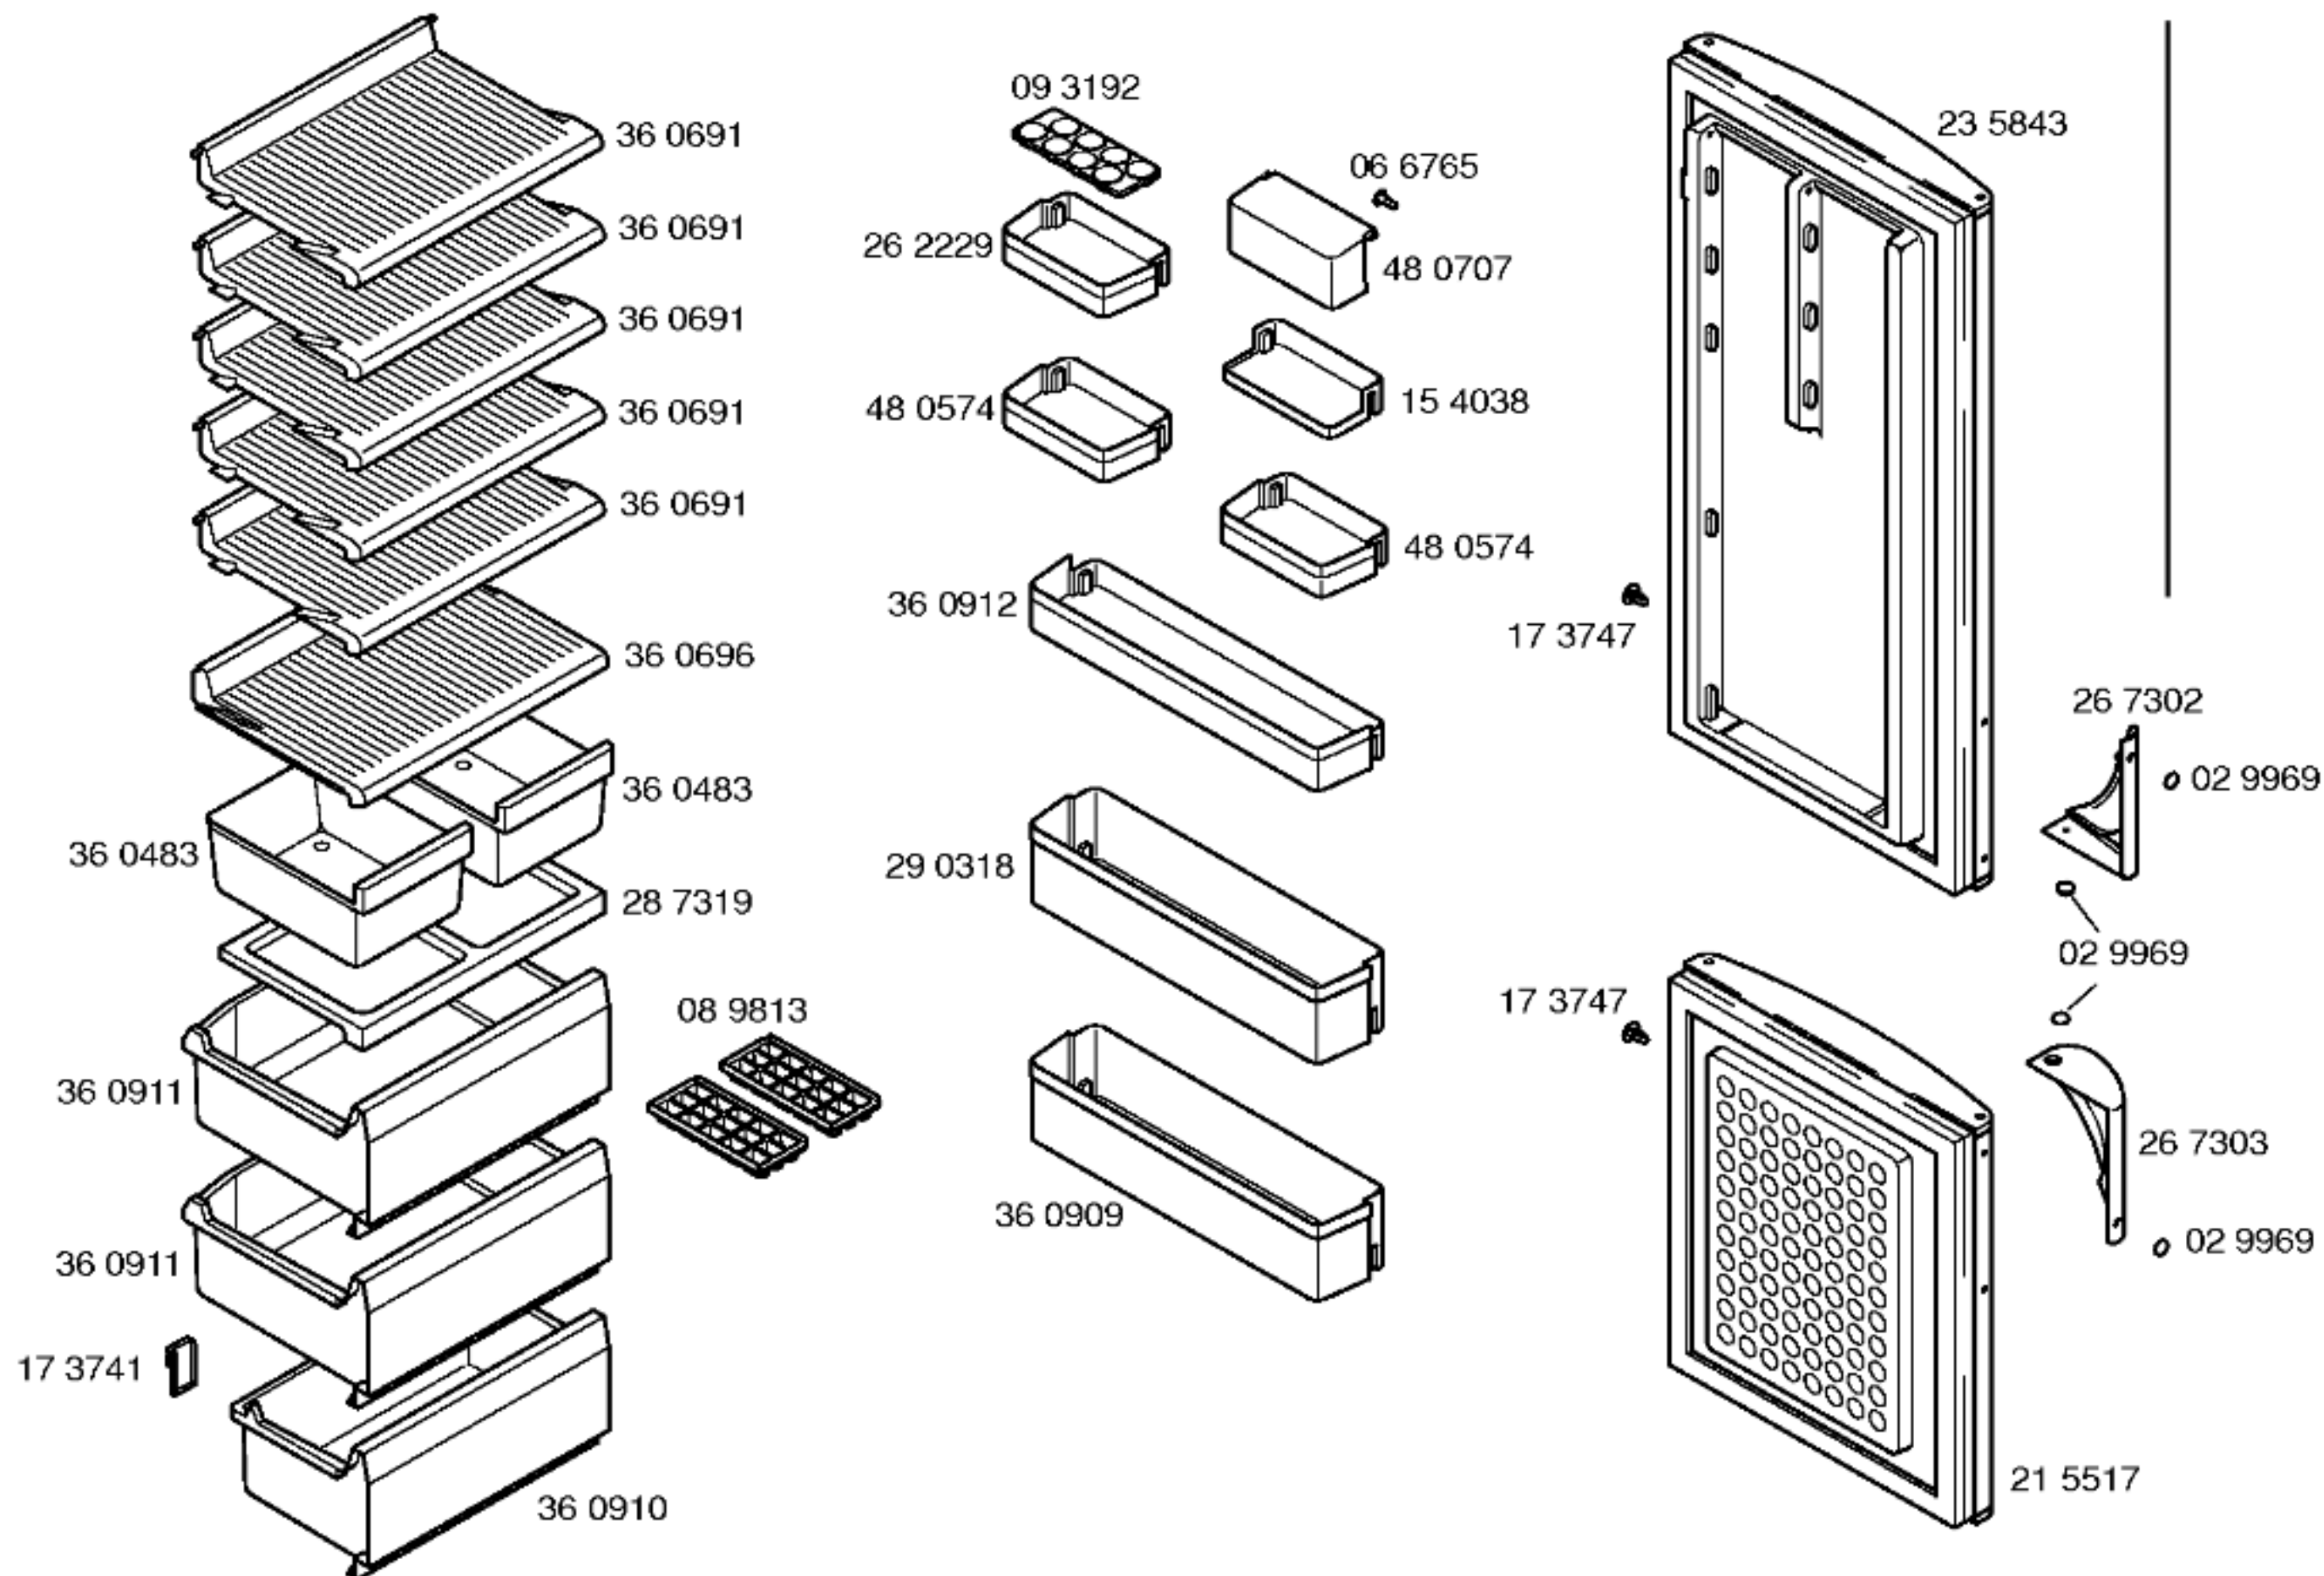

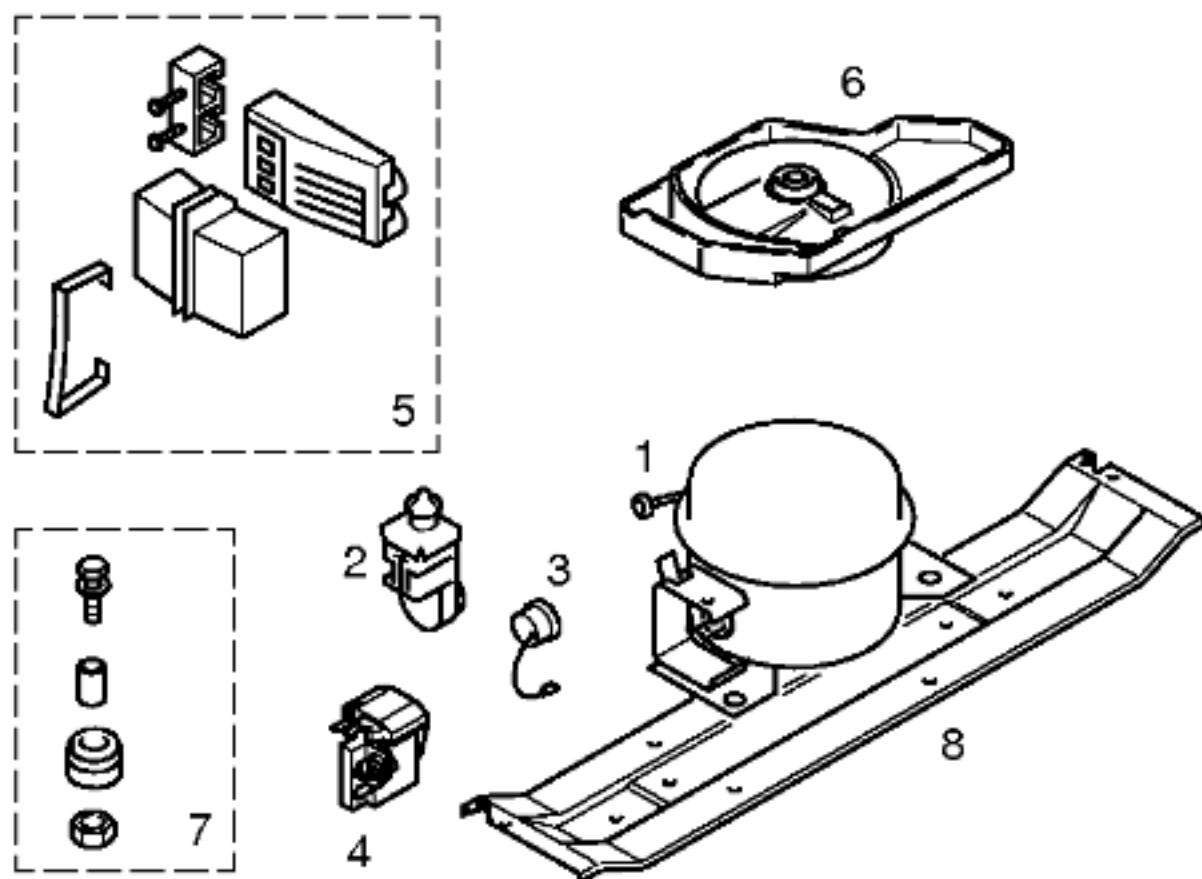

Pos.		****	****	
		V01	V02	
	Aspera	Gold Star	Aspera	
	BPK1072Y	ND69NAEG	BPK1084Y	
1	14 2000	14 2001	14 2001	
2	15 4315		15 4315	
3	17 3748		16 7769	
4		17 1011		
5				
6	26 4123			
7	05 0166	05 0166	05 0166	
8	28 8253	28 8253	28 8253	
9				
10				
11				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				
		****	****	
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Aspera BPK1072Y 0,47 33,10 38,20	Gold Star ND69NAEG	Aspera BPK1084Y 0,52 29,35 41,25	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Danfoss 077B6181 MIN. MAX. +6° -11° -28°	Ranco K54-L2007 MIN. MAX. -14° -22° -20° -28° -10° -18°		
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	79	83	87
Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características