




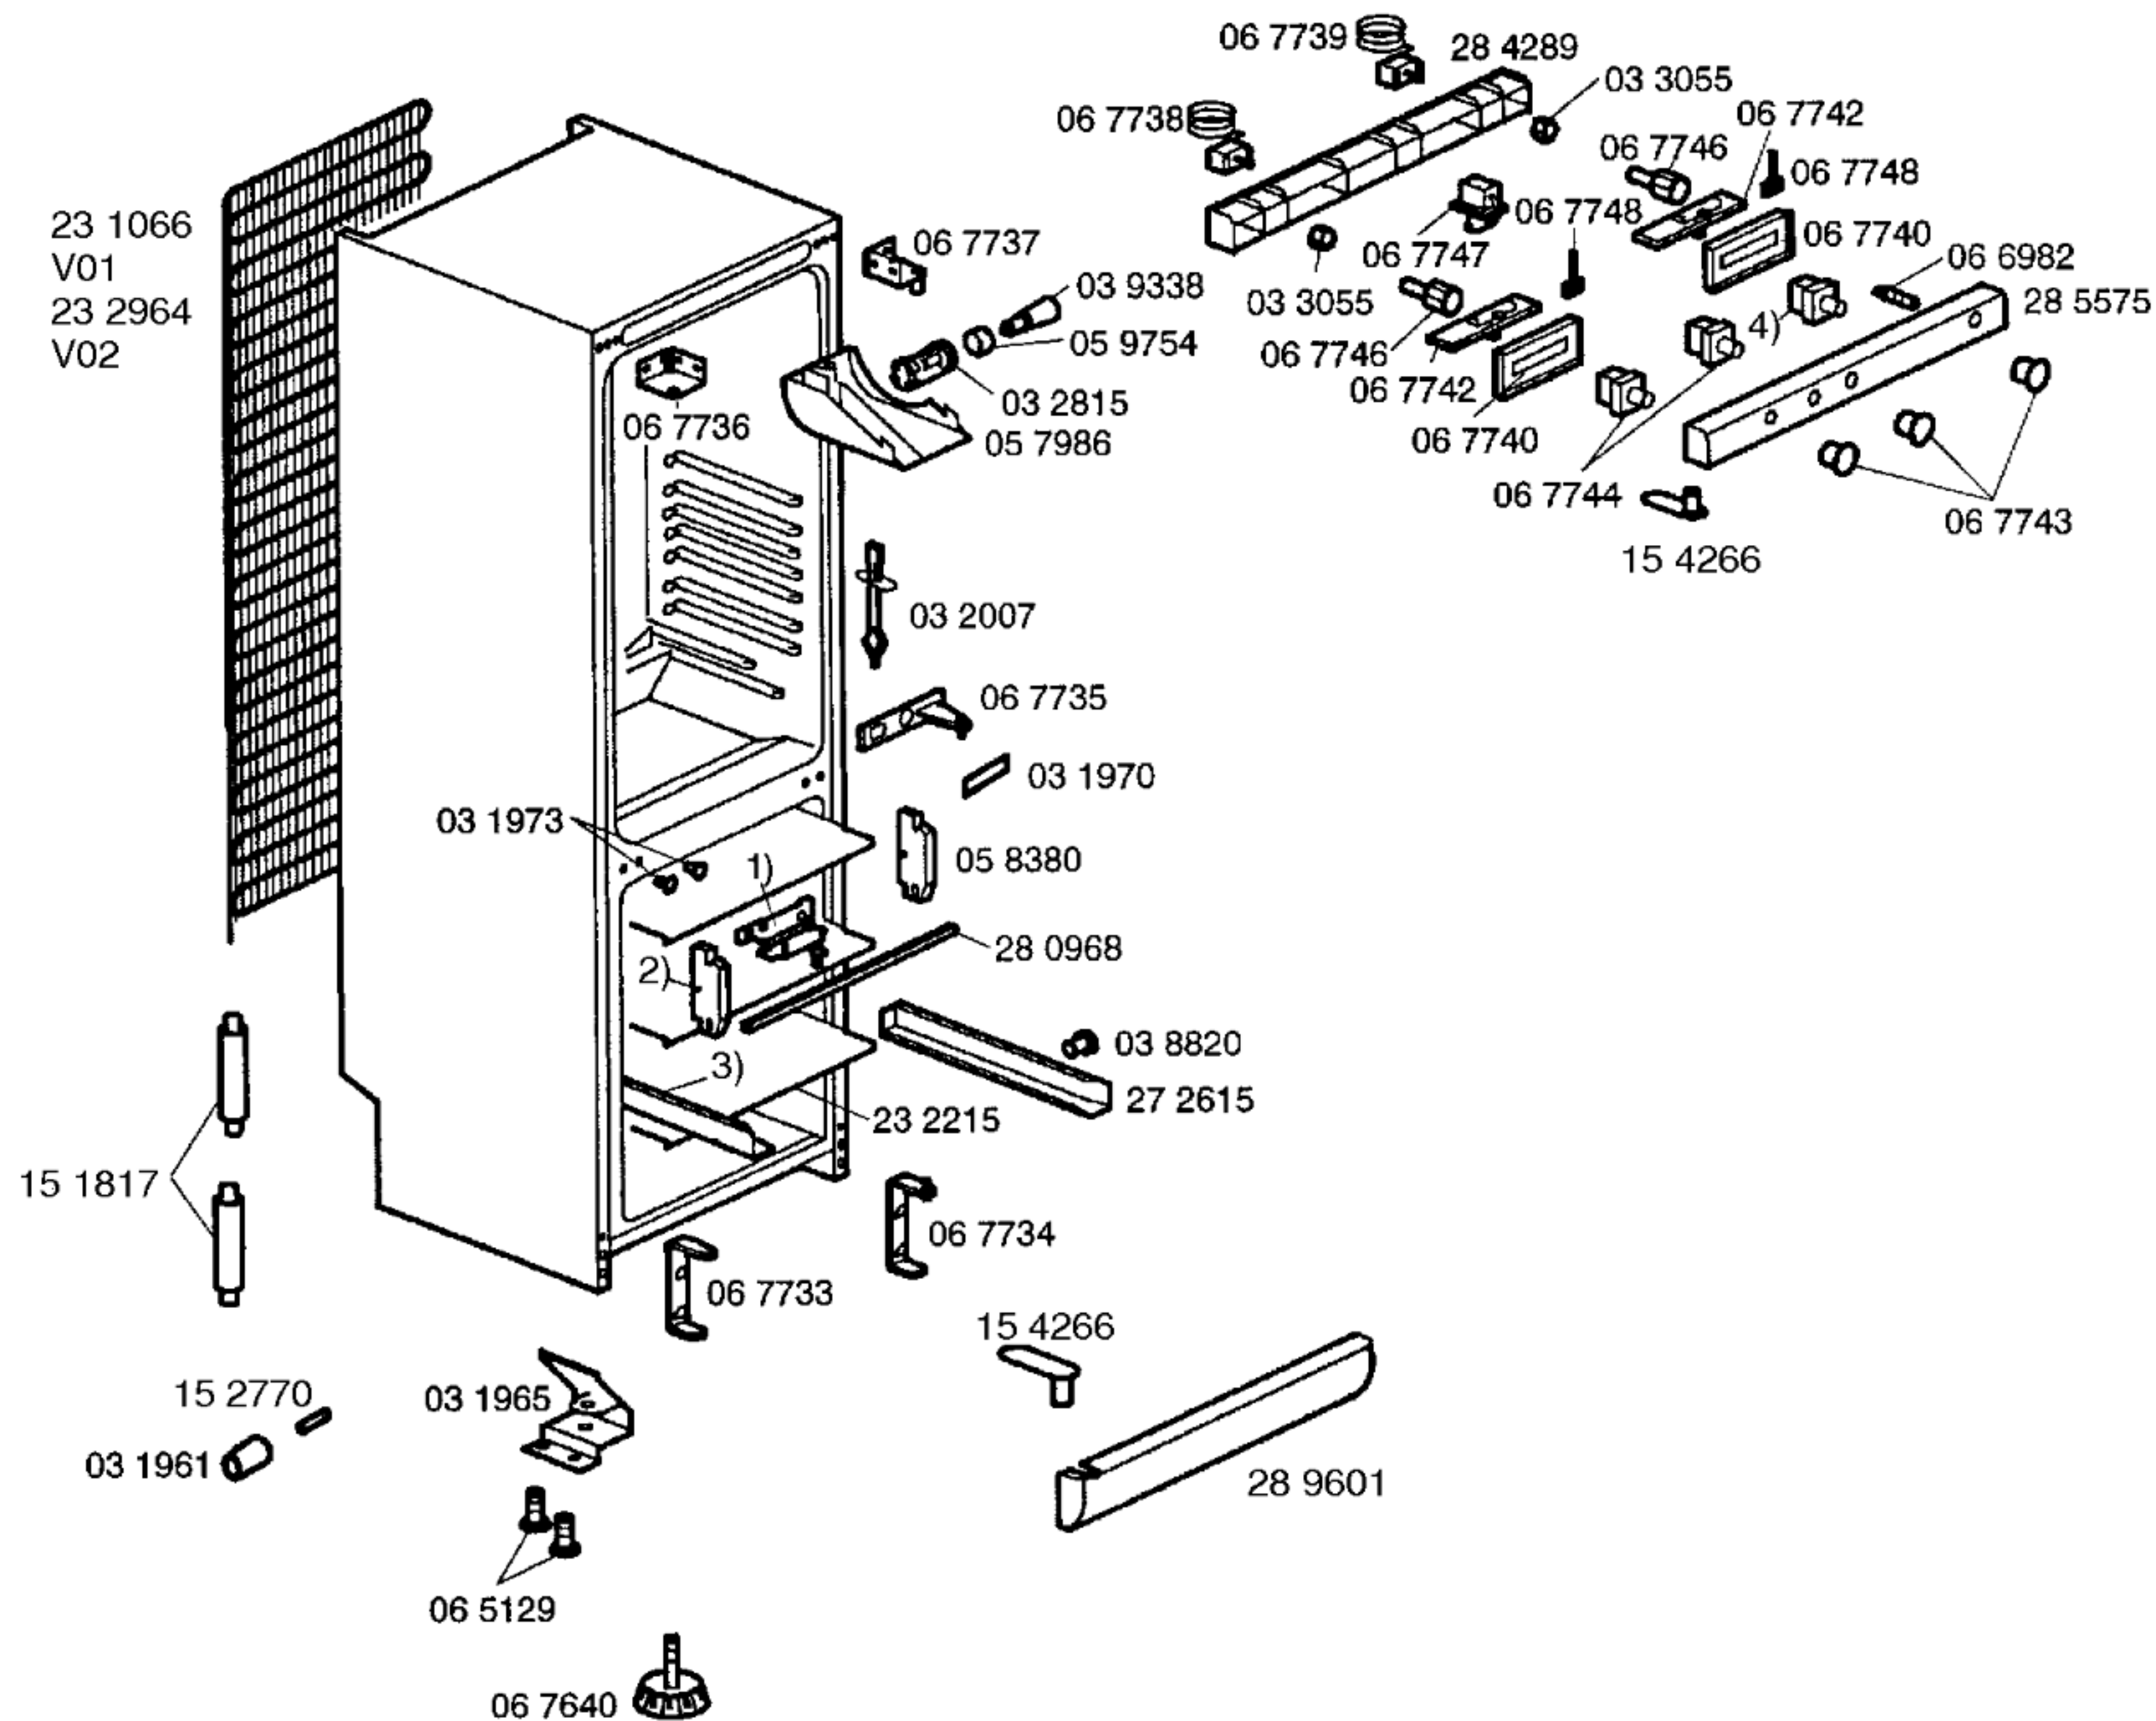

Libro de instrucciones
51 6498
(E, P, GB, F, NL, GR)

- 1) 15 0964
- 2) 05 8002
- 3) 27 2614
- 4) 06 7745

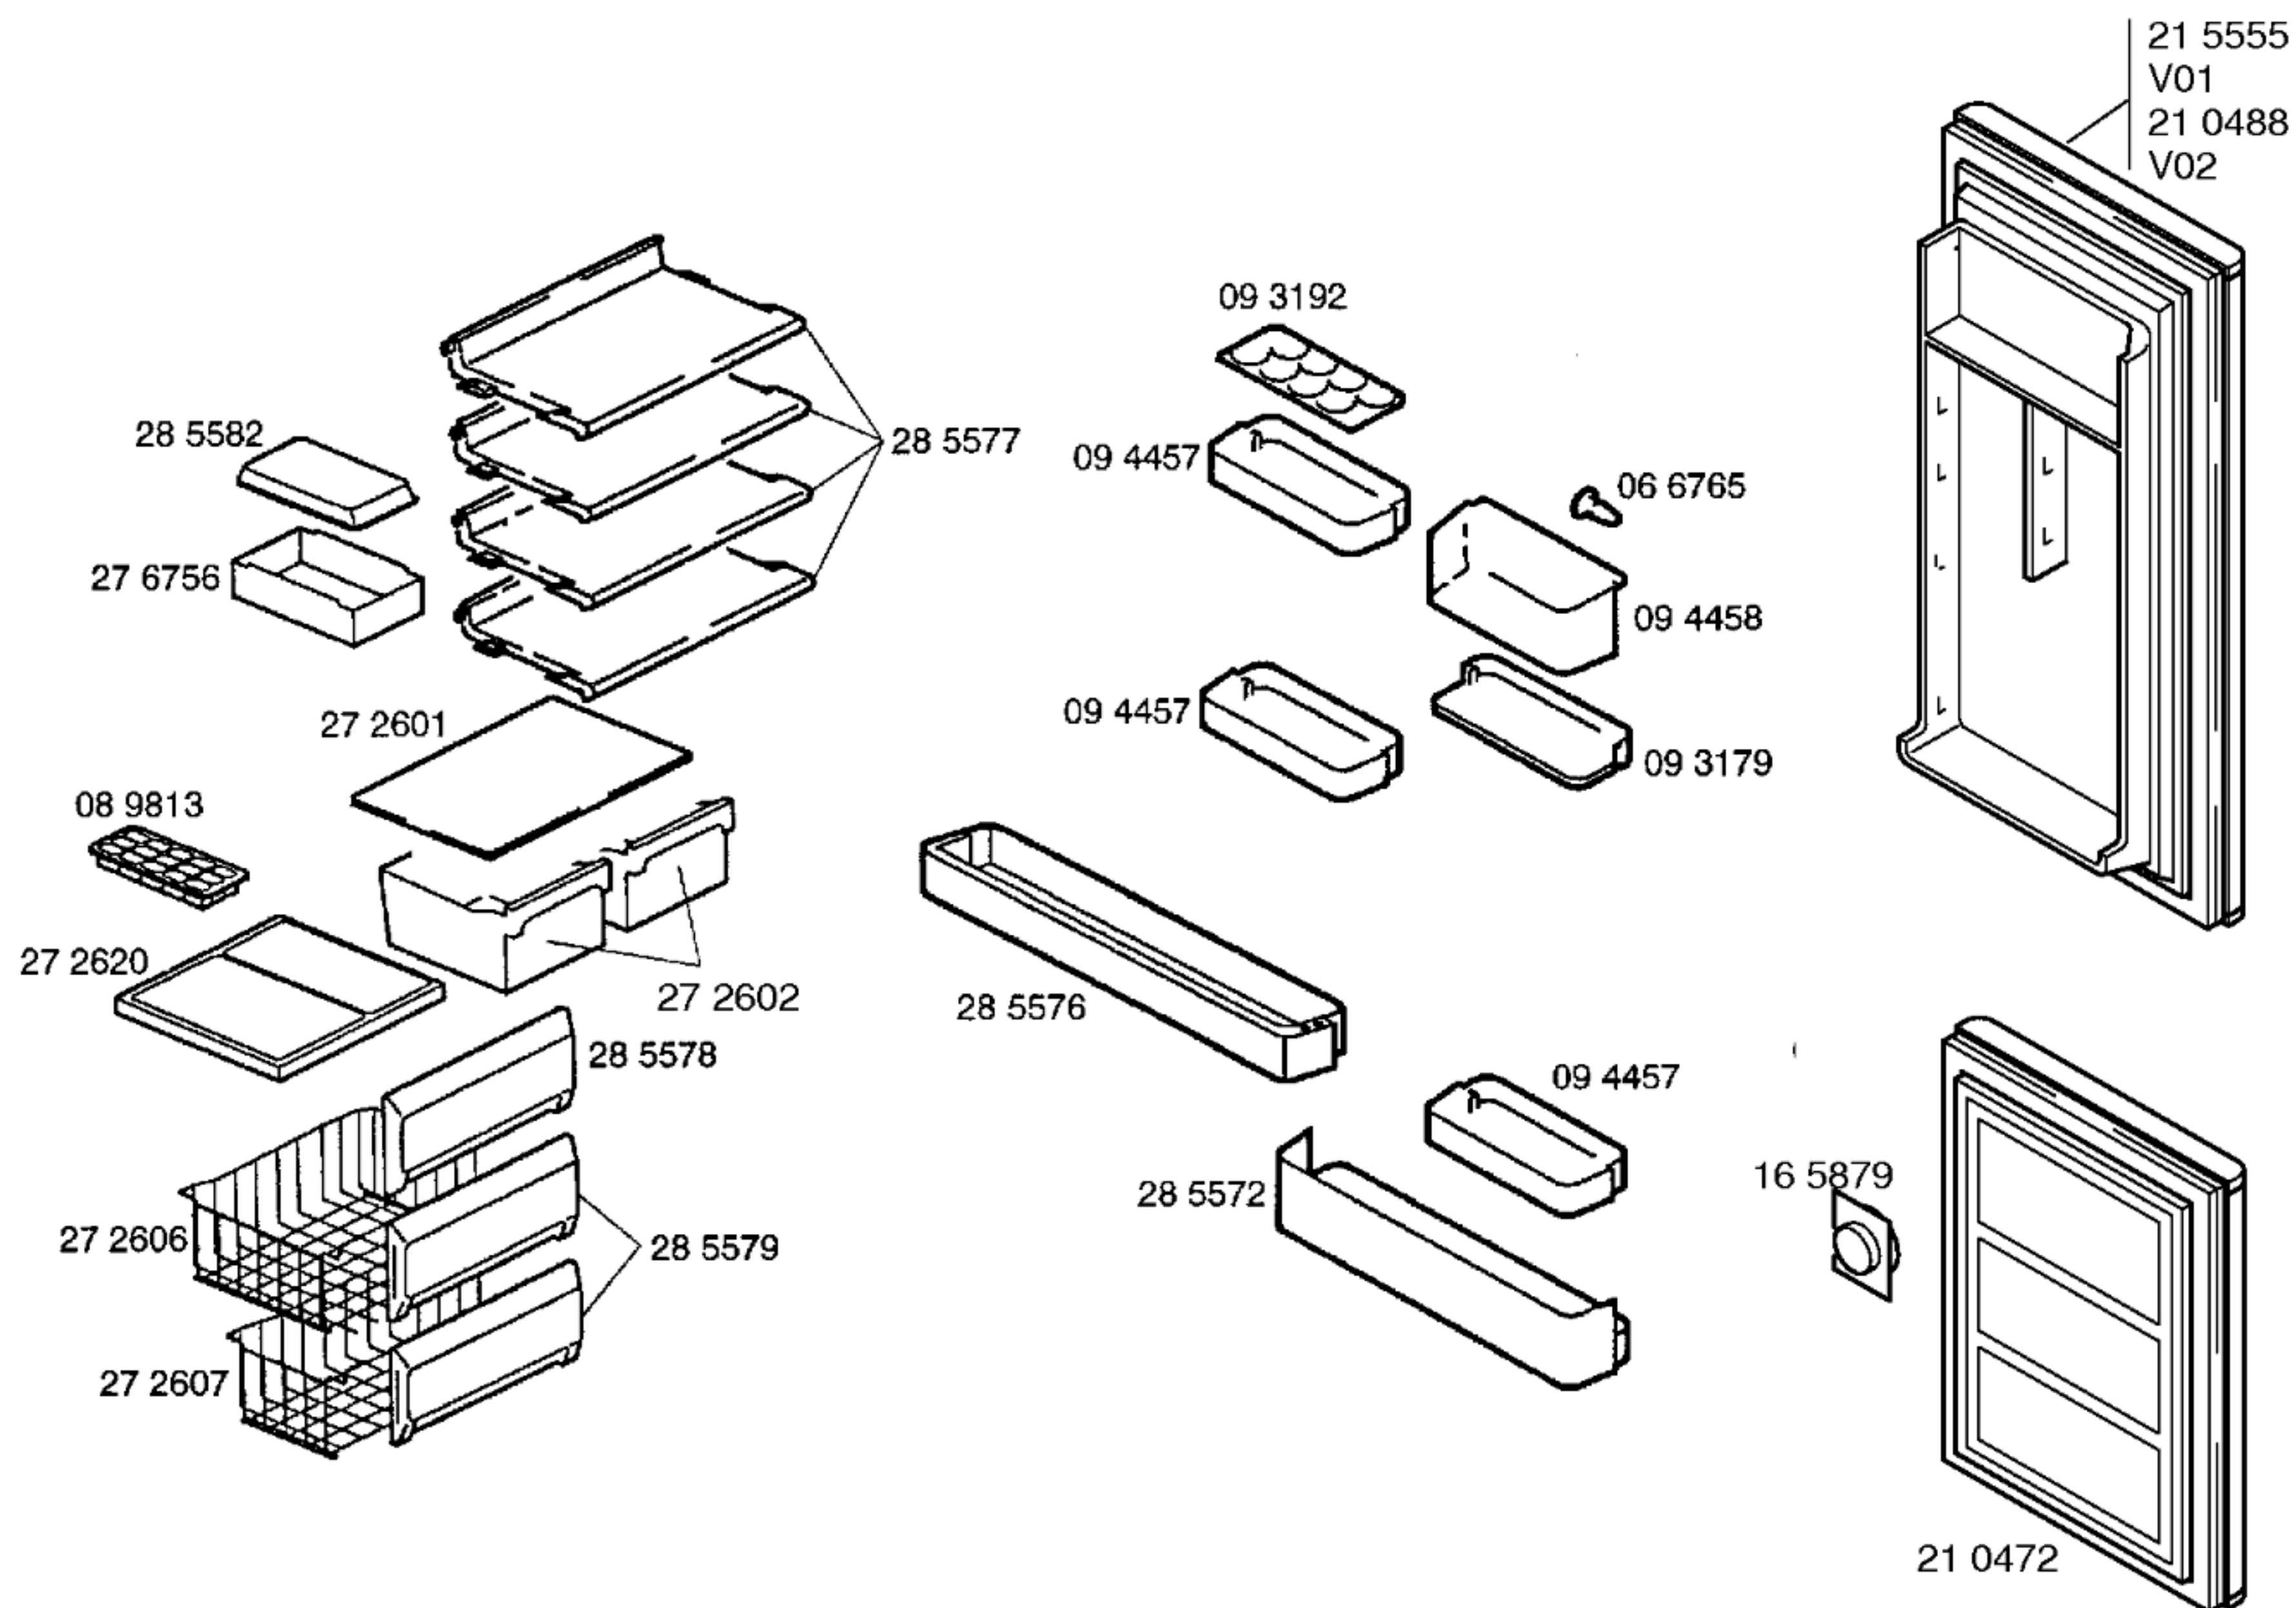

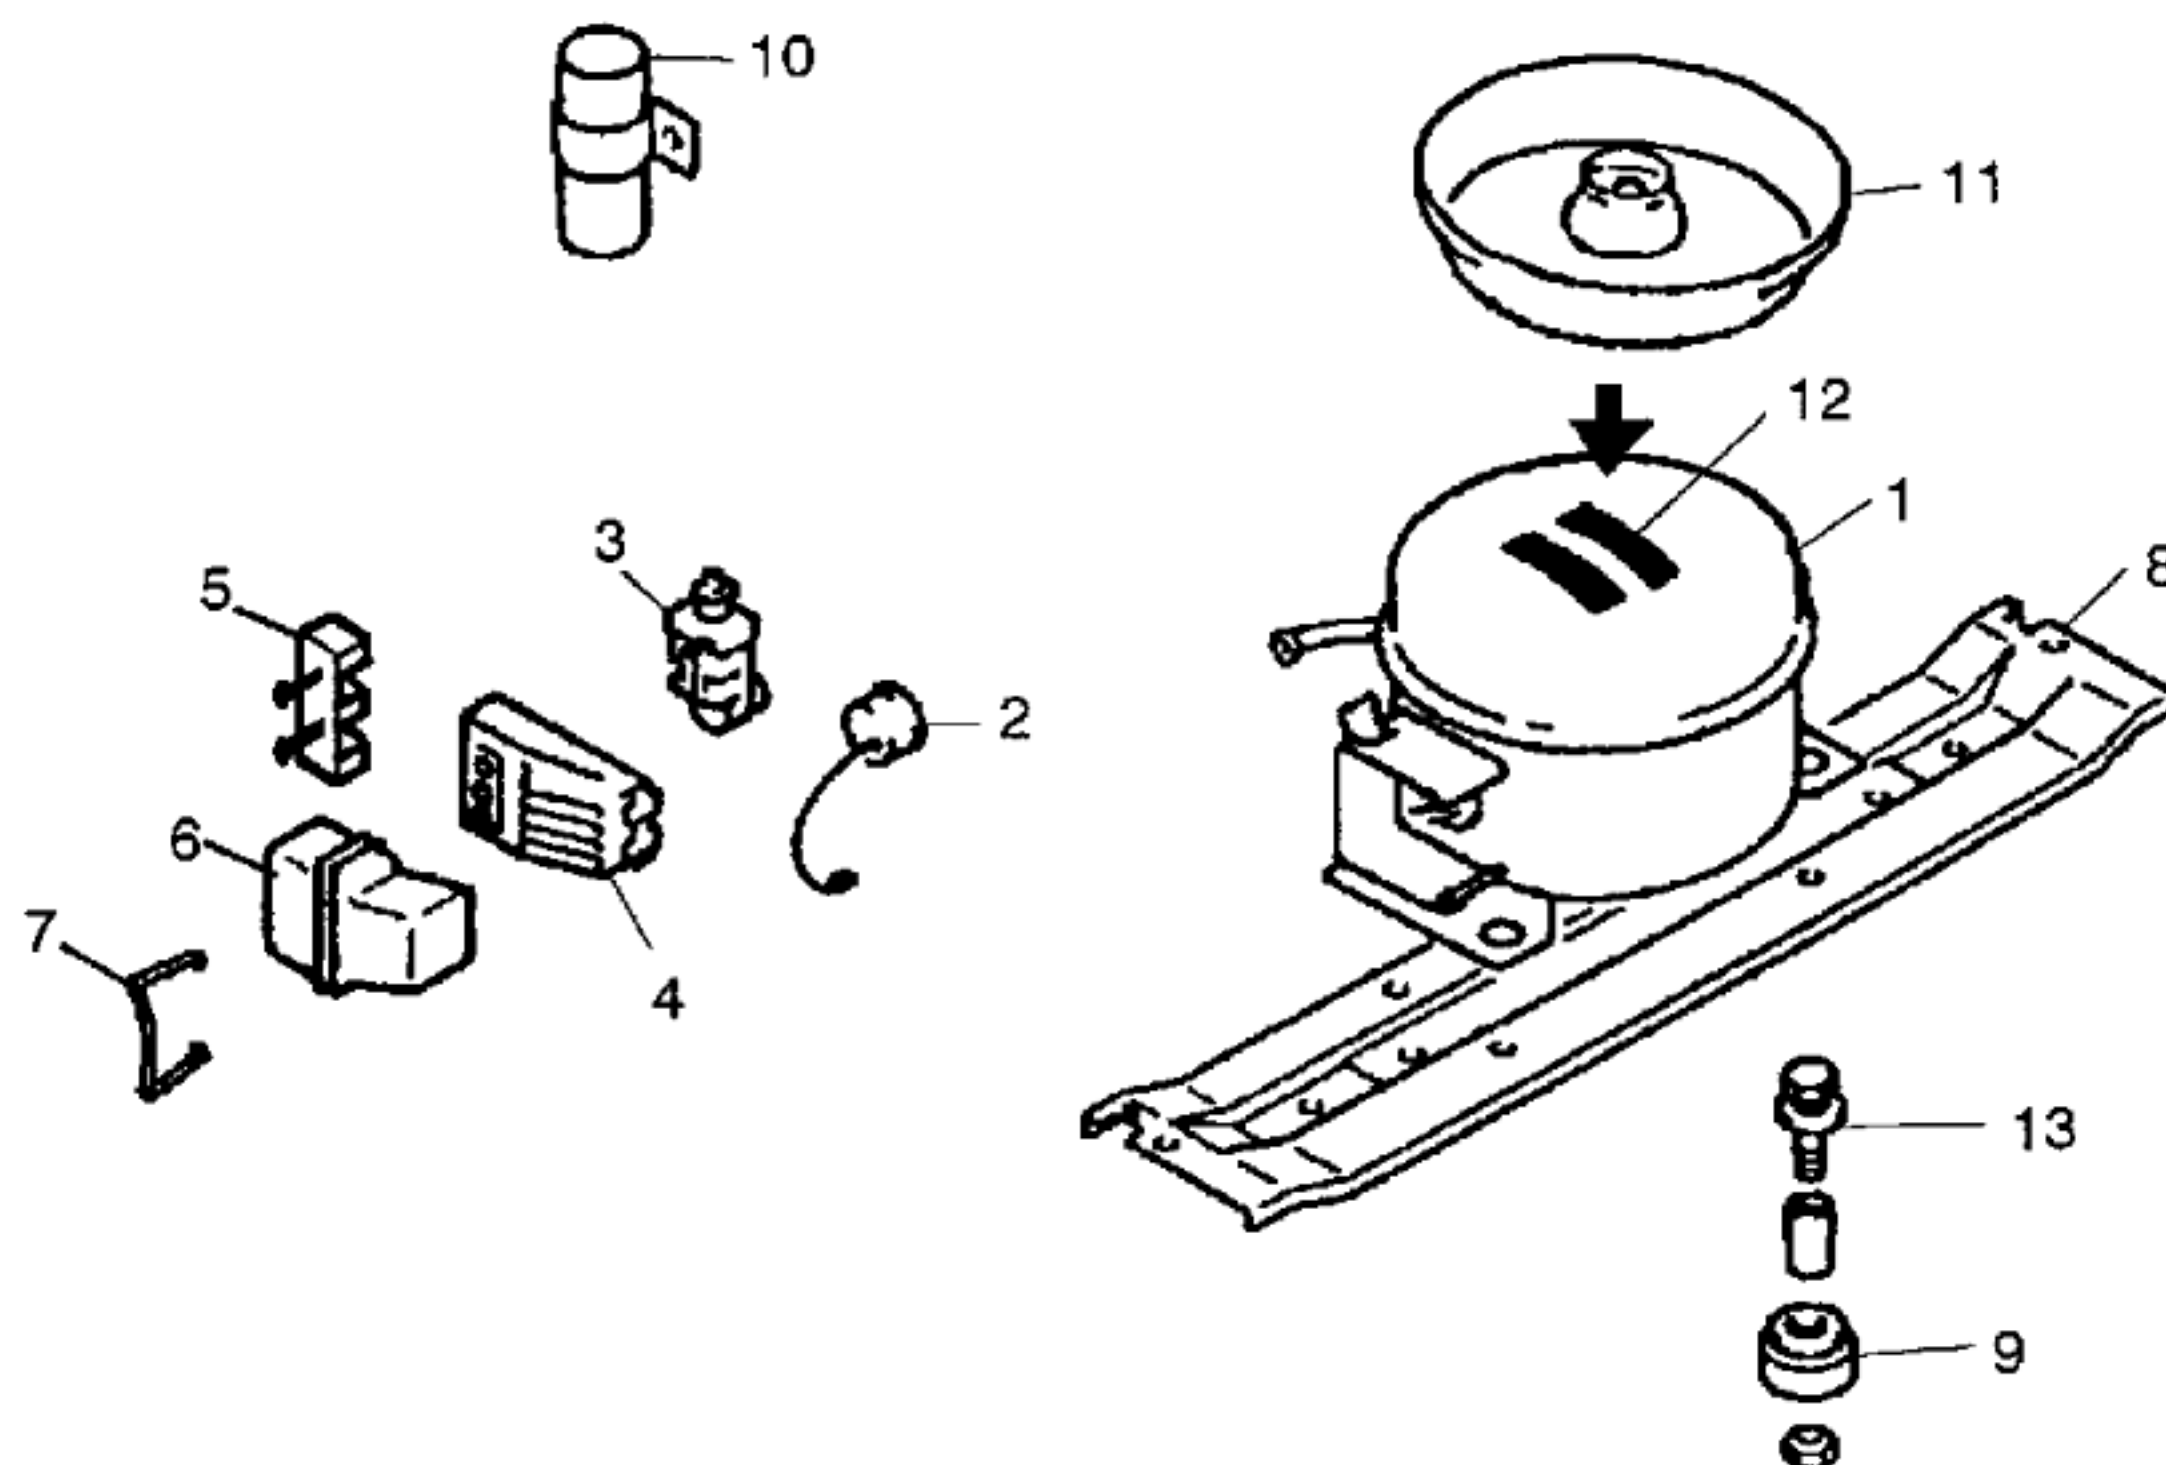

	REFRIGERADOR	CONGELADOR	
	MATSUSHITA	MATSUSHITA	
	SO 75 LKAA	SO 75 LKAA	
1	14 0582	14 0582	
2	06 4055	06 4055	
3			
4			
5			
6			
7			
8	28 0162		
9	06 4260		
10			
11	08 8868		
12			
13	06 4259		

TECHNISCHE DATEN/ TECHNICAL DATA/ DONNE ES TECHNIQUES/ DATOS TECNICOS

Verdichter/ Compressor/ Compresseur/ Compresor	MATSUSHITA	MATSUSHITA
Typ/ Type/ Tipo	SO 75 LKAA	SO 75 LKAA
Förderleistung/ Delivery/ Debit/ Aspiración	l/h	641
Anlaufstrom/ Starting current/ Cour. démarrage/ Int. arranque	A	5,69
Widerstand/ Resistance/ Resistencia. Ha/main/prin.	Ohm.	24,4
Hi/aux.	Ohm.	39,8

Temp. Reyler/ Thermostat/ Termostato	DANFOS	DANFOS
Typ/ Type/ Tipo	O77B6	O77B20
Reglerstellung/ Position/ Conexión	MIN. - MAX.	MIN. - MAX.
Schaltwerte/ Switching values/	..ein"/conex. °C	+ 6 °
Valeurs de commutation/ Desconex.	..aus"/descon.	- 19 ° - 25 °
(.. abtaven" od.)	..alarm"	- 28 ° - 35 °
		- 15 °

Füllmenge/ Fill. quantity/ Charge/ Carga	R12	g	V01	V02	V01,V02
			70	65	145

AnschluBwert/ Comm. load/ Puiss. Connect./ Potenc.	W	91	91
--	---	----	----

Heizung/ Heater/Chauflage/ Resistenc. descongel.		
Widerstand/ Resistance/ Resistencia	Ohm.	
Leistung/ Power/ Puissance/ Potencia	W	

Ventilator/ Blower/ Ventilateur/ Ventilador		
Widerstand/ Resistance/ Resistencia del ventilador	Ohm.	

Magnetventil/ Magnetic valve/ Electrovanne/ Electrovalvula		
Widerstand/ Resistance/ Resistencia	Ohm.	
Spannung/ Voltare/ Tension/ Tensión	V	

Temp. Reyler/ Thermostat/ Termostato ambiente para ventilador refrigerador.		
---	--	--